104-11 INSTALLATION INSTRUCTIONS



WARNING


DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

CAUTION

- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
- INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. DO NOT SEPARATE
 ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING. In regular circumstances the BLACK
 wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common" lead. A GREEN or BARE COPPER wire is the "Ground". In
 older buildings, it is always good practice to reconfirm the polarity of the wiring.
 - **NOTICE** The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and caring for this lighting fixture.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The
 box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. Directly mounting the
 fixture to the outlet box may make it impossible to correctly align the fixture.


FIXTURE PREPARATION

1. Remove the fixture and parts bag(s) from the carton.

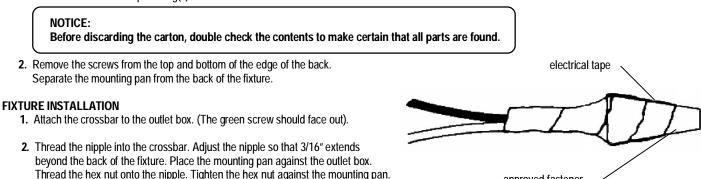

3. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the mounting ring.





4. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.



- 5. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 4.
- 6. Using the screws removed in Preparation Step 5, fasten the fixture to the mounting pan.
- 7. Starting at the bottom, remove the protective sheet from the mirrored back insert.

