




MILLBRIDGE 1 LT WALL SCONCE ASSEMBLY/INSTALLATION INSTRUCTIONS

1. Before beginning the installation, carefully unpack and identify all parts referring to Figure 1.
2. Turn electrical power to the installation point to OFF. Risk of Fire, Min. 75°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.
3. Thread NIPPLE A onto the CROSSBAR.
4. Using (2) JUNCTION BOX SCREWS, securely fasten the CROSSBAR to the JUNCTION BOX.
5. **MAKE CONNECTIONS:** (We recommend 2 people for the remainder of installation) Connect the SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE with a wire connector and secure them to the CROSSBAR with GREEN GROUND SCREW. Using wire Connectors, connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE(or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Wrap all connections with approved electrical tape.
6. Put the WALL PLATE over NIPPLE A and secure it with WALL PLATE LOCK NUT.
7. Install the GLASS SHADE. Hand tighten the GLASS LOCK BALLS into the side hole of WALL PLATE.
8. Put NIPPLE B through WASHER, bottom hole of WALL PLATE, bottom hole of GLASS and CUP. Secure them with FINAL.
9. Install the LIGHT BULB (Sold separately). Risk of fire, use MAX 60W Type C bulb only.
10. Restore electrical power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**

Customer Service: 1-800-558-8700

FIGURE 1.

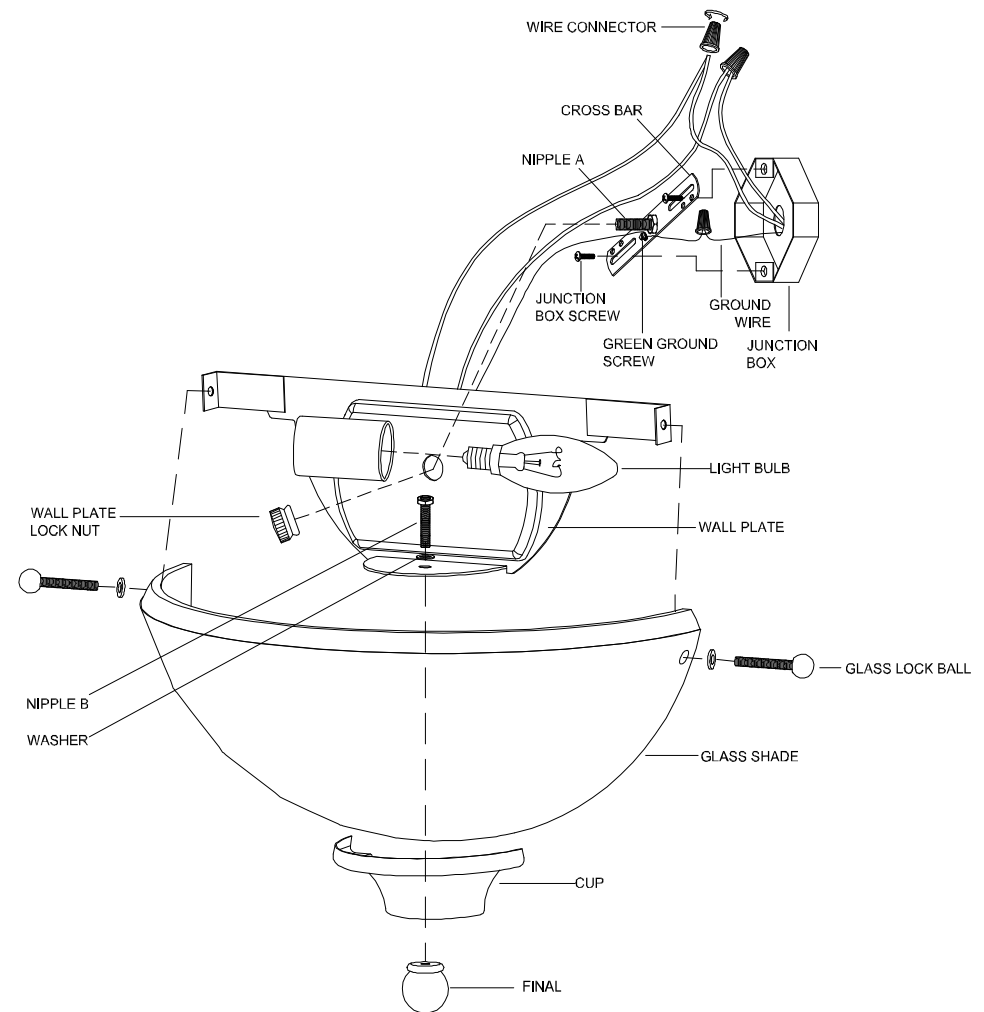

#511584, 514554