




Use a screw driver to install three Screw Anchors into the wall for each mounting plate. Install mounting plates on top of the Screw Anchors. Attach with the sheet metal screws provided.

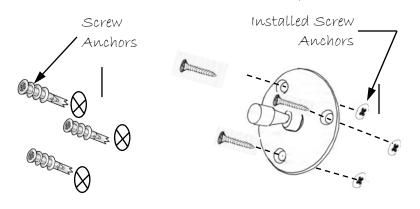

Mark three hole locations for each (2)mounting plate.

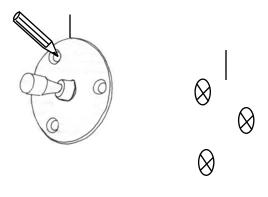

Slip trim plates and towel bar posts over the mounting plate stud. Tighten set screw at the base of each towel bar post with the allen wrench provided.

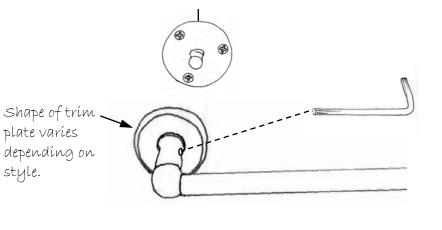

style.