




Contemporary Lighting

PRODUCT NAME: LARMES

ITEM NUMBER: E23111-18

Please consult your electrician for hanging fixture and wiring.

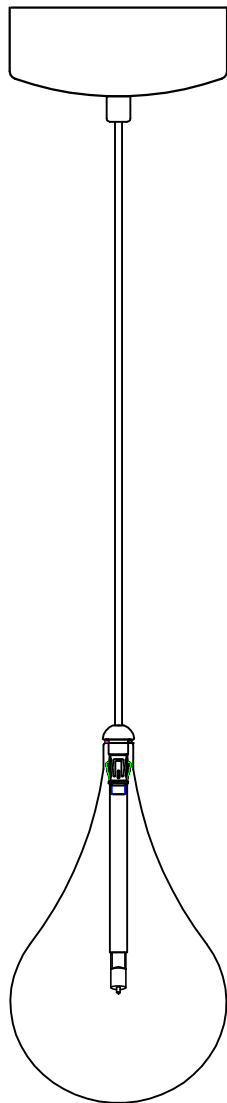


WARNING: Wires need to be connected to transformer found in canopy and should not be connected directly to power source or a short may occur



Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulbs (Included): 1 x 20 Watt G4


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

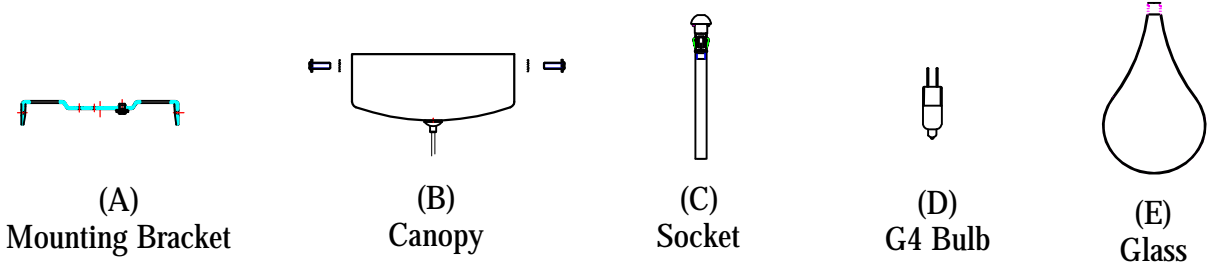


Locate all hardware & components before discarding packaging

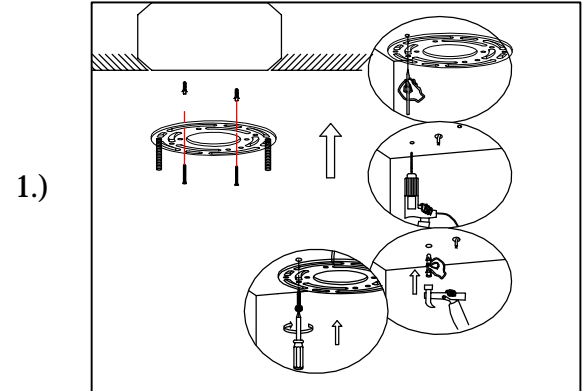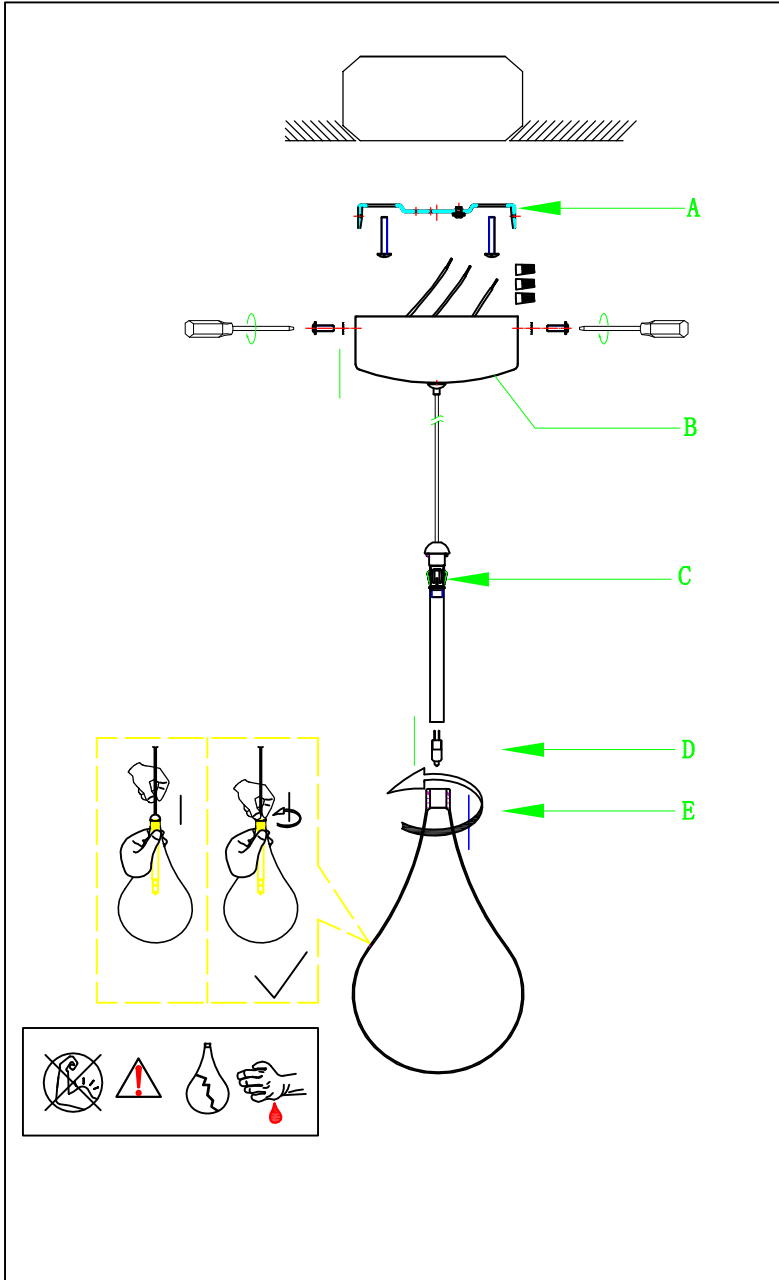

Step.1: Remove Mounting Bracket (A) from Canopy to install to electrical box

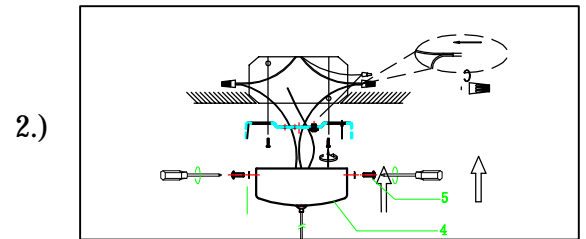

Step.2: Wire fixture to wires in outlet box. Green wire is for Ground. Secure canopy (B) to mounting bracket using screws on the sides of the canopy.

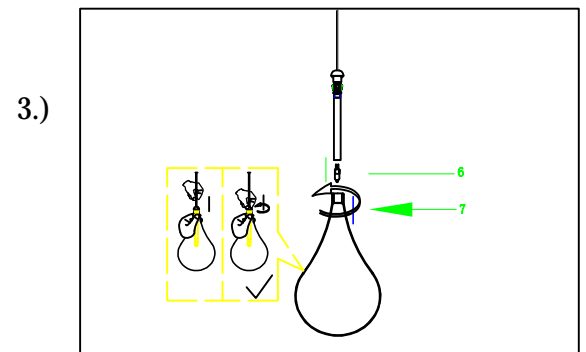

Step.3: Install G9 bulb (D) provided. Gently turn glass (E) onto socket to secure.

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.