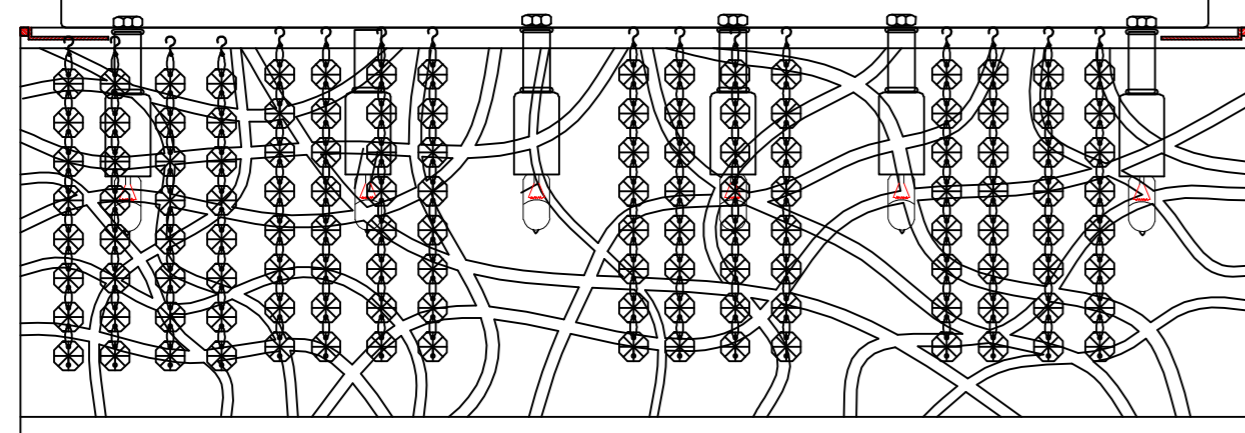


E2 Contemporary Lighting

PRODUCT NAME: Inca
ITEM NUMBER: E21300-10BZ

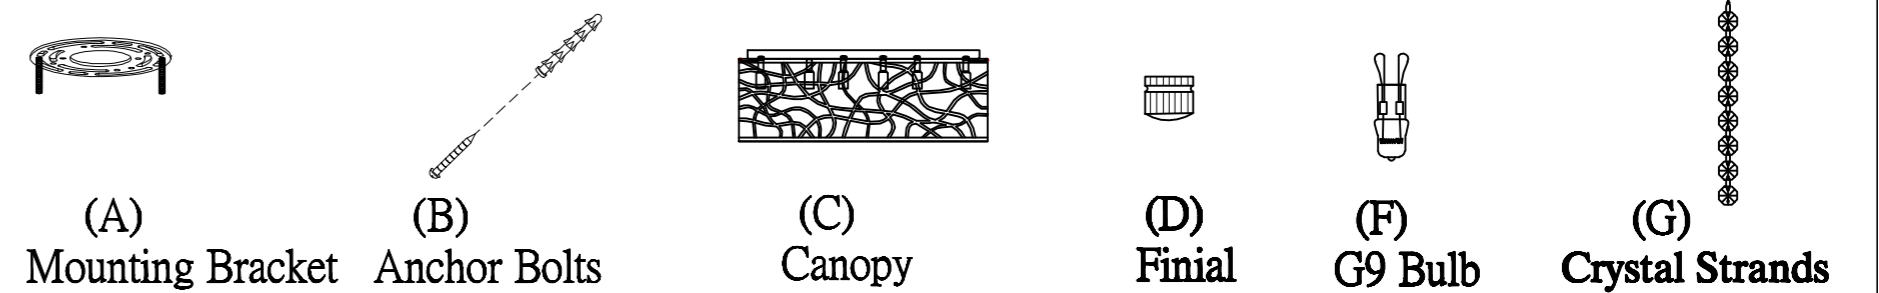
Please consult your electrician for hanging fixture and wiring.




Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulbs (Included): G9X40W





IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



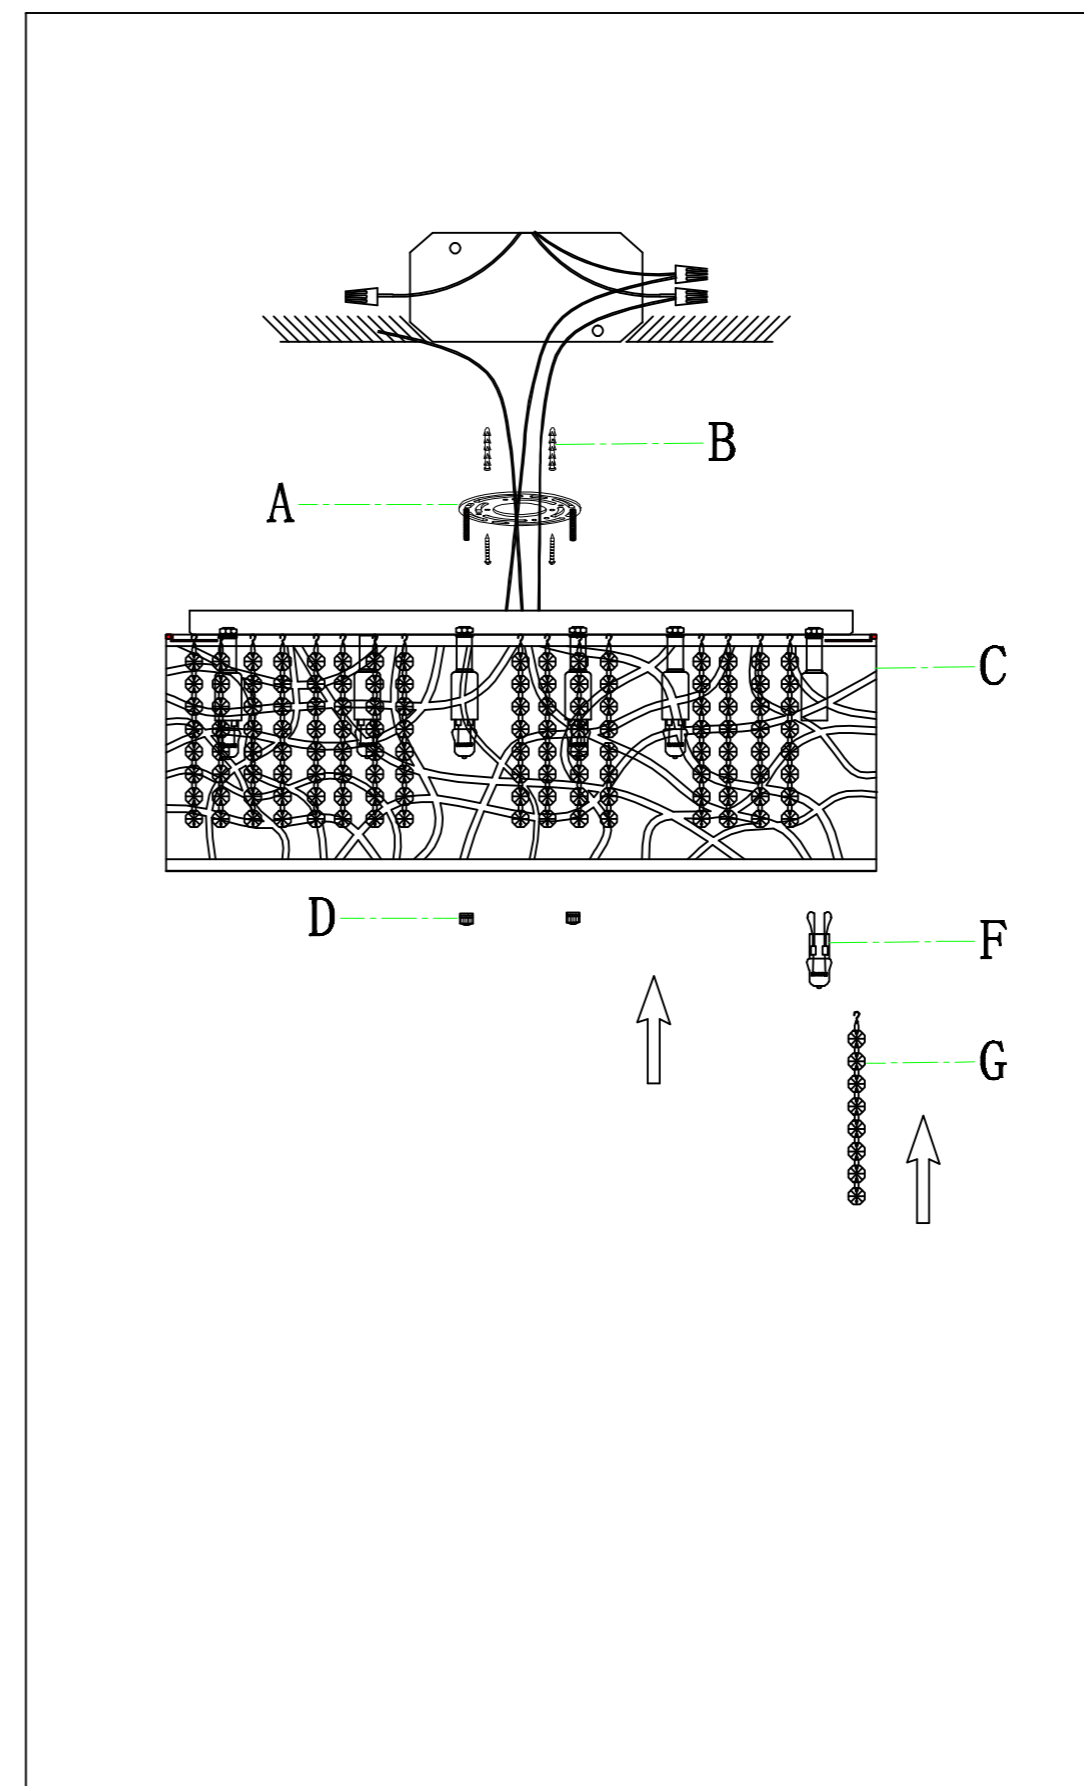Locate all hardware & components before discarding packaging



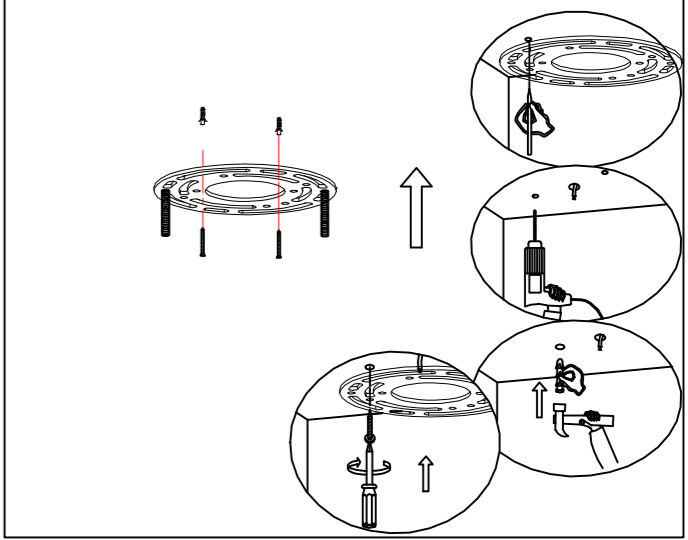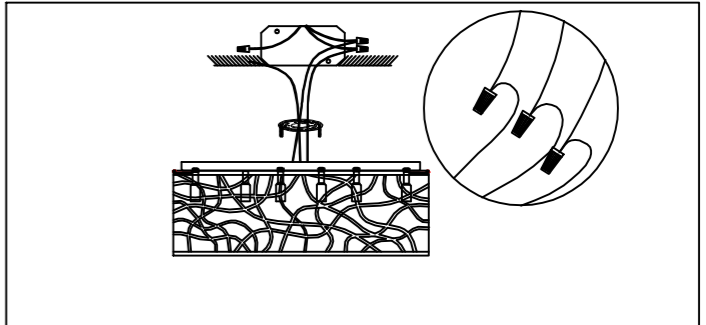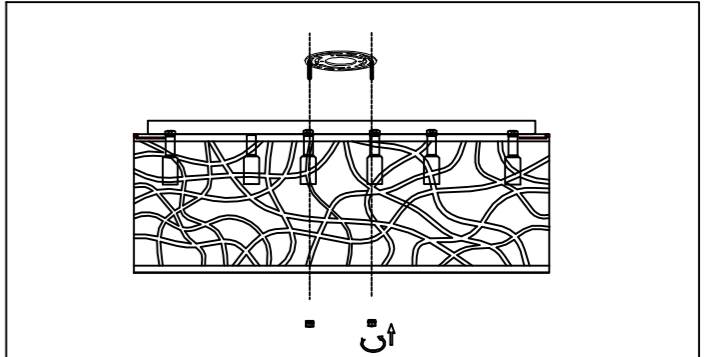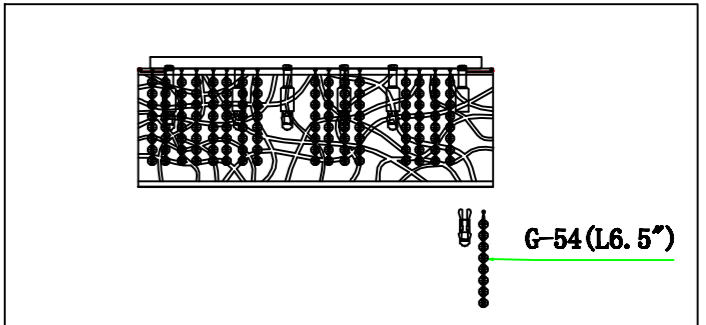Cleaning & Care:
 Clean with soft cloth and a mild detergent.
 Do not use abrasive cleaner.

- 1.) 
Step.1: Remove mounting bracket (A) from Canopy (C) to install to electrical box
- 2.) 
Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.
- 3.) 
Step.3: Screw finials (D) onto mounting bracket (A) until canopy is flush with ceiling..
- 4.) 
Step.4: Install G9 bulbs (F) and hang Crystal strands(G)