



FVN3136ACA-FS FORMOSA INSTALLATION GUIDE

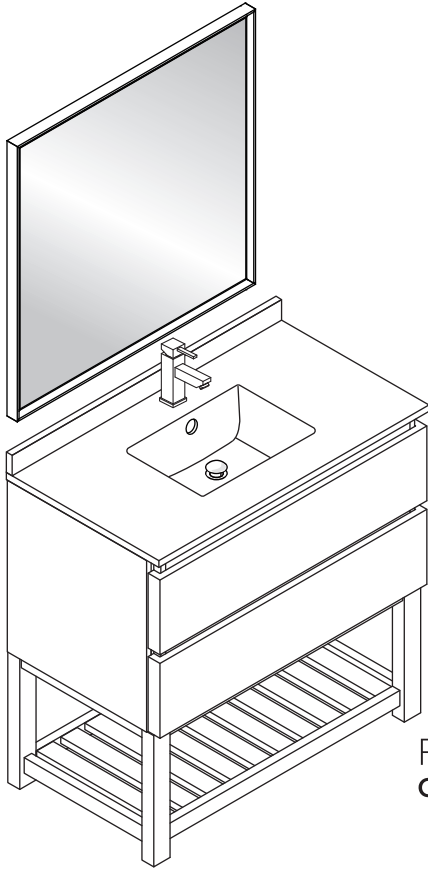


FVN3136ACA-FS
Vanity Front




FMR3132ACA
Mirror Front

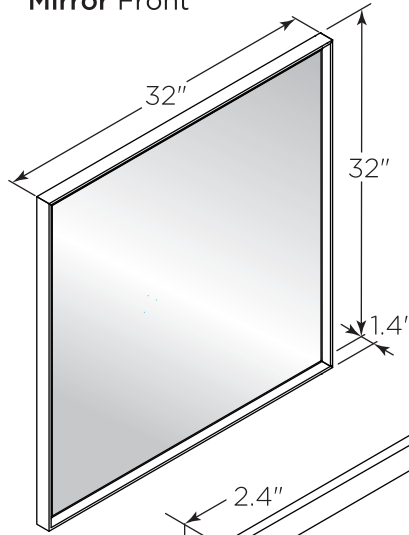


FCT2036WH-CMB
Mirror Front

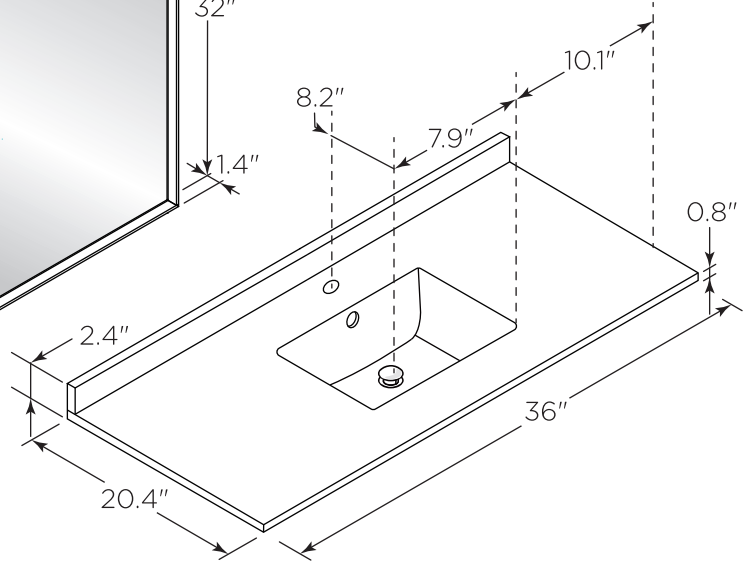


FCB3136ACA
Cabinet Front

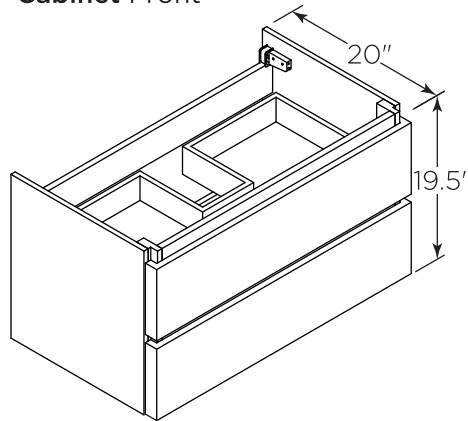


FCB3136ACA
Cabinet Back

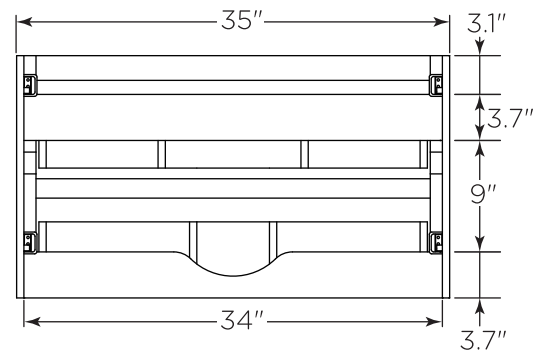

FSF3136ACA
Cabinet Front

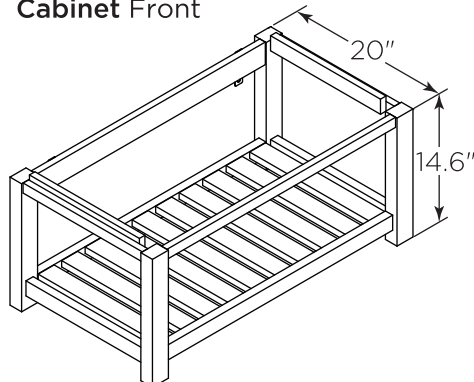

FSF3136ACA
Cabinet Back

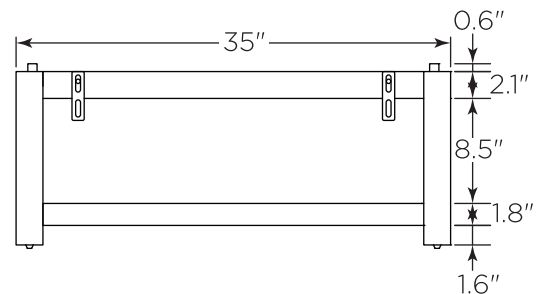

NOTE: All dimensions & specifications are approximate and subject to change without notice.