



# GENERAL INSTALLATION INSTRUCTION

## SHOWER BASKET

### PREPARATION

Tools Required for Assembly: (Not included)

- Pencil
- Electrical drill
- Masonry drill bit



- Philips head screwdriver
- Tape measure


- Level
- Safety glasses



**CAUTION:** Tile anchors are for tile surfaces only. Use drywall anchors for drywalls.

### INSTALLATION INSTRUCTIONS

1. Hold the shower basket up against desired position on wall, and mark the screw holes.  
Use a measuring tape and a level for accuracy.
2. Remove the shower basket and drill pilot holes into the tiles where the tile anchors will be inserted.
3. Insert tile anchors into the hole.
4. Place the shower basket over the tile anchors and place mounting kits in the order shown in **Fig.1**. Tighten screw, then tighten cap over the screw.

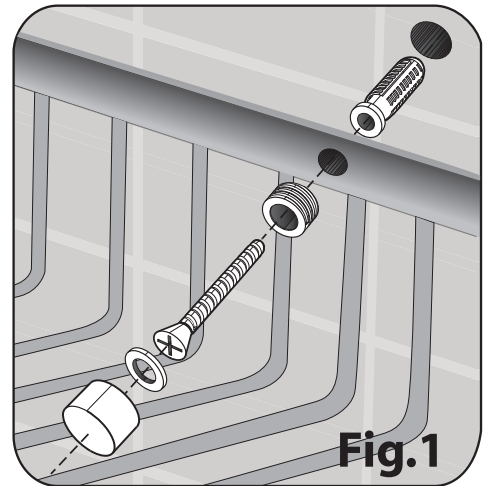

### CARE AND MAINTENANCE

To maintain the beautiful luster finish, please use soft damp cloths when cleaning and never use any cleaning solvents.