

## PARTS & ASSEMBLY SHEET

Fixture Name: Pemberley Court 1089-SF RSB

This fixture assembled PO:	Date: _	
----------------------------	---------	--

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

DADTELL	Company Name:		Co. Account #:		
PARTS LI	.51	to be filled out by re	etailer		
Mounting strap (circular)		Wire connectors		Deco nut	
1ea @4"		4ea P4 Orange		2ea 10x 9.5mm	
Canopy		Junction box screw	(	Top loop	
1ea @5-1/2"X1-1/4"		2ea 8/32" x 1"		1ea @3/8 x 65mm	( <u>C</u> )
Chain		Mounting screw	(	Canopy loop with Collar	
1ea 6ft x4.2mm		2ea 8/32" x 1-1/4"		1ea @3/8 x 40mm	x 5mm
Chain connector		Hex nut		Nipple	
2ea @3X38mm		2ea/1ea @3/8 x 3mm.	/ @3/8 x 5mm	1ea @3/8 x 55mm	
Mounting strap w/ground screw		Screw			
1ea 3/4"X4"		2ea @8/32" x 8mm			
Dort Noodod				Quantity	
Part Needed Part Needed				Quantity Quantity	
Reason why	(missing scratch	ed, broken glass, be	ant had finish)	_ Quantity_	
Comments	(missing, sciator	ieu, biokeii giass, be	ant, bau iiiisii)		

#### FIXTURE ASSEMBLY INSTRUCTIONS


Read and review installation instruction sheet before assembling the fixture.

#### ASSEMBLING THE FIXTURE as Semi flush (Fig. 1)

- 1. Thread the Stem With Hex Nut (N) into the bottom coupling of the Frame (M) until tight.
- 2. Install the light bulbs in accordance with the fixture's specifications.
- 3. Slide the Flat Washer (O), Rubber Washer (P), Glass shade (Q), Rubber Washer (P) and Flat Washer (O) over the Stem With Hex Nut (N), secure in place with the Hex nut (R). Slide the Bottom cap (S) over the Stem With Hex Nut (N), secure in place with the Finial (T).

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

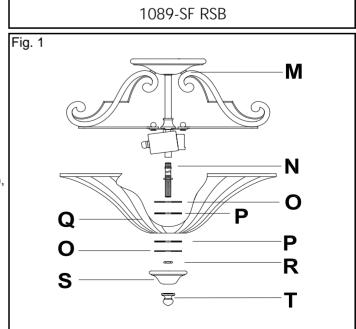

For Customer Service, contact the place of purchase to arrange for replacement parts.

## PARTS & ASSEMBLY SHEET

Fixture Name: Pemberley Court 1089-SF RSB


#### ASSEMBLING THE FIXTURE as Chain hung (Fig.2)

- 1. Remove the Circular strap from top of Fixture and replace the long mounting screws with two short screws to hold the Deco nuts (E) in place on the fixture top cap (M).
- 2. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
- 3. Then screw the Top Loop (J) to the threaded center column of Frame (M) until tight.
- 4. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 5. Use one chain connector (L) to attach one end of the chain to the Top loop (J) and close the chain connector.
- 6. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 7. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 8. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 9. Make sure the weight of the chandelier will be supported by the chain-not the electrical wire.
  - \* You may now install the fixture.

Note: Complete these remaining steps after the fixture is hung.

- 11. Thread the Stem With Hex Nut (N) into the bottom coupling of the Frame (M) until tight.
- 12. Slide the Flat Washer (O), Rubber Washer (P), Glass shade (Q), Rubber Washer (P) and Flat Washer (O) over the Stem With Hex Nut (N), secure in place with the Hex nut (R). Slide the Bottom cap (S) over the Stem With Hex Nut (N), secure in place with the Finial (T).
- 13. Install the light bulbs in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

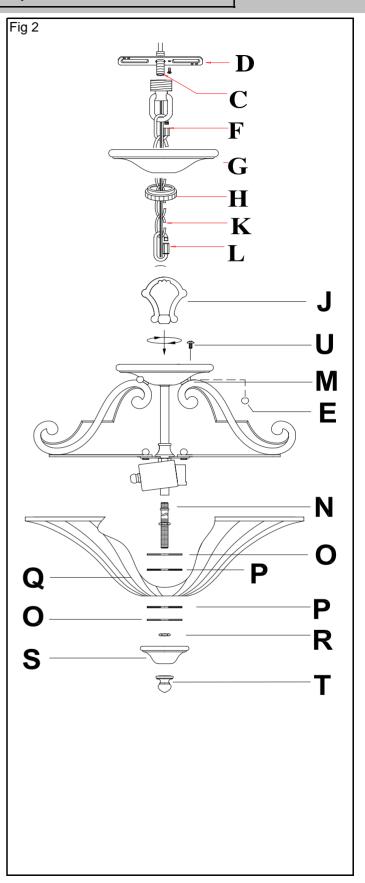

For Customer Service, contact the place of purchase to arrange for replacement parts.



### INSTALLATION INSTRUCTIONS

Fixture Name: Pemberley Court 1089-SF RSB

For Semi Flush / Convertible Light Fixture

#### WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

#### HANGING THE FIXTURE as Semi flush (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
- 3. The Circular Strap (B) contains several pairs of threaded holes, find the pair of holes that match the hole spacing in your fixture Canopy (F) and thread the two Mounting Screws (A) half way into the Mounting Strap (A) facing down, Secure in place with hex nuts. These will have their threaded ends protrude through the two holes in the fixture canopy(F).
- 4. Place the Mounting Strap (B) over the junction box.
- 5. Attach the Mounting Strap (B) to the Junction Box using the two mounting screws (C). Tighten the screws (C) securely with screw driver.

#### CONNECTING THE WIRES (Fig. 2)

- 6. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 7. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (B) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.


8. Tuck these wire connections neatly into the Junction Box.


#### FINISHING THE INSALLATION (Fig.3)

9. Place the fixture's Canopy (F) over the Mounting Strap (B) and over the Mounting Screws (A), adjust the fixture Canopy until the Mounting Screws (A) protrude out from the canopy (D) and secure the fixture against the ceiling by threading the decorative nuts on (E) until tight.
10. Install the light bulbs and glass shade as per the fixture assembly sheet.

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

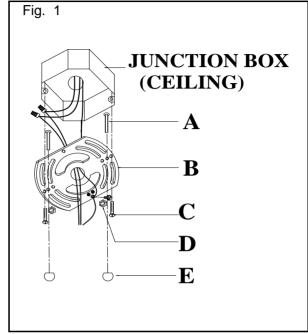

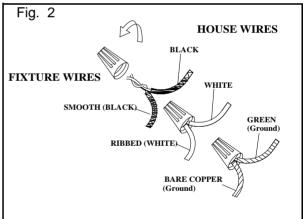

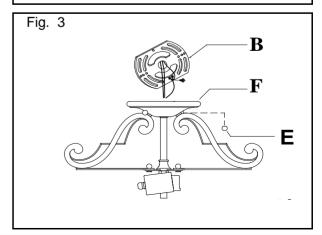

# GOLDEN Z legant lighting for everydag living

## INSTALLATION INSTRUCTIONS

Fixture Name: Pemberley Court 1089-SF RSB

For Chandelier Light Fixture

#### WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

#### **HANGING THE FIXTURE (Fig. 1)**


- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple (C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar (H )from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. \*the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


#### CONNECTING THE WIRES (Fig. 2)

- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.

NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

- 12. Tuck these wire connections neatly into the Junction Box.
- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) into the Canopy Loop (F).
- 14. Install the light bulbs and shade as per the fixture assembly sheet.

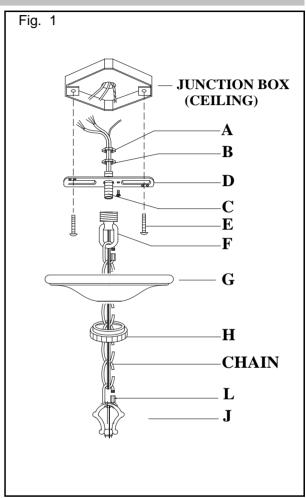

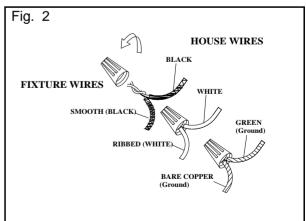

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.