



206 X 130(mm)




3114 and 3214 Double IC Cylinder Tailpiece Installation Instructions

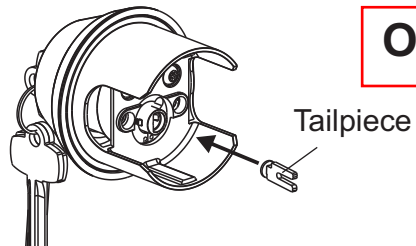


Outside Deadbolt

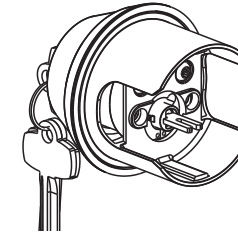

Load the tailpiece in the vertical direction and turn 90 degrees to horizontal position.

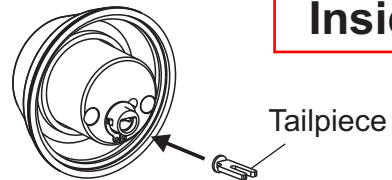

Inside Deadbolt

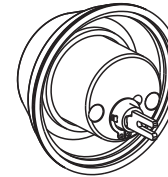

Load the tailpiece in the horizontal direction and turn 90 degrees to vertical position.