


## **INSTALLATION/ RETRO FIT STEPS**

- 1. IF REPLACING AN EXISTING EYEWASH ASSEMBLY WITH SP65 FOLLOW STEPS 2 THROUGH 5 IF INSTALLING SP65 ON NEW UNIT FOLLOW STEPS 3 THROUGH 5  $\,$ NOTE: SP65 COMES ASSEMBLED AS AN EYE/FACE WASH.
- 2 REMOVE EXISTING EYEWASH BY SPINNING EYEWASH TEE COUNTER CLOCKWISE. DO NOT REMOVE BRASS NIPPLE FROM BOWL HOLDER.
- 3 PLACE SP65 ADAPTER THROUGH DUST COVER LOOP. THREAD SP65 ADAPTER ONTO BRASS NIPPLE UNTIL SNUG AGAINST STRAINER.
- [4] THREAD SP65 ONTO ADAPTER. ORIENT TAB TOWARDS THE BACK (AWAY FROM USER). DO NOT OVER-TIGHTEN.
- [5] PLACE DUST COVER ONTO EYE/FACE WASH

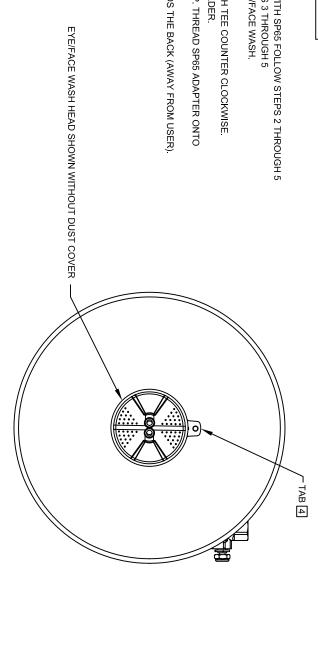

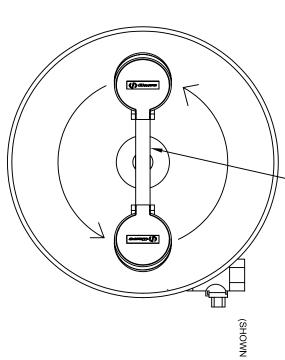

-EXISTING EYE OR EYE/FACE WASH ASSEMBLY 2

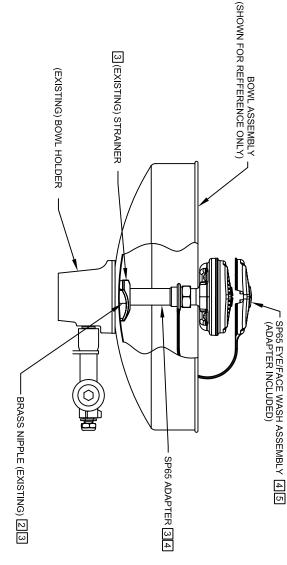

<sup>o.</sup> 15342A00

SEE SHEET 2 OF 2 **CLEANING STEPS** FOR FLOW CONTROL

©2010 Haws Corporation - All Rights Reserved

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM WEBSITE: WWW.HAWSCO.COM

1207<u>7031</u>

SP65 AXION EYE/FACE WASH

