


Family: Rowe Park | Item No. 2131 PZ

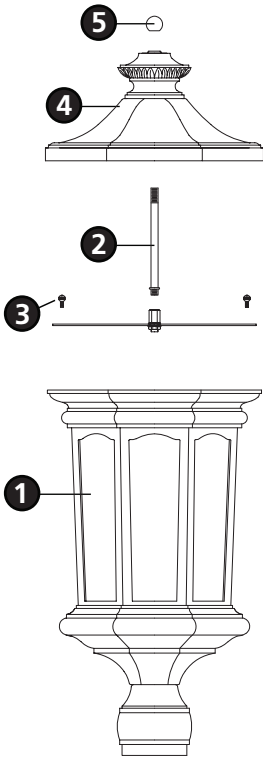

Drawing 1 - Fixture Assembly



▼ start here

1

1. Find a clear area in which you can work.
2. Unpack fixture and glass from carton.
3. Carefully review instructions prior to assembly.

***** The construction of this fixture will be accomplished by first completing the assembly of the fixture, mounting the mounting strap to the junction box and then mounting the fixture.**

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.

2

1. Mount center bar / stem (2) onto top of cage (1), using the ball knobs (3).
2. Slip roof (4) onto center bar / stem (2).
3. Thread top knob (5) onto end of center bar / stem (2) and tighten.

3

Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections. Then refer back to this page to continue installation of this fixture.

4

1. Slip post fitter (A) over post. Make sure all wiring is tucked inside the post. This will prevent wiring from getting pinched between the inside of the post fitter and the post.
2. Drill 3 - 1/16" diameter holes into pole, using holes in post fitter as guide.
3. Screw in the sheet metal screws (B) provided.

Note: Maximum wattage for 2131 fixture is 100 watts per bulb.

10.16.09

Drawing 2 - Fixture Mounting

