


DOOR STOP

USE TO PREVENT DAMAGE TO WALLS AND DOORS.
SHOCK-ABSORBING RUBBER TIP.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Awl and adjustable wrench.

1. Mark desired position with awl
2. Cover stop with cloth to protect finish. Screw stop securely to wall/ baseboard with adjustable wrench.

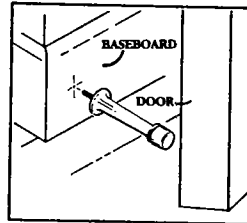

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



DOOR STOP C61 MB3 BRT

MADE IN U.S.A.