


PUSH PLATE

FOR USE ON SWINGING DOORS. PREVENTS MARRING OF DOOR SURFACE. IDEAL FOR COVERING HOLES, ETC. MADE BY PREVIOUS LOCKS.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 7/64" drill bit, Phillips screwdriver and pencil.

1. Position plate 3/4" from edge of door and approximately 50" from bottom of door to center of plate.
2. Mark, drill and secure.

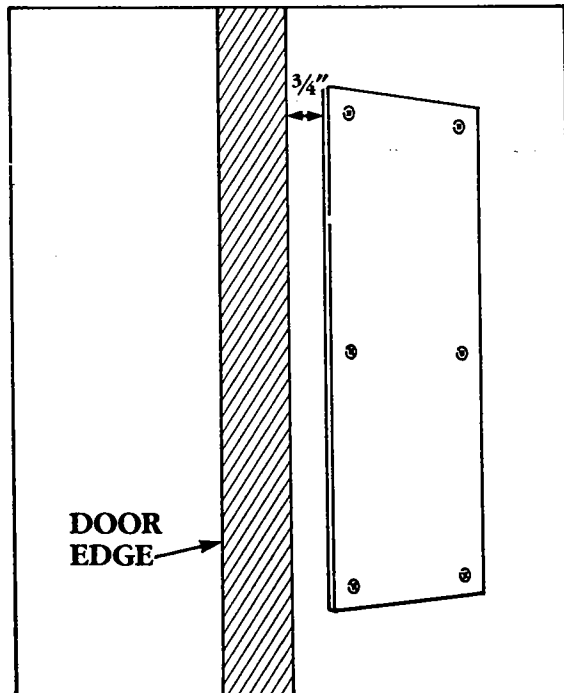

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



DOOR
HOLDERS



DOOR
STOPS



DOOR
PULLS



PULL
PLATES