


JADO	Wall Mo Instal To ensure that read these ins	
Products	Luxury	
Classic/ Victorian Product Numbers Robe Hook 508/010/ Towel Ring 6" 508/150/	đ	
Towel Ring 8" 508/200/		
Towel Bar 11-13/16" 508/300/ Towel Bar 18-1/8" 508/460/ Towel Bar 23-5/8" 508/600/ Towel Bar 31-1/2" 508/800/		
Tissue Holder (hooded) 508/145/ 2 Post Tissue Holder 508/146/		
Tumbler Clear 508/161/		
Soap Dish Clear 508/171/	Ca	
Shelf 24" Clear 508/612/		
Toilet Brush Set Wall Mounted 508/911/	2	
JADO USA 7845 East Paradise Lane Scottsdale, AZ 85260 Phone:(800) 227-2734 Fax: (800) 552-JADO(5236) www.jadousa.com		

©JADO USA 2003



Faucets and Accessories



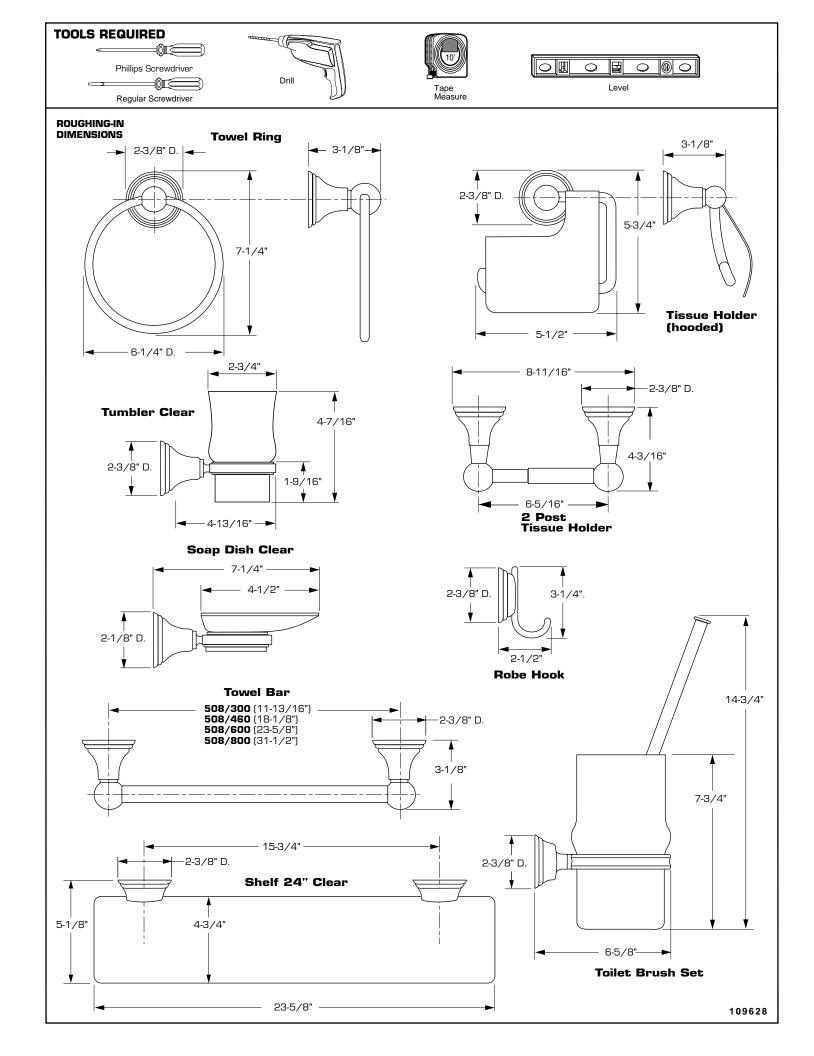

INSTALL WALL BRACKET


- Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (4) flush with face of the finished wall.
- Secure MOUNTING PLATE (3) to wall with SCREWS (2).

INSTALL ACCESSORY


9

Install WALL MOUNTED ACCESSORY (1) onto installed MOUNTING PLATE (3). Push WALL MOUNTED ACCESSORY (1) flush against finished wall and tighten SET SCREW (5) with HEX WRENCH (6) to secure to wall.

Note; WALL BRACKET (3) may vary from one illustrated. Mounting and installation is typical for all wall brackets.

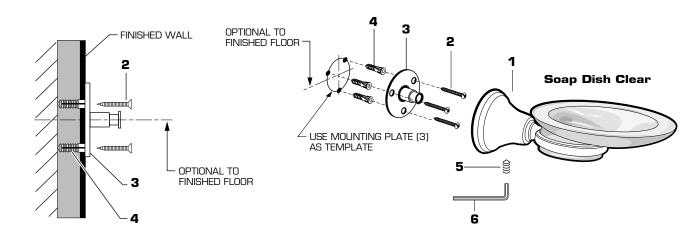

Note: Installation is typical for all wall mounted accessories.

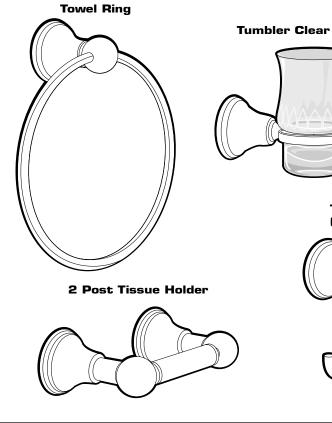

The wall mounted accessories (1) work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.

■ If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (4) and SCREWS (2) should be used.

Determine desired height and location (optional) and mark a center line. Using the MOUNTING PLATE (3) as a template mark the two spots for the ANCHORS (4). If MOUNTING PLATE (3) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).

For installations on drywall or tiled walls: Use ANCHORS (4) and SCREWS (2) for securing MOUNTING PLATE (3) to finished wall.

Robe Hook Toilet Brush Set Tissue Holder (hooded)