

STEM MOUNT INSTALLATION INSTRUCTIONS


- 1) Pass wire from fixture through stem and screw stem to top of fixture. **IMPORTANT:** At least one 12" stem must be used. **NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol (⚡) to prevent accidental rotation of fixture during cleaning, relamping, etc.
- 2) Pass fixture wire through remaining stems and screw stems together.
- 3) Attach small loop to end of last stem.
- 4) Thread decorative spacer onto threaded pipe on canopy.
- 5) Thread second loop onto end of threaded pipe on canopy.
- 6) **TURN OFF POWER.**

- IMPORTANT:** Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
- a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 - b) Unscrew the fuse(s), or switch "OFF" the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
 - c) Place the wall switch in the "OFF" position. If the fixture to be replaced has a switch or pull chain, place those in the "OFF" position.
- 7) Find the appropriate threaded holes on mounting strap. Assemble mounting screws into threaded holes.
 - 8) Attach mounting strap to outlet box. (Screws not provided). Mounting strap can be adjusted to suit position of fixture.
 - 9) Grounding instructions: (See Illus. A or B).

A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.

B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps. Never connect ground wire to black or white power

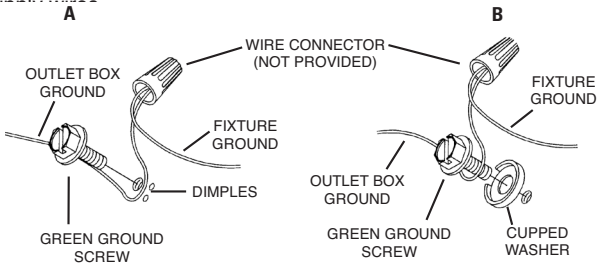

- 10) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 11) Push fixture to ceiling, carefully passing mounting screws through holes in canopy.
- 12) Secure fixture to ceiling with knurl knobs.
- 13) Attach large center finial to bottom center of fixture body.
- 14) Attach small finials to bottom of arms.
- 15) Set glass then spacer down over socket.
- 16) Thread socket ring onto socket. Tighten socket ring to secure glass in place. (DO NOT over tighten.)


SEMI FLUSH INSTALLATION INSTRUCTIONS

- 1) Pass wire from fixture through stem and screw stem to top of fixture. **IMPORTANT:** At least one 12" stem must be used. **NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol (⚡) to prevent accidental rotation of fixture during cleaning, relamping, etc.
- 2) Thread decorative spacer onto threaded pipe on canopy.
- 3) Screw threaded pipe on canopy onto end of last stem.
- 4) Follow steps #6-16 in Stem Mounted Instructions above.

STEM MOUNT INSTALLATION

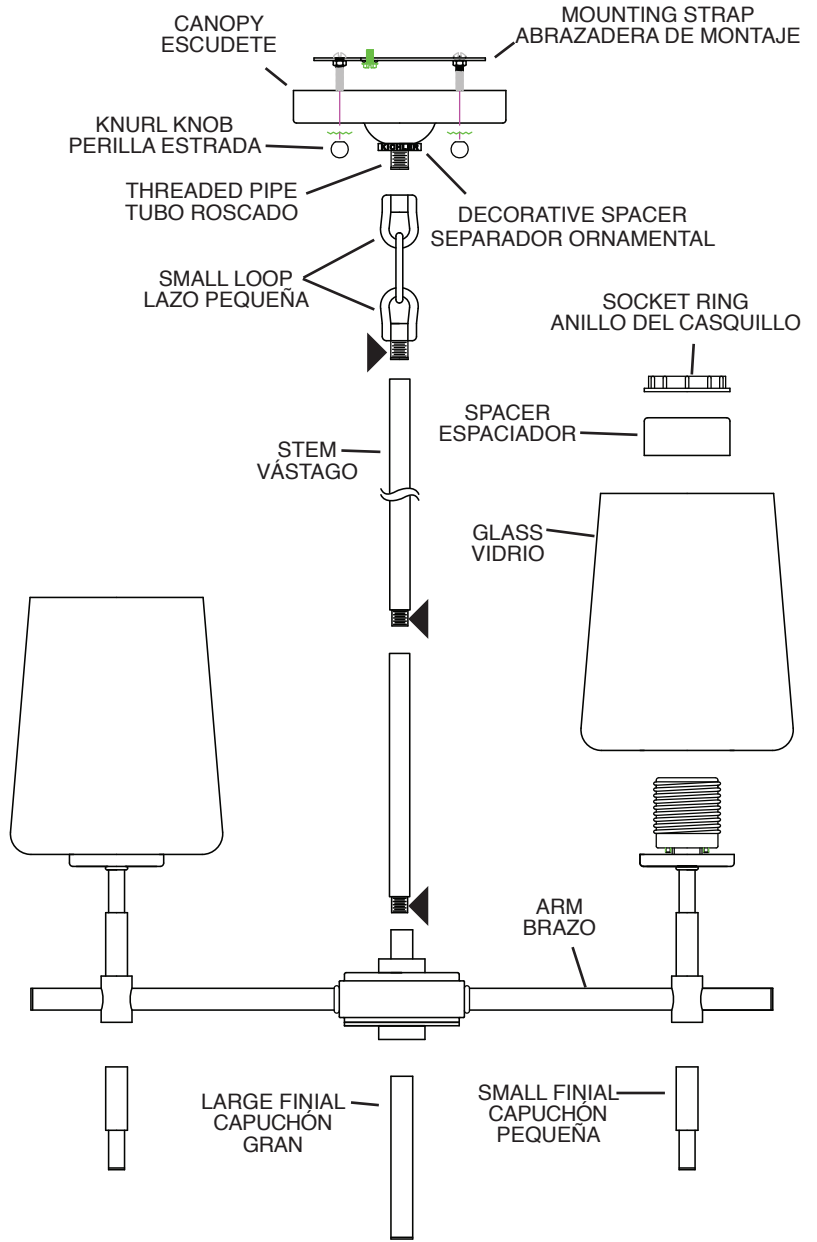

SEMI FLUSH INSTALLATION

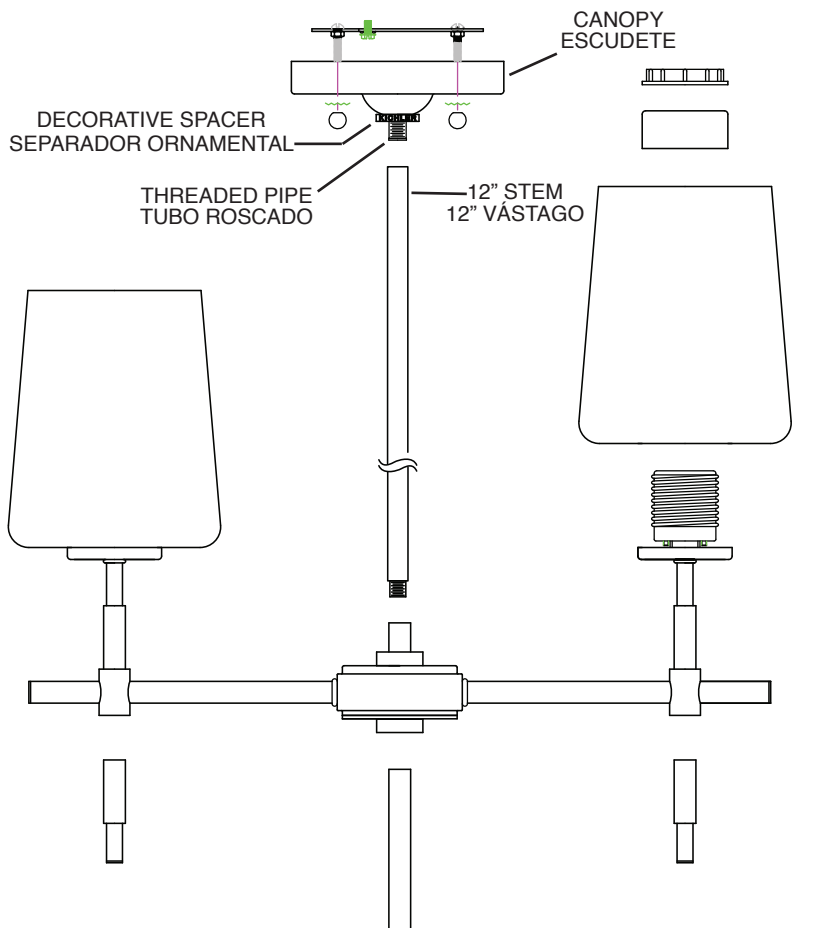


SEE OTHER SIDE FOR SPANISH TRANSLATIONS. VEA EL OTRO LADO DE TRADUCCIONES AL ESPAÑOL.

VÁSTAGO DE MONTAJE INSTRUCCIONES DE INSTALACIÓN

- 1) Pase el alambre del artefacto a través del vástago y atornille el vástago al tope del artefacto. **IMPORTANTE:** Por lo menos uno 12" vástago debe ser utilizado.
NOTA: El compuesto para rosca estanca se debe aplicar a todas las roscas del vástago como se notó con el símbolo (◄) para impedir la rotación accidental del artefacto durante la limpieza, instalación de una bombilla nueva, etc.
- 2) Pase el alambre del artefacto a través de los vástagos restantes y atornille los vástagos juntos.
- 3) Rosque el lazo pequeña a la última varilla.
- 4) Rosque el separador ornamental en el tubo roscado en el escudete.
- 5) Rosque el segundo lazo en el extremo de la tubo roscado en el escudete.
- 6) **APAGUE LA ALIMENTACIÓN ELÉCTRICA.**
IMPORTANTE: Antes de comenzar, **NUNCA** trate de trabajar sin antes desconectar la corriente hasta que el trabajo se termine.
 - a) Vaya a la caja principal de fusibles, o interruptor o caja de circuitos de su casa. Coloque el interruptor de la corriente principal en posición de apagado "OFF".
 - b) Desatornille el (los) fusible (s), o coloque el interruptor o interruptores del breaker en posición de apagado "OFF", que controla (n) la corriente hacia el artefacto o habitación donde está trabajando.
 - c) Coloque el interruptor de pared en posición de apagado "OFF". Si el artefacto que se va a reemplazar tiene un interruptor o cadena que se jala, colóquelos en la posición de apagado "OFF".
- 7) Encontrar los agujeros roscados correctos en la abrazadera de montaje. Instalar los tornillos de montaje en los agujeros roscados.
- 8) Unir la abrazadera de montaje a la caja de conexiones. (No se proveen tornillos). La abrazadera de montaje puede ajustarse para acomodar la posición del artefacto.
- 9) Instrucciones de conexión a tierra solamente para los Estados Unidos. (Vea la ilustración A o B).
 - A) En las lámparas que tienen el fleje, de montaje con un agujero y dos hoyue los realizados. Enrollar el alambre a tierra de la caja tomacorriente alrededor del tornillo verde y pasarlo por el agujero.
 - B) En las lámparas con una arandela acopada. Fijar el alambre a tierra de la caja tomacorriente del ajo de la arandela acuada y tornillo verde, y pasar por el fleje de montaje.

Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres (no incluido) espúes de seguir los pasos anteriores. Nunca conectar el alambra a tierra a los alambres eléctricos negro o blanco.

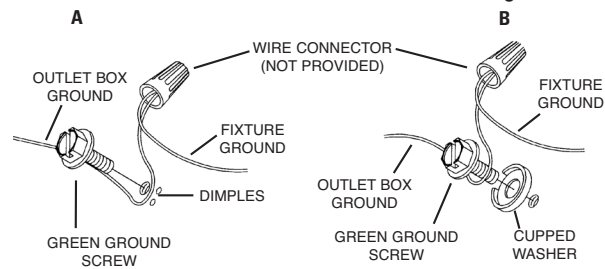

- 10) Haga las conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)


Neutral Wire

- 11) Empuje el artefacto hacia el techo, pasando cuidadosamente los tornillos de montaje a través de los orificios en el escudete.
- 12) Asegure el artefacto al techo con las perillas estriadas.
- 13) Conecte el capuchón gran centro de la parte inferior central del cuerpo del artefacto.
- 14) Conecto los capuchones pequeña en la parte inferior de los brazos.
- 15) Ponga el vidrio y luego el espaciador hacia abajo sobre el casquillo.
- 16) Rosque el anillo del casquillo al casquillo. Apriete el anillo del casquillo para sujetar el vidrio en el lugar. (NO apriete excesivamente.)


INSTRUCCIONES DE INSTALACIÓN SEMI-RAS

- 1) Pase el alambre del artefacto a través del vástago y atornille el vástago al tope del artefacto. **IMPORTANTE:** Por lo menos uno 12" vástago debe ser utilizado.
NOTA: El compuesto para rosca estanca se debe aplicar a todas las roscas del vástago como se notó con el símbolo (◄) para impedir la rotación accidental del artefacto durante la limpieza, instalación de una bombilla nueva, etc.
- 2) Rosque el separador ornamental en el tubo roscado en el escudete.
- 3) Tornillo del tubo roscado en el escudete en el extremo del vástago pasado.
- 4) Siga los pasos # 6-16 en Vástago Montado Instrucciones de arriba.

INSTALACIÓN DEL VÁSTAGO DE MONTAJE

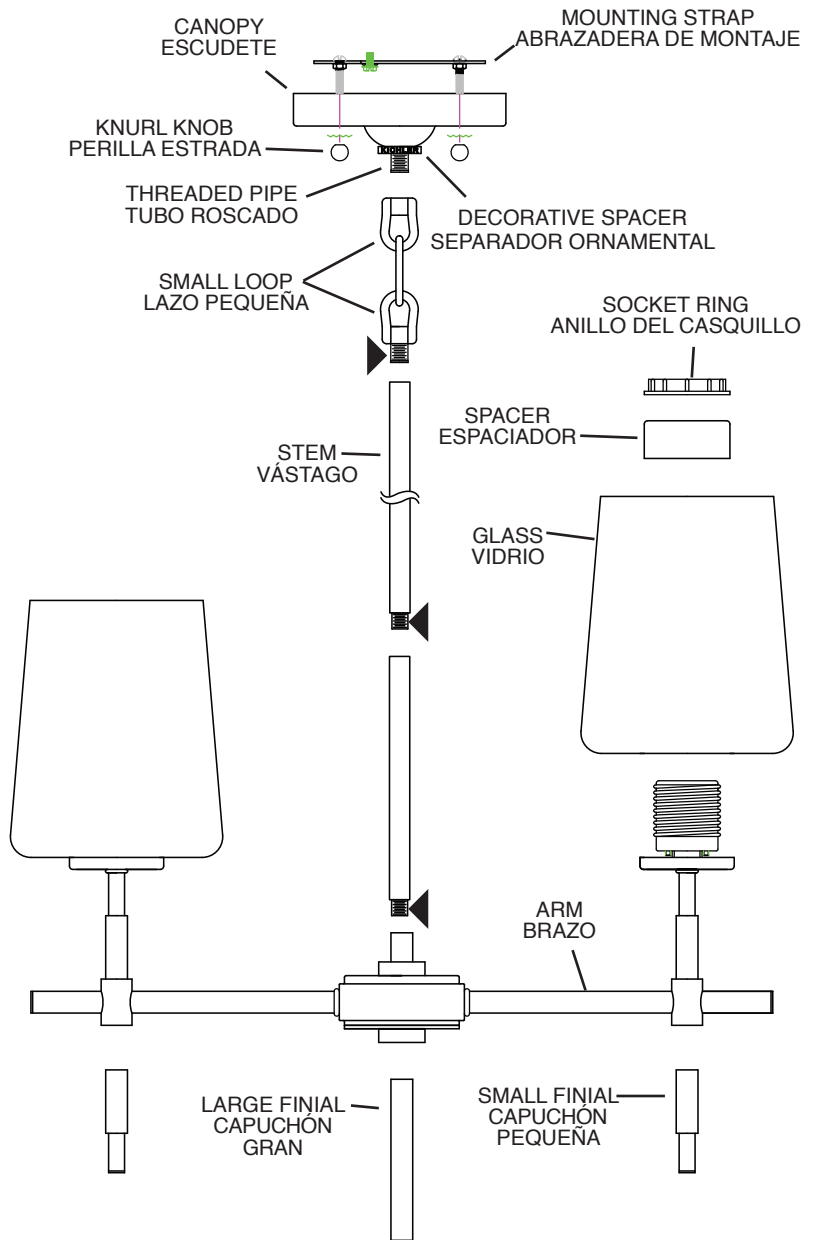

INSTALACIÓN DEL SEMI-RAS

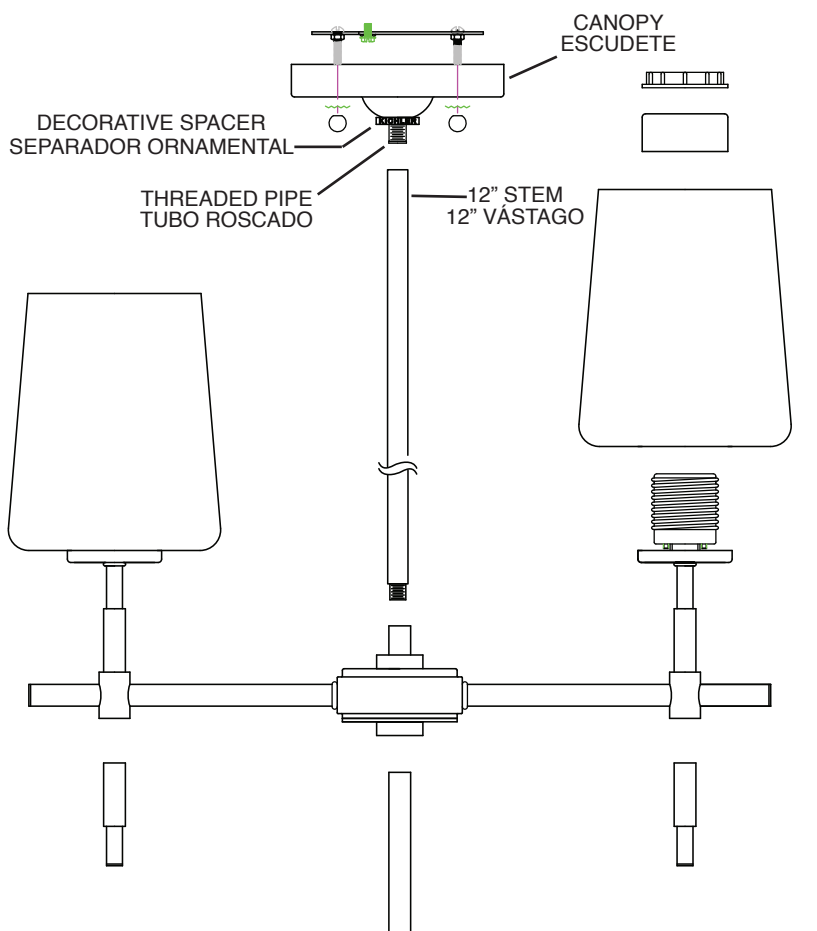

SEE OTHER SIDE FOR ENGLISH TRANSLATIONS.
VEA EL OTRO LADO DE TRADUCCIONES AL INGLÉS.