

INSTALLATION

GUIDE


CAMBER™, WATER RHYTHM™,
MYTHICAL BEASTS™, AND
WATER LILIES™
SELF-RIMMING
VITREOUS CHINA
LAVATORIES

K-2282, K-14282,

K-14283, K-14284

THE BOLD LOOK
OF **KOHLER**®

RECOMMENDED TOOLS AND MATERIALS

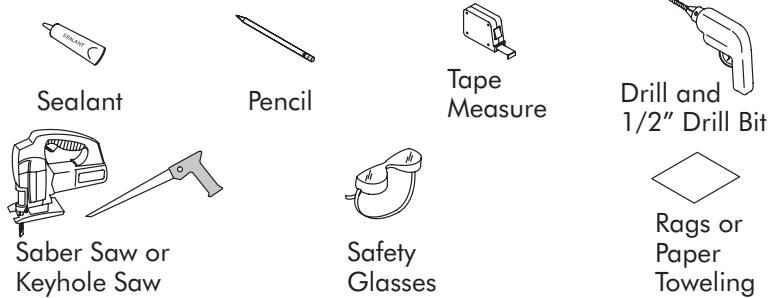

BEFORE YOU BEGIN

IMPORTANT: This lavatory is not designed or intended for installation to a standard 22" (55.9cm) countertop with backsplash or bullnose front edge. This lavatory requires a minimum 21-1/8" (53.7cm) flat surface for installation.

- Observe all local plumbing and building codes.
- You must cut the hole in the countertop **before** installing the countertop.


- Lavatories without faucet holes require the installation of a wall-mount faucet with a minimum 7" (17.8cm) spout length.
- Prior to installation, unpack the new lavatory and inspect it for damage. Return the lavatory to its protective carton until you are ready to install it.
- Inspect the waste and supply tubing for damage. Replace as necessary.

1. INSTALLATION

Check the desired lavatory location for clearance between the front and back countertop edges.

Cut out the template on the cut-out line.

Position and trace the cut-out template on the countertop.

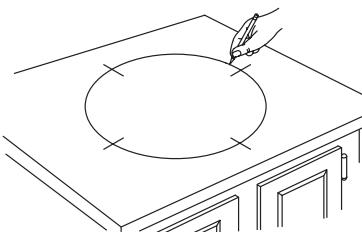


NOTE: To avoid possible damage to the cabinet, cut the countertop **before** installing the countertop to the cabinet.

Drill a 1/2" hole on the inside of the cutout line.

Cut the opening in the countertop along the inside edge of the pencil line.


Install the countertop to the cabinet.

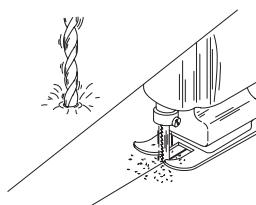

Temporarily position the lavatory in the opening, and adjust the lavatory so the arrow on the underside faces forward. Adjust the fit of the lavatory.

Trace a pencil line around the outside edge of the lavatory.

Carefully remove the lavatory from the countertop opening.

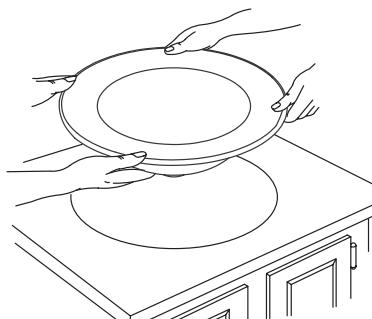


**IF THE FAUCET AND DRAIN ARE NOT INSTALLED,
INSTALL THEM AT THIS TIME. FOLLOW ALL
INSTRUCTIONS PACKED WITH THE FAUCET AND
DRAIN.**

Clean the countertop, and position the lavatory in the countertop opening so the lavatory edges line up with the pencil line. Adjust the position of the lavatory so the arrow on the underside faces forward.

Apply a thin, continuous bead of quality sealant around the lavatory edges. Immediately wipe away any excess sealant, and fill any voids.

Verify that the lavatory has not moved out of position.

Allow the sealant to cure at least 30 minutes before proceeding.

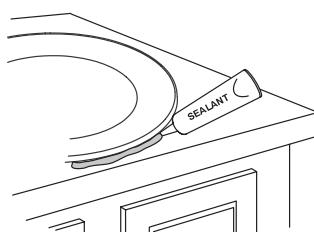

Connect the faucet supply lines.

Connect the drain assembly.

Clean up with a non-abrasive cleaner.

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

In the U.S.A., call 1-800-4-KOHLER

In Mexico, call 001-877-680-1310

In Canada, call 1-800-964-5590

THE BOLD LOOK
OF **KOHLER**®

www.kohler.com