

ASSEMBLY INSTRUCTIONS FOR 51849 & 51850 (SG640-12-1-M121, SG640-12-2-M121)

FIG. A

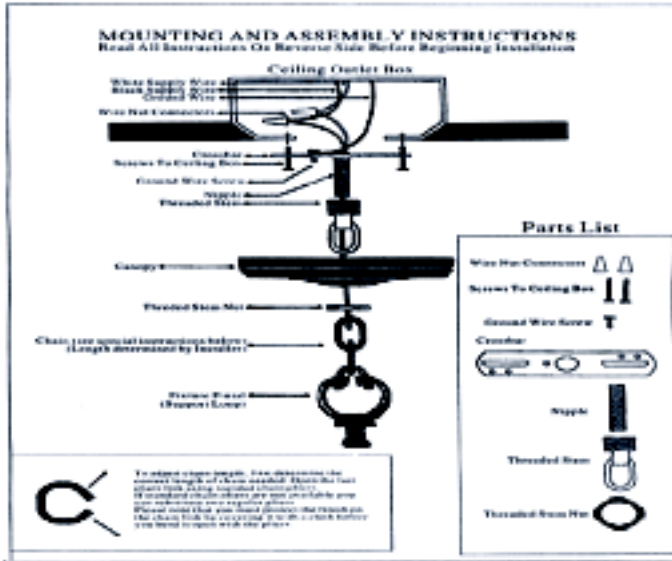


FIG. C


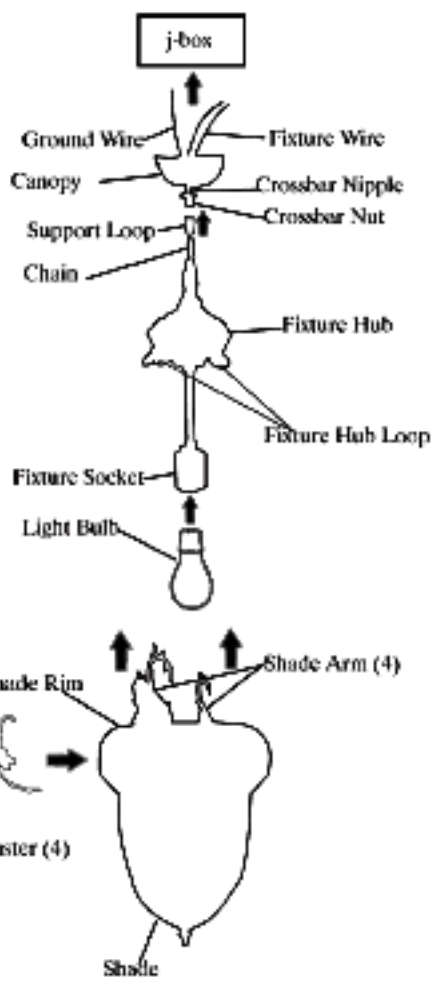


FIG. B

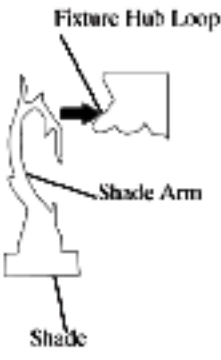

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED.

1. Attach canopy to J-Box. FIG. A
2. Attach fixture chain to canopy support look. Pull fixture wire w/ ground wire through crossbar nipple carefully. FIG. C *Follow procedure shown in ELECTRICAL CONNECTION instructions.
3. Screw light bulb into fixture socket. FIG. C (light bulb not included)
4. Attach shade arm (4) to fixture hub loop. FIG. B
5. Hook acorn leaf cluster(4) to shade rim. Acorn leaf cluster should be attached half way between shade arms. FIG. C

ELECTRICAL CONNECTIONS:

1. Cut excess wire ABOVE crossbar to 6 inches. Split the wire into 2 separate leads. Strip on inch of plastic insulator from the ends of each lead.
2. Connect the half of the wire with the ribbed surface to the white wire of the supply box. Connect the smooth half of the wire (the half with the markings) to the black wire of the supply box. Connect the bare copper Ground Wire to the green screw of the crossbar. Use UL listed wire connectors suitable for the size, type, and number of conductors. No loose strands or loose connections should be present. Secure wire connectors with electrical tape.

*WIRE PER LOCAL CODES



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com