

ASSEMBLY INSTRUCTIONS FOR #106194 (58119-1)

FIG.A

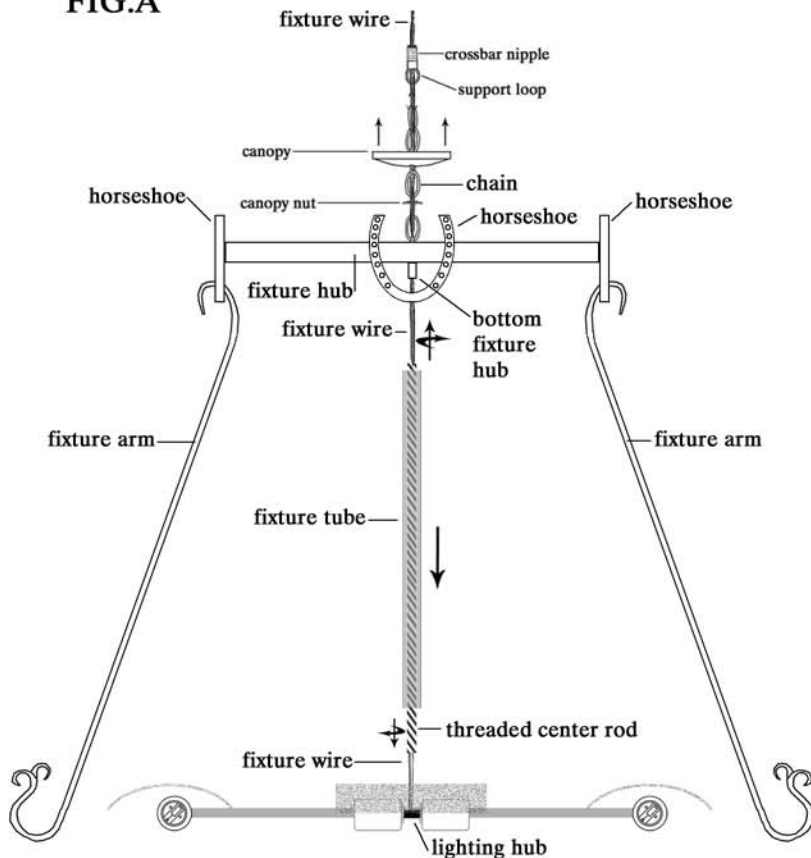


FIG.B


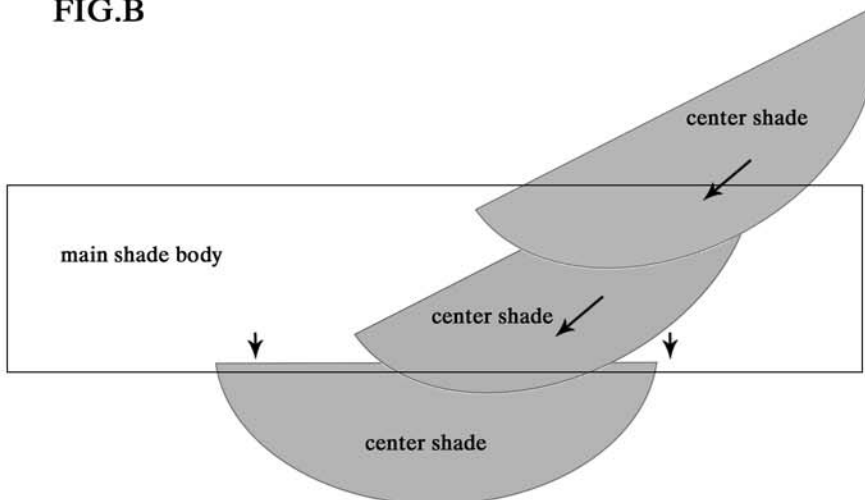


FIG.C

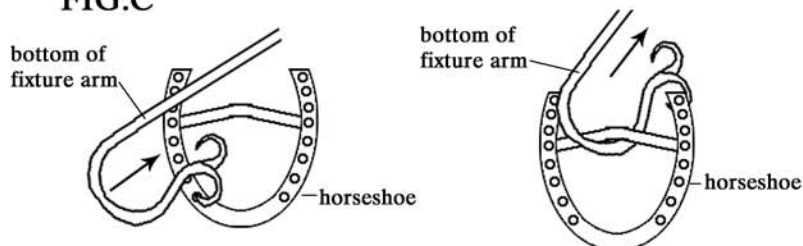


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Thread fixture wire through threaded center rod, screw threaded center rod into lighting hub, place fixture tube onto threaded center rod, screw threaded center rod into bottom of fixture hub, threaded fixture wire through chain, canopy and support loop. FIG.A
2. Wire as per local electrical code.
3. Place fixture arms onto horseshoes located on fixture hub as shown. FIG.A
4. Place center shade into main shade body as shown. FIG.B
5. Remove horseshoes from main shade body. Be sure to setup and reattach horseshoes to main shade body as they were removed (finished side out).
6. Place horseshoes onto bottom of fixture arms as shown. FIG.C
7. Bolt horseshoes with fixture arms onto main shade body as shown. FIG.D

FIG.D

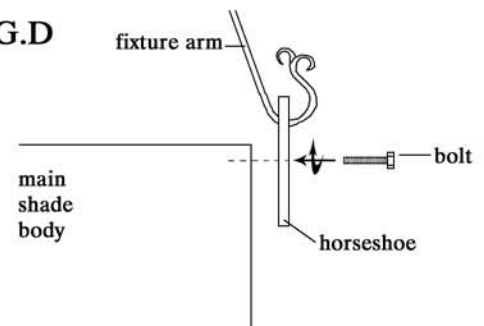

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com