


# Assembly Instructions For

# P1221 (E) 12/10

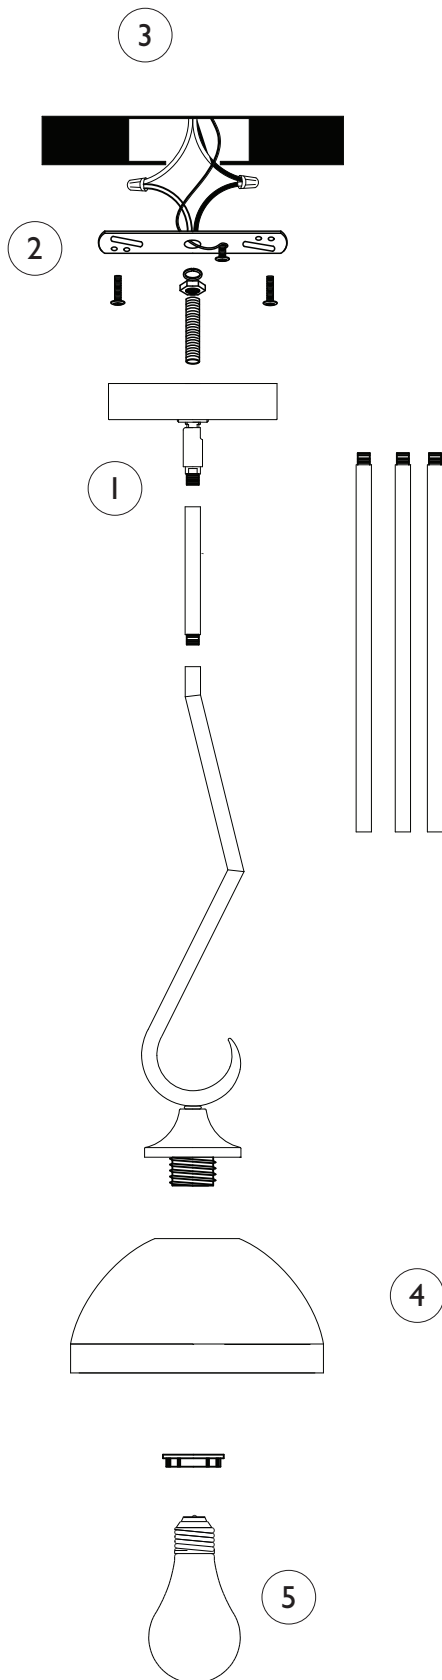

## IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

### I. STEM HUNG INSTALLATION:


A. Choose desired installation height. Thread fixture wires through each stem to be used. Note correct position of stems from left diagram. Screw all stem together until secure. Screw bottom stem into fixture stem until secure.

B. Thread fixture wires from top stem through canopy. Install top end of stem assembly by screwing into canopy.

### WITHOUT STEM INSTALLATION:

A. Thread fixture wires from top of fixture stem through canopy. Then screw canopy on top of fixture stem.

2. Cut excess wires leaving only 6" (15 cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19 mm) of outer plastic insulation.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. Install shade by fastening with counter ring.
5. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.



**MURRAY  
FEISS**

GENERATION  
BRANDS™