


Assembly Instructions For

WB1530 (E) 12/10

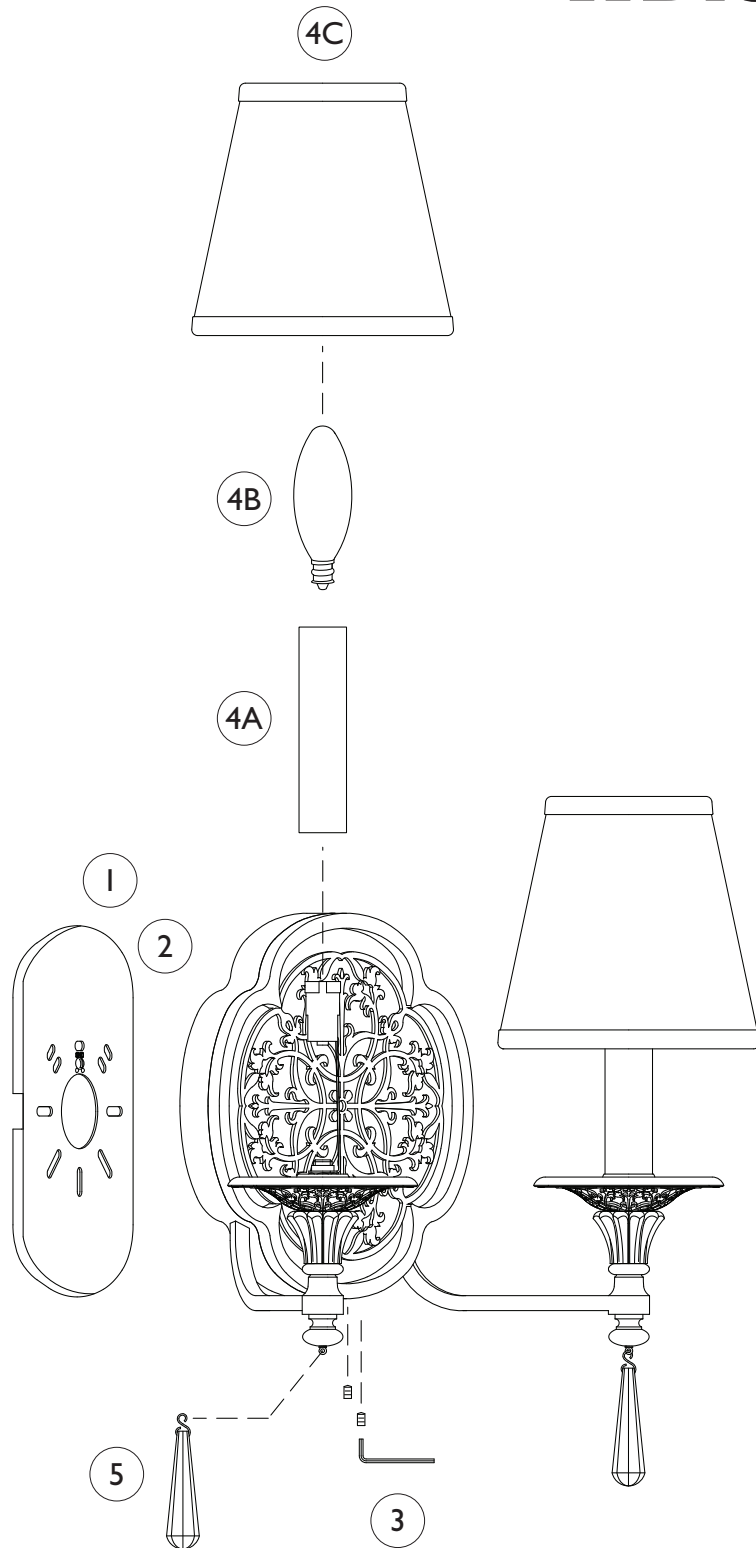

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install mounting plate:
 - A. Take supply wires from outlet box and carefully pass them through center hole of mounting plate. Note: The flat surface of mounting plate must face the outlet box and the angled rim side facing toward you.
 - B. Install mounting plate onto the outlet box using two screws supplied with outlet box.
 - C. Spread electrical wires so that black wires are on one side of the outlet box and the white wires are on the other side.

2. Connect electrical wires:
 - A. Connect white fixture wire(s) to white supply wire from outlet box with wire connector. Connect black fixture wire(s) to black supply wire from outlet box with wire connector. NOTE: Black outlet box wire may be red, round and smooth and/or have copper conductor. White outlet box wire may be square and ridged and/or have a silver conductor.
 - B. Connect fixture ground wire (without plastic insulation) to ground wire from outlet box (usually with green insulation) with wire connector. Note: If there is no supply ground wire at outlet box then attach fixture ground wire securely onto green grounding screw located at mounting plate. **IMPORTANT:** Never connect ground wire to black or white supply wires (from outlet box).

3. Install fixture plate. While carefully tucking all electrical wires inside of fixture plate, install the fixture plate onto the mounting plate by fastening with set screw. Use provided hex key to tighten.

4. A. Install candle tube by slipping through sockets.
 B. Install type-B, candelabra base, of 60 Watt maximum bulbs (not included).
 C. Install shade by snapping onto bulbs.

5. Hang all glass parts as shown on diagram. NOTE: To replace broken glass or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken glass or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.



MURRAY
F E I S S

GENERATION
BRANDS™