
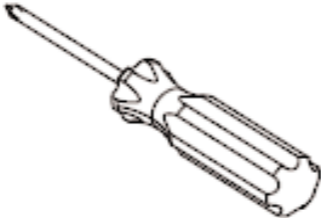



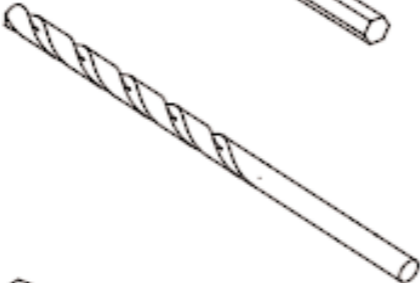

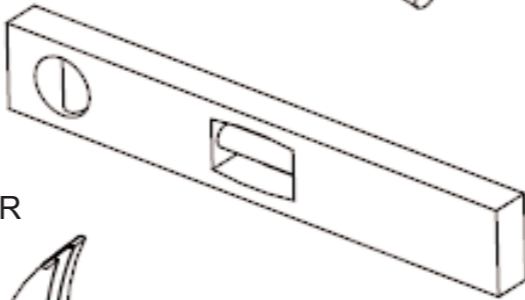

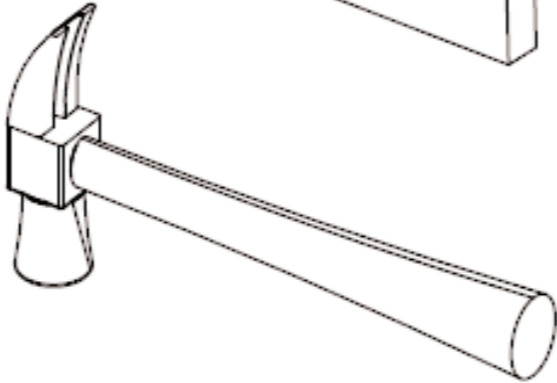
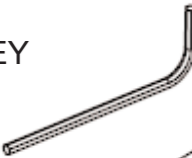
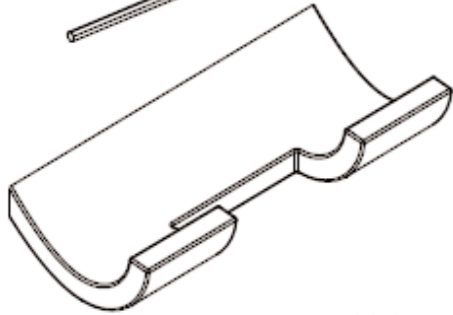


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
1/4-28 SET SCREW		X 1	HAMMER	
1/8" HEX KEY		X 1		
DOUBLE ROBE HOOK		X 1		

# SECANT

## INSTALLATION INSTRUCTIONS

37-13


### DOUBLE ROBE HOOK

**NEWPORT BRASS®**


*Flawless Beauty. From Faucet to Finish.™*

2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
[WWW.NEWPORTBRASS.COM](http://WWW.NEWPORTBRASS.COM)

① REMOVE MOUNTING BRACKET

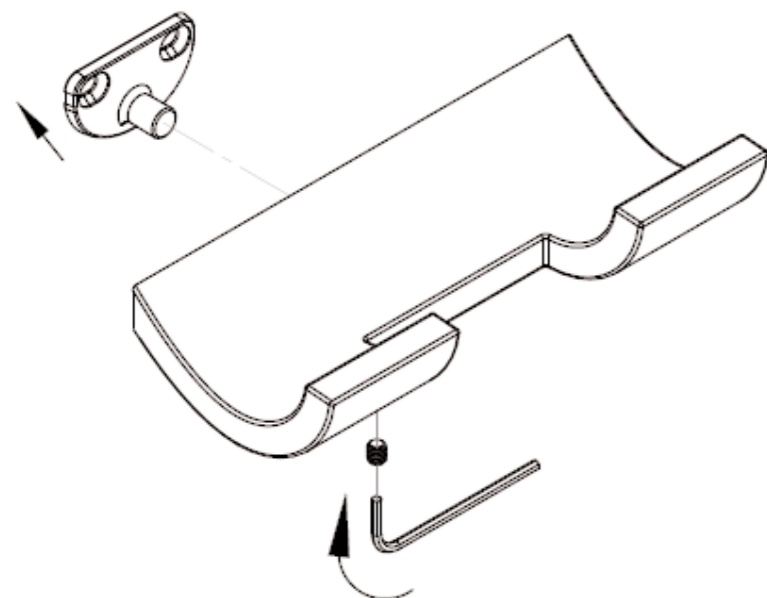

② ALIGN MOUNTING BRACKET AND MOUNT LOCATION

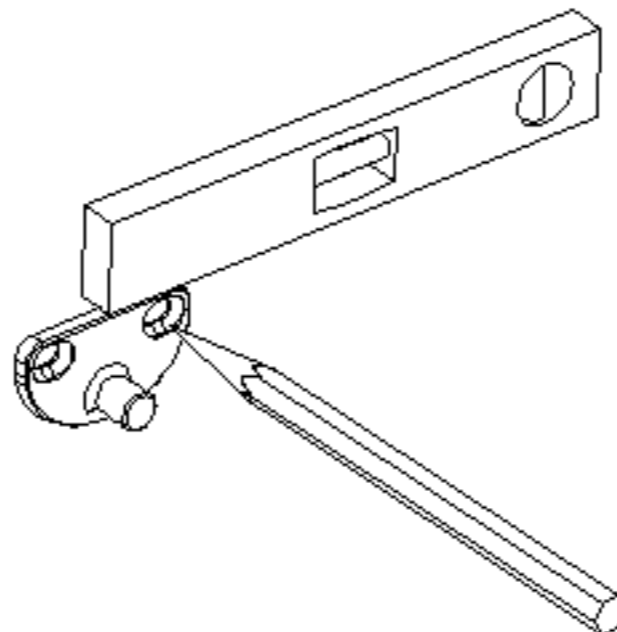


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS  
MADE IN STEP 2

TAP IN UNTIL  
THREADS ARE  
REACHED

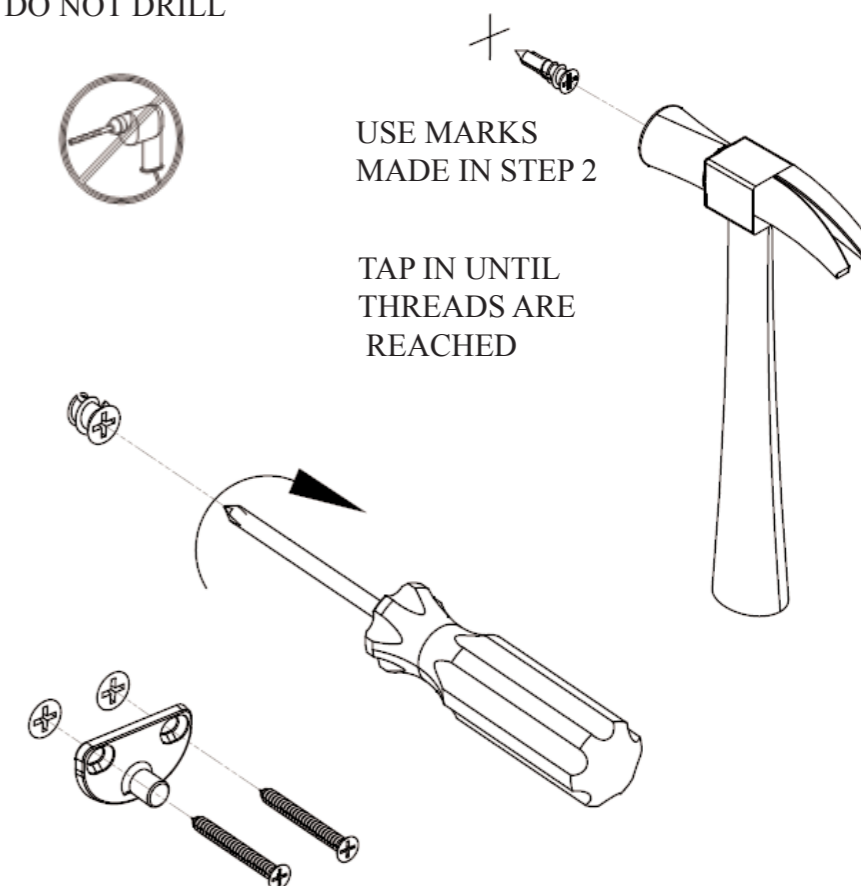


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

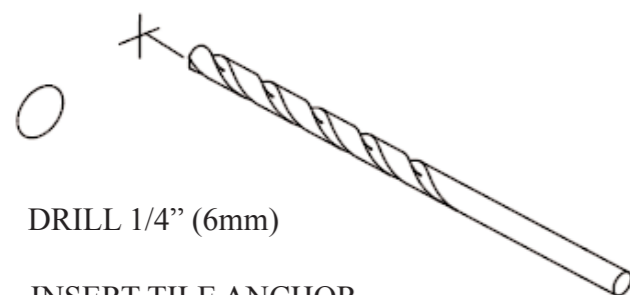


DRILL 1/4" (6mm)

INSERT TILE ANCHOR

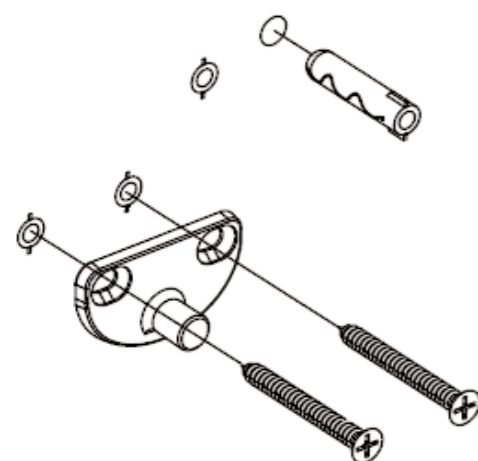

⑤ INSTALL PRODUCT ONTO BRACKET

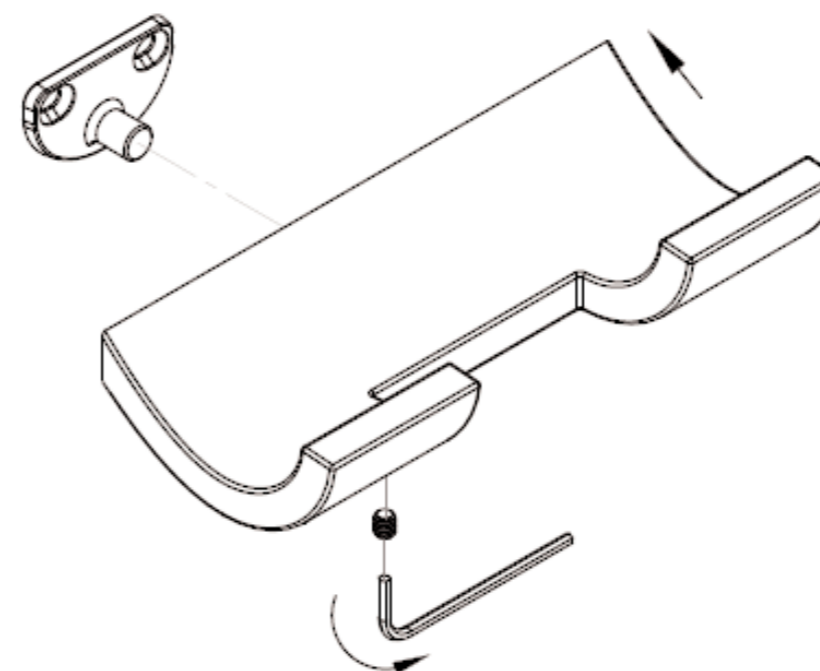

SECURE WITH SET SCREW