

## Single and Double Towel Bar / 2 & 3 Post Tissue Holder


Installation Instructions Model No. 12-01, 12-02, 12-05, 12-09, 12-12, 12-28


## Recommended Installation by a Professional Contractor


- I. Using the table below, measure the appropriate distance between post centers. (See Fig. I) Note: Hole locations should be level.
  - · 18" Single Towel Bar 18 1/8"
  - · 24" Single Towel Bar 24 1/8"
  - · 30" Single Towel Bar 30 1/8"
  - · 18" Double Towel Bar 18 5/8"
  - 16 Double lower bar 16 3/6
  - · 24" Double Towel Bar 24 5/8"
  - ·Tissue Holder (2 Post) 6 1/4"
  - ·Tissue Holder (3 Post) 6 1/4" (2x), (See Fig. 2)
- 2. Drill hole(s) in wall at points marked using the appropriate drill size:
  - ·Wood Screw (#6 x 2") use: 3/32" Drill
  - ·Toggle Screw (6-32 x 3") use: 3/8" Drill
- 3. Dis-assemble END POST (6) from POST (3). See Fig. 5. Remove ESCUTCHEON (5) from POST (3). See Fig. 4. Loosen SETSCREW (4) in FLANGE (1) and remove POST (3). Fasten FLANGE (1) to wall using either WOOD/TOGGLE SCREW (2). See Fig. 3.
- 4. Engage POST (3) into FLANGE (1). Position POST (3) height to 2 3/8" from mounting surface. Secure POST (3) into place by tightening SETSCREW (4). See Fig. 3.
- 5. Thread ESCUTCHEON (5) onto FLANGE POST (3). See Fig. 4.
- **6a. Towel Bars (Single):** Assemble TOWEL BAR (7) between END POST (6). Place END POST (6) onto POST (3) and secure into place with SETSCREW (4). See Fig. 5.
- **6b. Towel Bars (Double):** Take the finished towel bar assemble and place onto END POST (6), onto POST (3). Secure into place with SETSCREW (4). See Fig. 6.
- **6c. Tissue Holder (2 & 3 Post):** Thread END POST (6) onto POST (3) and secure into place with SETSCREW (4). Place HOLDER (7) between END POST (6). See Fig. 7.

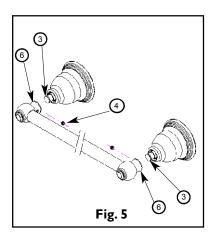


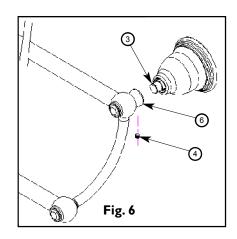


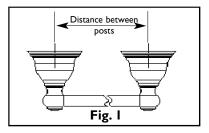

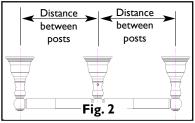

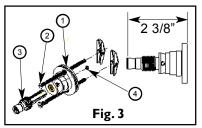

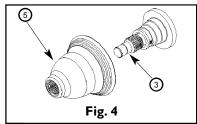

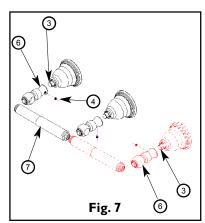



The Luxury of Style