
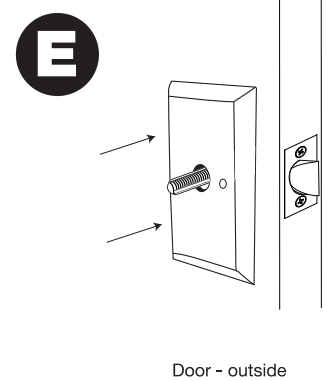
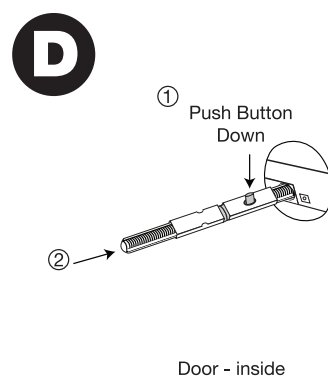
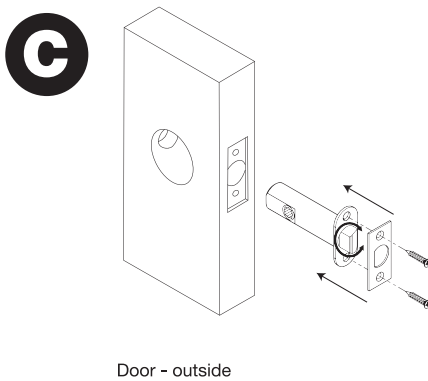
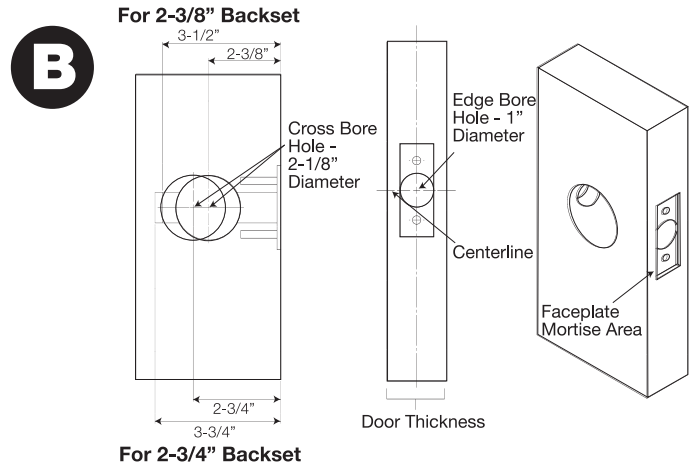


Short Plate Door Hardware Installation Instructions

Updated October 2014

Passage & Privacy

Note: Passages and privacies fit doors 1-3/8" to 1-3/4" thick

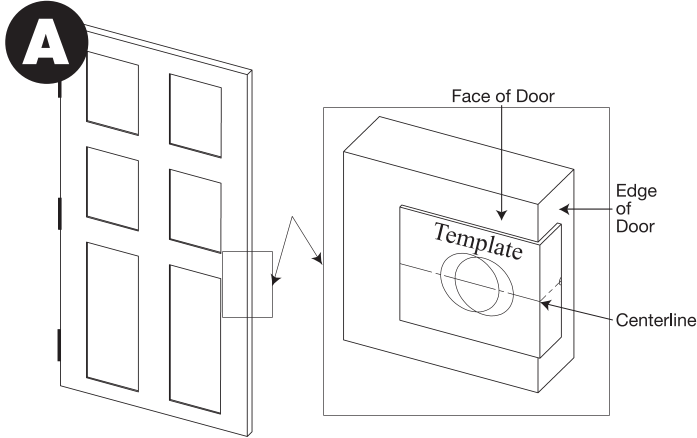

F **Bushing Installation**

