
## 49 Series

## $\mathcal{U}_{\mathtt{IRTUE}_{\mathtt{m}}}$

8"-15" Widespread Faucet

## Critical Dimensions:Minimum Hole Size1 1/2 DIA Thru Hole 3 PlacesValve Centerline to Back Splash2 1/4 MIN

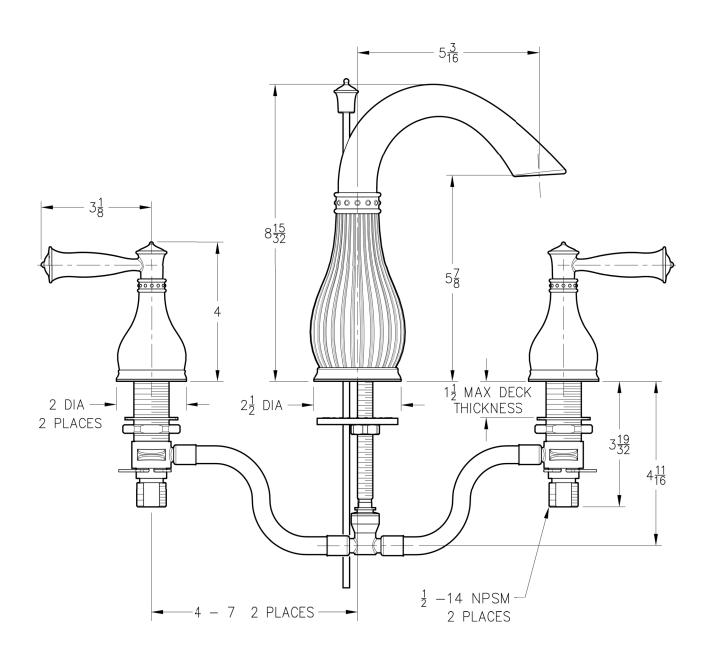



CAUTION:

When using the compression fittings in this package, with these types of installations, the installer must flare or bead the water supply lines to avoid blow-out conditions. Avoiding such steps in the installation of the unit may result in water damage.

Connect inlet supply lines by assembling brass supply nut (A), friction ring (B) and cone washer (C) onto 3/8" O.D. straight copper tube. Bead or flare. Wrench tighten.

Dimensions are in Inches

1-800-PFAUCET www.pricepfister.com 19701 DaVinci, Lake Forest, CA 92610 08/4/10

