


07 Series
Bedford
 Collection
Shower

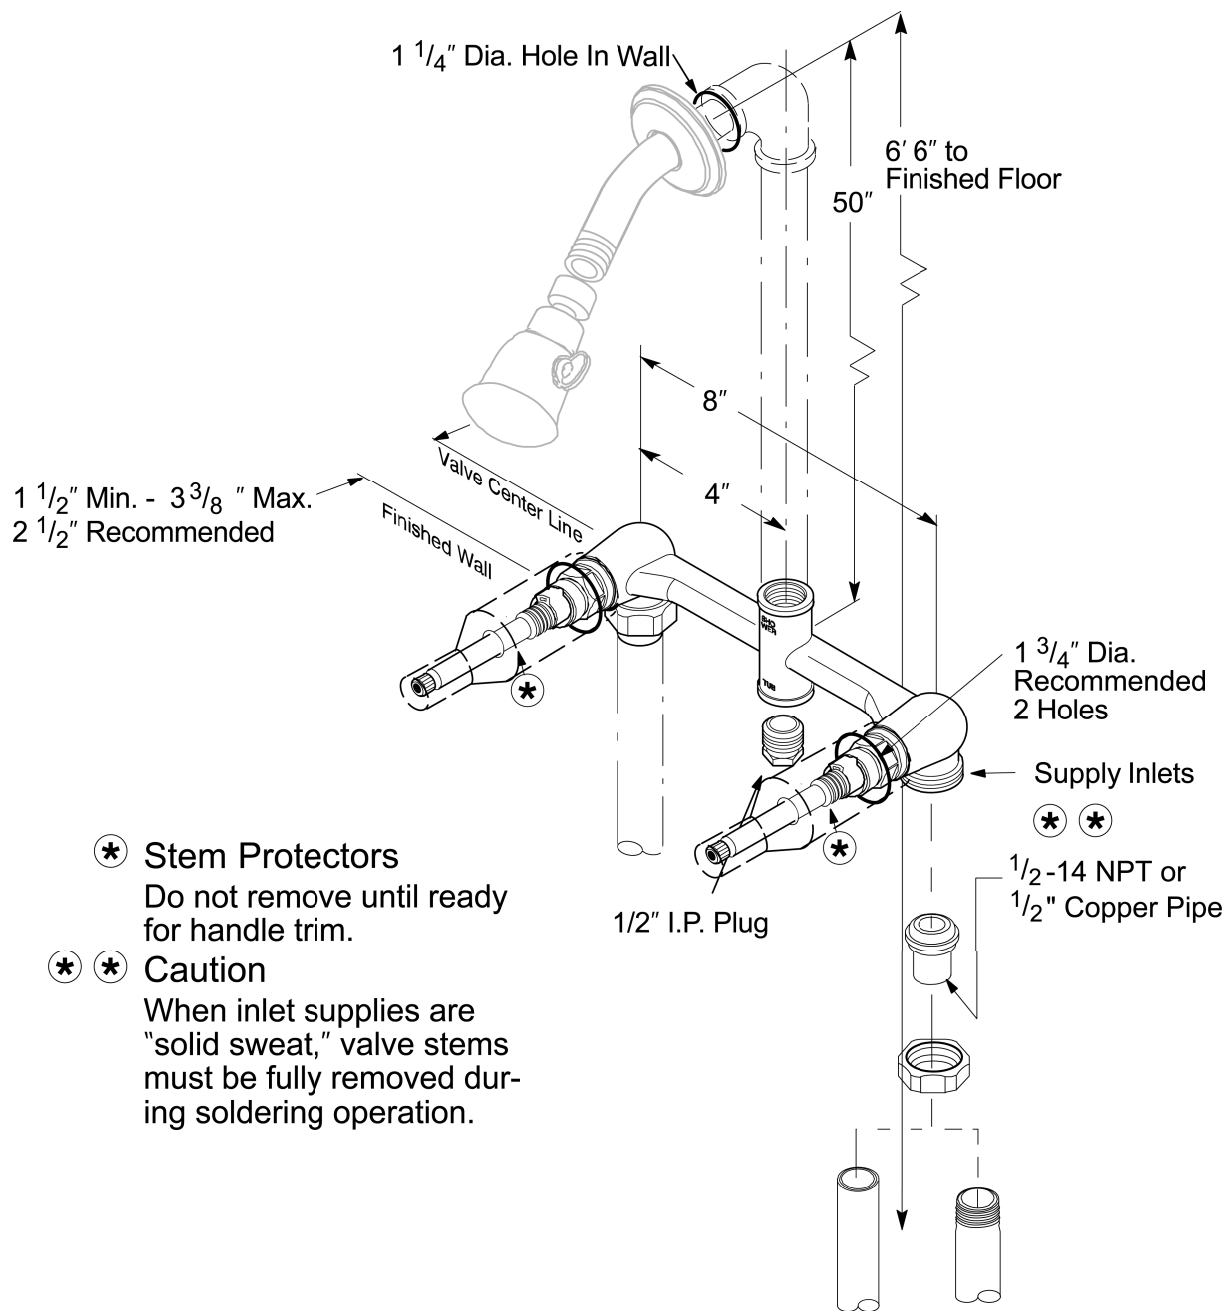

- * Stem Protectors
 Do not remove until ready for handle trim.
- * * Caution
 When inlet supplies are "solid sweat," valve stems must be fully removed during soldering operation.

1-800-PFAUCET www.pricepfister.com
 19701 DaVinci, Lake Forest, CA 92610
 01/8/03

Price Pfister[®]
 Pfreshest Ideas in Pfaucets.