


Assembly Instruction Sheet #IS-KLT8602WT For Style KLT8602WTLED

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. LightSource: (2) LED G94.5W Bulbs Estimated Assembly Time: 20-30 minutes Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. Please go to Quoizel.com to see the G9 LED bulb specifications provided with your fixture. 🛆 Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Package Contents (Step 2 Continued) D LED G9 Bulb x 2 connections. Twist connectors until wires are tightly joined together. Inner Backplate Wrap each connection with approved electrical tape and carefully Α Socket Collar x 1 stuff all the connected wires into the Outlet Box. Е x 2 STEP 3 - Install Fixture Body Glass Mounting Screw F Shade (\mathbf{P}) В A. Place the backplate of the Fixture Body (C) onto the Inner Backplate x 2 x 2 (A). Line up holes on the side of the backplate and the mounting holes on the side of the Inner Backplate (A). Secure them Fixture С Body together by threading Mounting Screws (B) into the Socket mounting holes on the Inner Collar Tool G Backplate (A). Hand tighten x 1 until snug. В Figure 3 Α STEP 1 - Attach Inner Backplate to STEP 4 - Install Glass Shade **Outlet Box** G A. Place Glass Shades (F) over Sockets as A. Secure the Inner Backplate (A) to the shown. By using the Socket Collar Tool (G), outlet box with outlet box screws (not thread Socket Collars (E) onto sockets to E supplied). Tighten until snug. secure Glass Shades (F). Hand tighten until * Pliers is required on this step. snug. Outlet Box Outlet Box Screw Figure 1 F (not Supplied) Socket **STEP 2 - Wire Connections** Figure 4 A. Use standard wire connectors (not included) to make all wire White wire White wire STEP 5 - Install Bulbs from outlet box from fixture A. Install either the G9 Xenon bulb as specified (not provided) or Black wire from Black wire install the G9 LED bulbs (provided) if the fixture purchased is the from fixture outlet box (or Red) I ED model Bare, or Green M Ground wire Ground wire Note: This fixture is rated to use from fixture D from outlet box 50W maximum G9 Xenon bulbs. OR Bare, or Green Your fixture is now assembled and Ground wire Ground wire ready to use. Enjoy! from fixture from outlet box Figure 2 Green Ground Screw on the Crossbar Figure 5 Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Released Date: 2017-04-27 © 2017 Quoizel Inc. 1of2

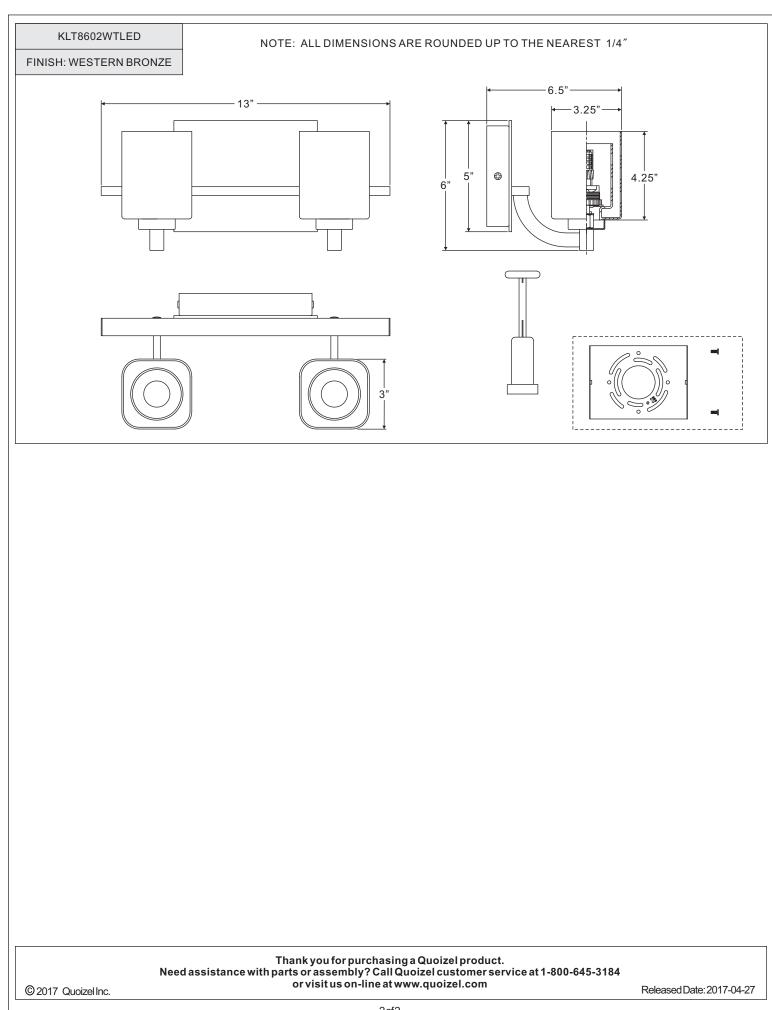

2of2