


Pivot Hinge / Sink Tray Installation Instructions

Parts List

- Pivot Hinge x 2 (1 left, 1 right)
- #8 x 1/2" Truss Phillips screw x 8
- #8 x 5/8" Flat-Head Phillips screw x 8
- Sink Tray x 2

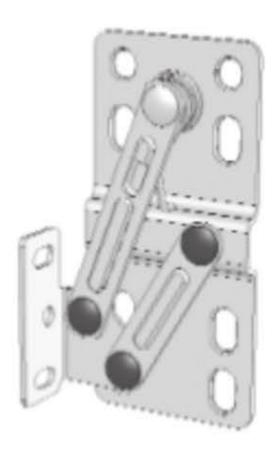

Hinge (left shown)

S00000000

#8 x 1/2" Truss Phillips screw x 8



#8 x 5/8" Flat-head Phillips screw x 8


Tools Required

- Phillips-head screwdriver
- Power Drill
- 1/8" Drill Bit

Installing the Hinge to a Face Frame Cabinet

- 1. The drawer front on an existing cabinet must be removed before the pivot hinge can be installed. If this is the case, mark the drawer front on the back bottom corners before removal; mark from the inside of the cabinet. This ensures the drawer front is properly aligned when it is re-installed with the pivot hinges.
- 2. Using the hinge as a marking tool, place the hinge flush to the front edge and bottom edge of the opening. With a pencil, mark the top hole (a) and one bottom slot (b), then pre-drill with a 1/8" drill bit. (See Figure A for correct hole locations.)
- Screw the hinge into place on the frame with the #8 x 5/8" flat-head Phillips screws (included).

Figure A

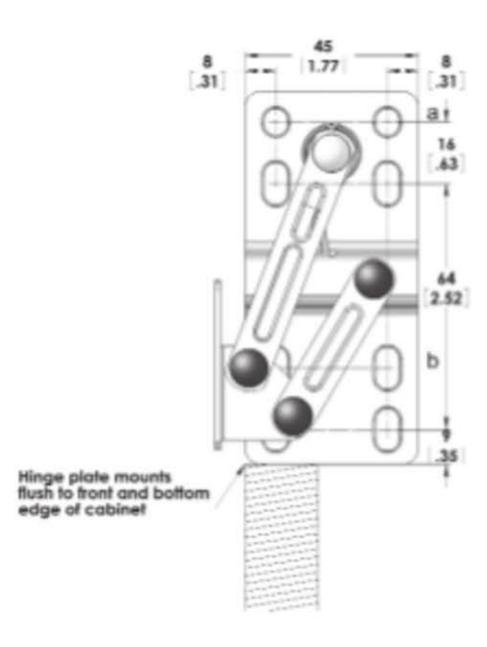

Installing the Hinge to a Frameless Cabinet

The only difference from the instructions above is that the pivot hinge is mounted to the side of the cabinet itself instead
of to a frame. The other installation instructions remain the same.