



The 4WKB-1 Knife Block is designed to be trimmed in order to fit into most drawers.


1. Measure drawer opening.

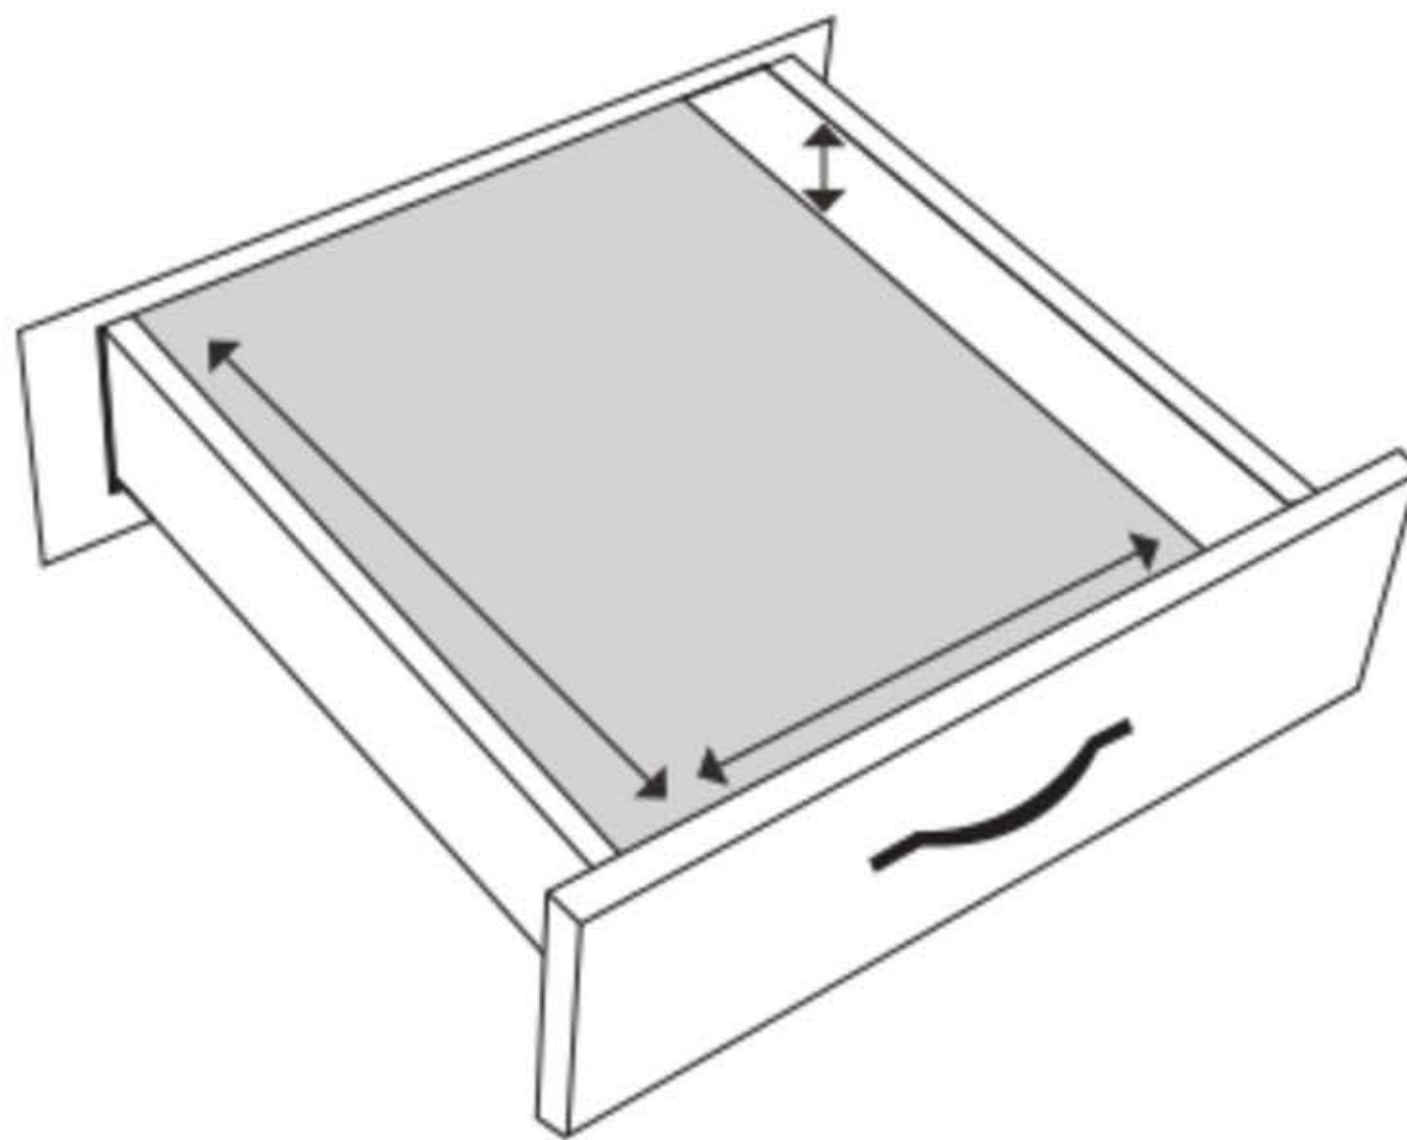

2. Measure the knife block to see where you will need to trim.

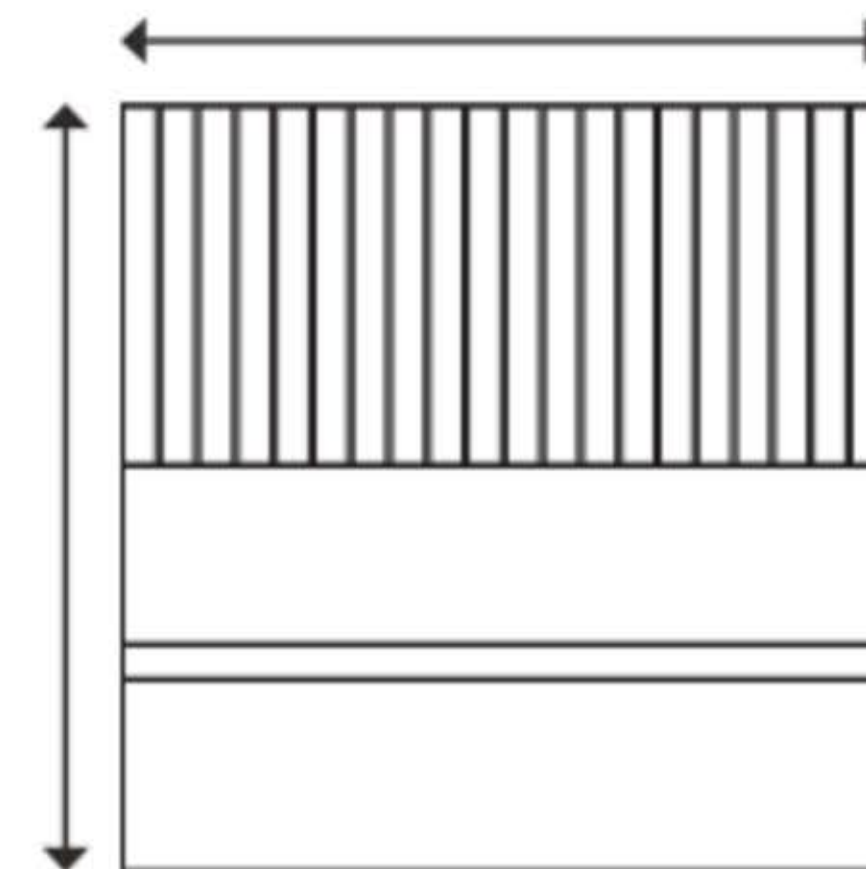

3. Flip board over and remove any screws that would be in the way of the cutting path.

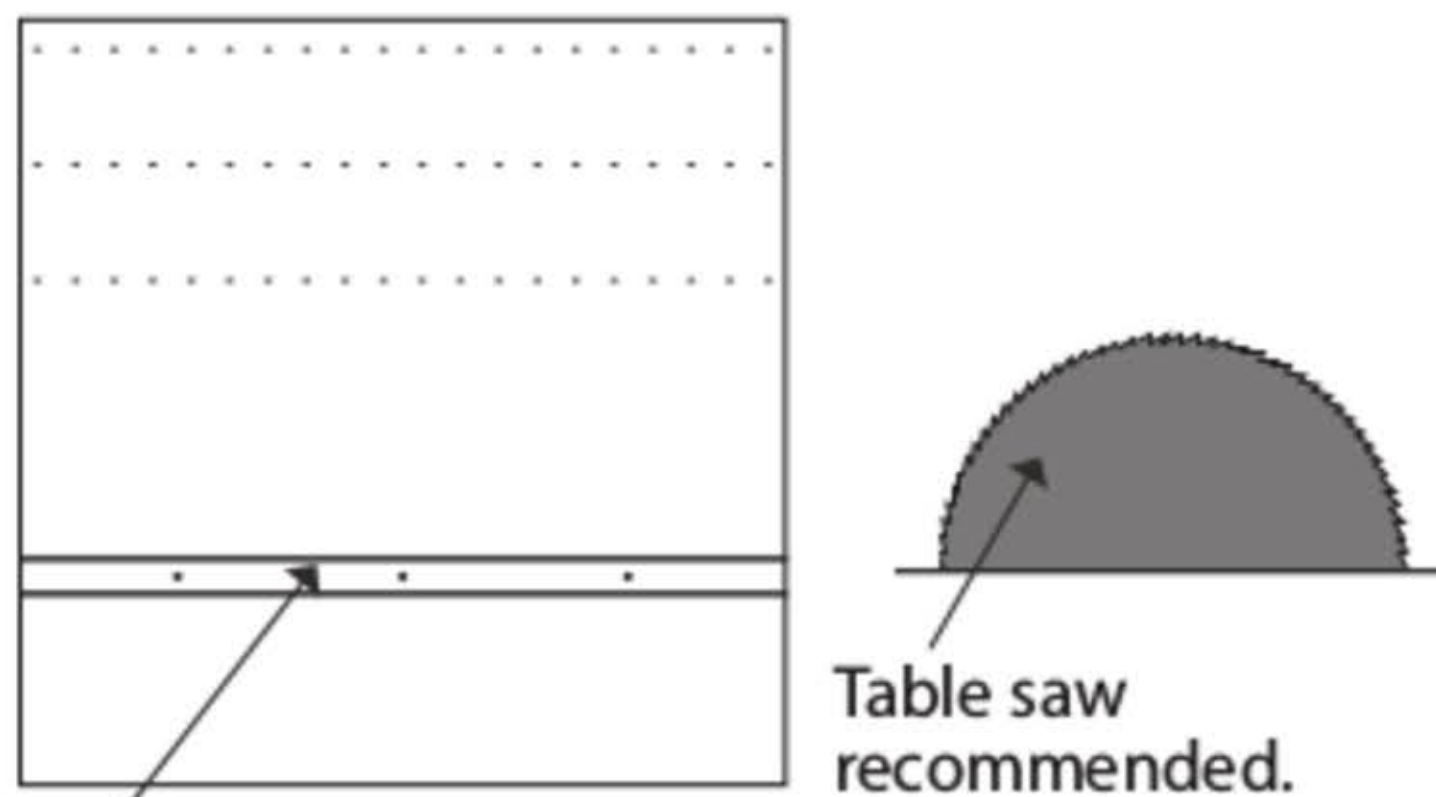

Note: Divider can be removed and trimmed to proper height.

4. Simply drop in drawer.

