



12400 Earl Jones Way
Louisville, KY 40299
rev-a-shelf.com
Customer Service: 800-626-1126



INSTALLATION INSTRUCTIONS

CVRI SERIES WITHOUT DRILL GUIDE

TOOLS REQUIRED:



ESTIMATED ASSEMBLY TIME:

10 MIN


CARE AND MAINTENANCE:

Clean with a damp cloth and
wipe parts dry.

1. Using a 1/2" drill bit drill
a hole at least 7" deep

2. Insert valet rod

Note: It is highly recommended
to use Rev-A-Shelf's drill bit and
guide for accurate installation,
see other side for details.
(CVRI-DG, Sold Separately)

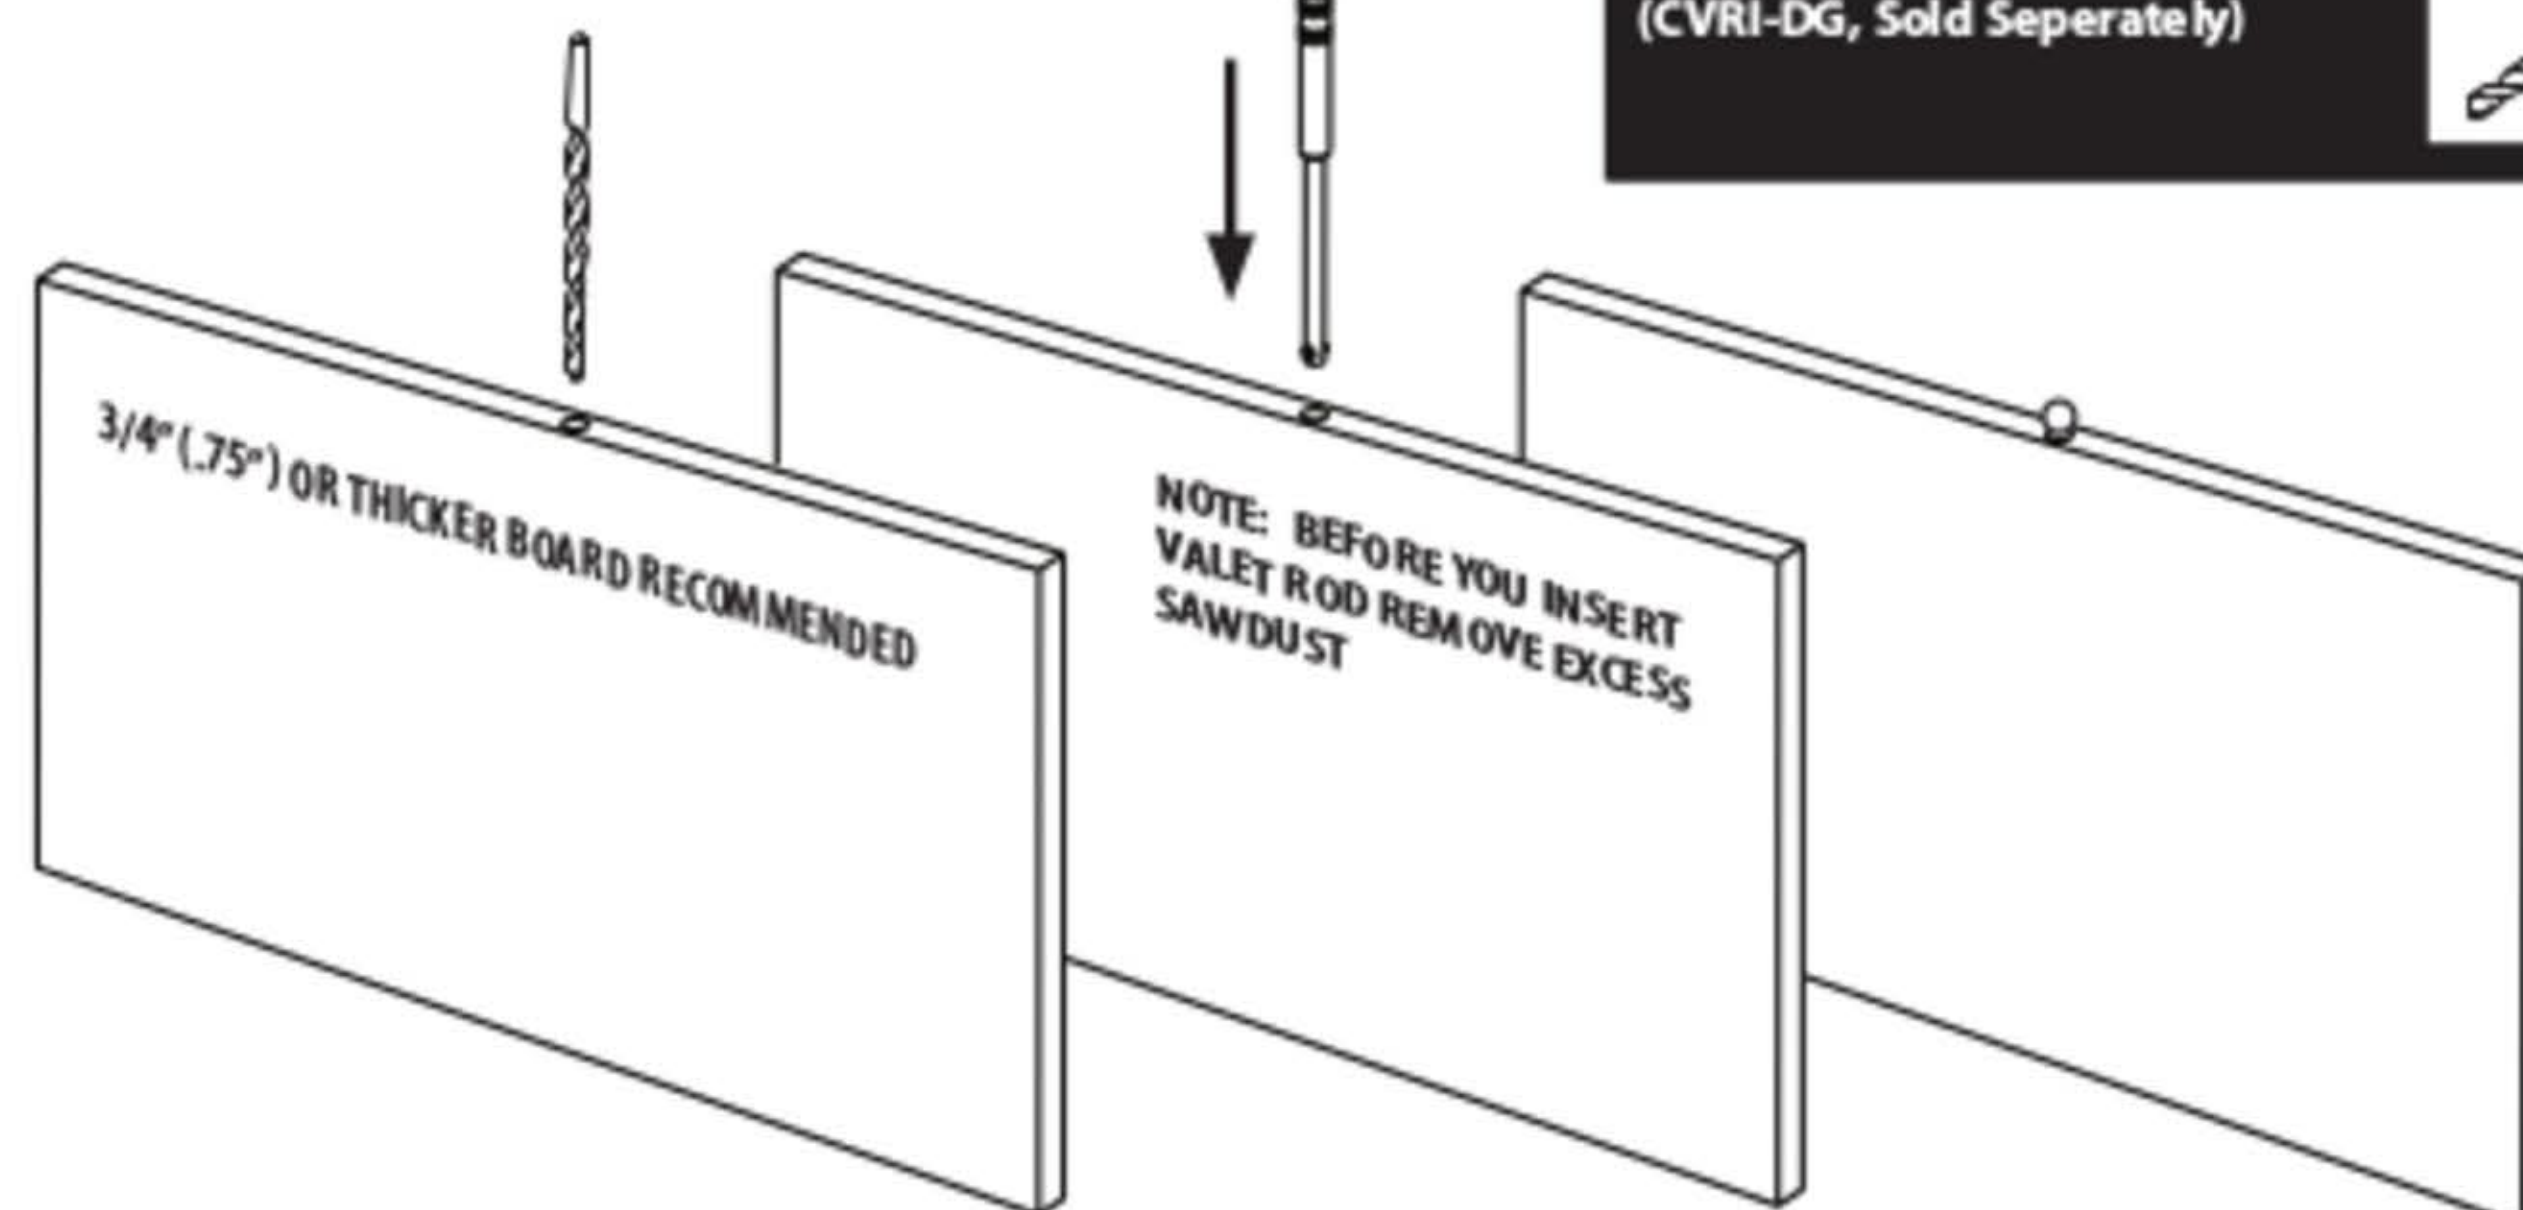

I-CVRI-0417