

## INSTALLATION INSTRUCTIONS

Top Mount Pull-Out Waste Containers For models: 4WCTM-12BBSCDM1, 4WCTM-15BBSCDM2, 4WCTM-18BBSCDM2, 4WCTM-1550BBSCDM-1 and 4WCTM-2150BBSCDM-2



ESTIMATED ASSEMBLY TIME:


**45 MIN** 

CARE AND MAINTENANCE:

CLEAN WITH A DAMP CLOTH AND WIPE PARTS DRY.

Step 4: Measure from inside cabinet wall to inside face frame (A) distance


should be measured the same at rear of cabinet (B).

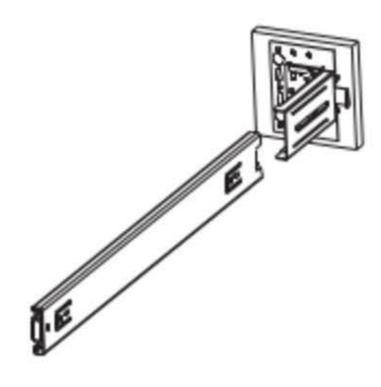


Step1: Install rear bracket to rear of slide.


Step 2: Install front of slide to face frame. Hole is placed %" from front of cabinet. Bottom of slide should be(13 %"- 35Qt. & 27Qt. / 19"- 50Qt.) from cabinet floor. Use #8 x %" Low Profile Truss Head Screw.

Step 3: If rear of cabinet is thinner than ½", install a ½" x 3" wide furring strip to the back of the cabinet centered (14¼"-35Qt. & 27Qt. / 20 ½"-50Qt.) from floor of cabinet.

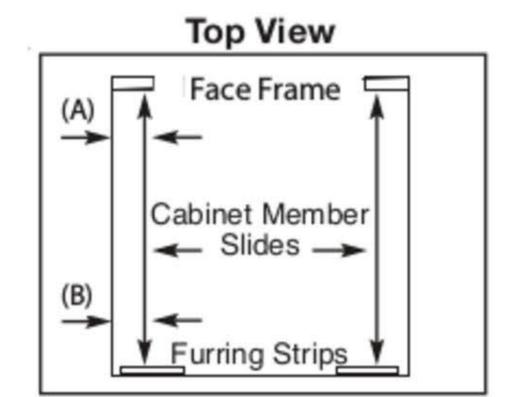

Step 5: Mount Rear Bracket. Extend the slide rear mounting bracket until it contacts the rear (Furring Strip). Bottom of slide should be(13½%-35 & 27Qt. 19"-50Qt.) from cabinet floor. Rear mounting bracket should be the same distance from the side cabinet wall at rear of slide as it is up front. Drive mounting screw in center horizontal slot of rear mounting bracket, tighten. Tighten screw in front bracket.

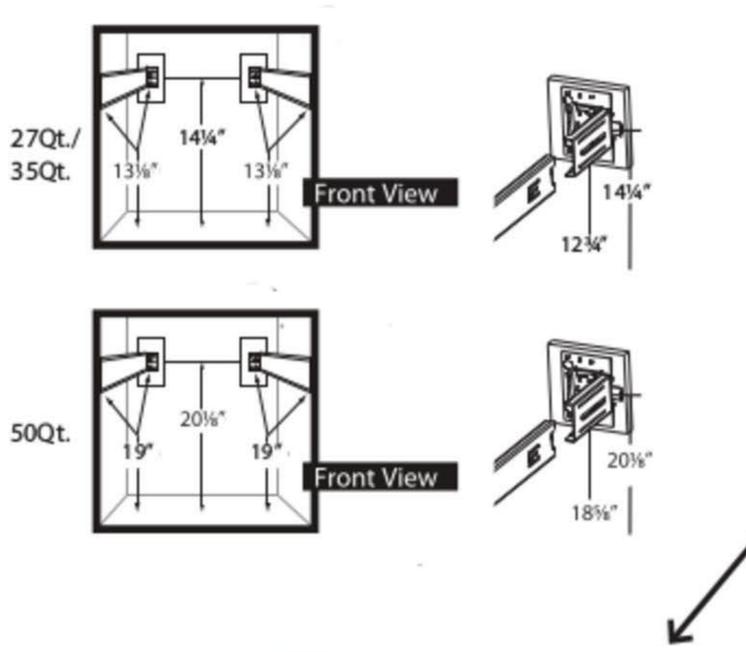

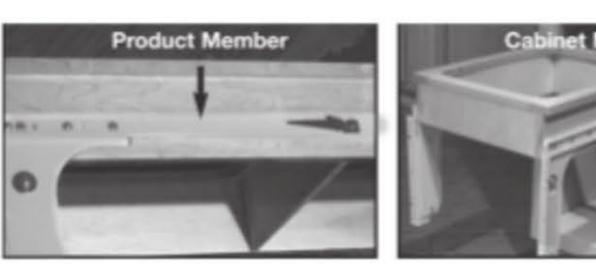

**Step 6:** Install wood unit (with slides attached) into cabinet, engaging product member slides into cabinet member slides push unit until it lock in place.

For more information visit out YouTube channel or download our "Tips and Tricks" sheet.

Step7: Mount Door, see next page



Visit our YouTube Channel for an installation video of this product Youtube.com/REVASHELF find "Wood Top Mount"

Download and Tips & Tricks Sheet at: Rev-a-shelf.com/TIPS\_WCTMBBSC.pdf