
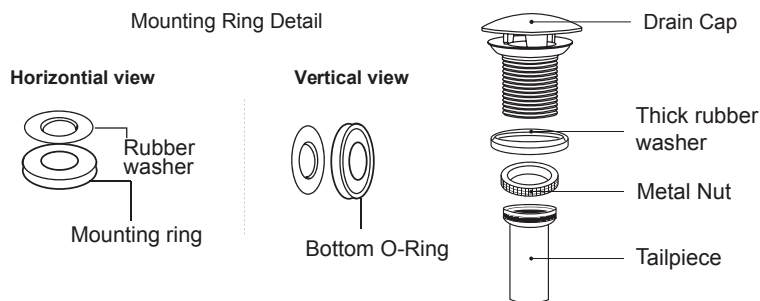


Model: 031430
031436

Contempo Collection

Note : For installing above counter sink.
DO NOT USE any adhesives with silicone.
Silicone will bond to the decorative finish
and cause permanent damage.


Step 1 : Position and drill a 1-3/4" hole for the
drain on the countertop. Place mounting
ring under the sink as shown on the right

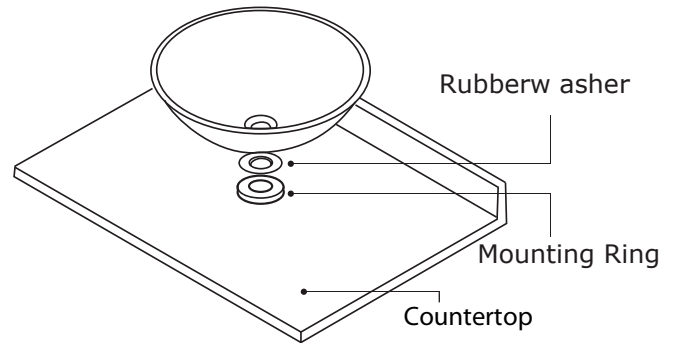


Step 2 : Drain assembly picture

Place a generous portion of plumbers'
putty under drain cap and insert whole
drain body inside the bowl and through
the countertop

(There may be a small beveled rubber
washer packaged with your drain, please
discard this and use plumbers' putty instead)

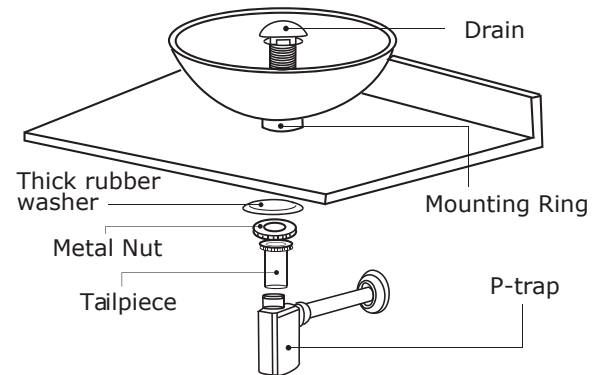

Step 3 : From under the drain, insert the thick
rubber washer and screw on and tighten
the metal nut. Remove excess plumbers'
putty and attach p-trap to tailpiece

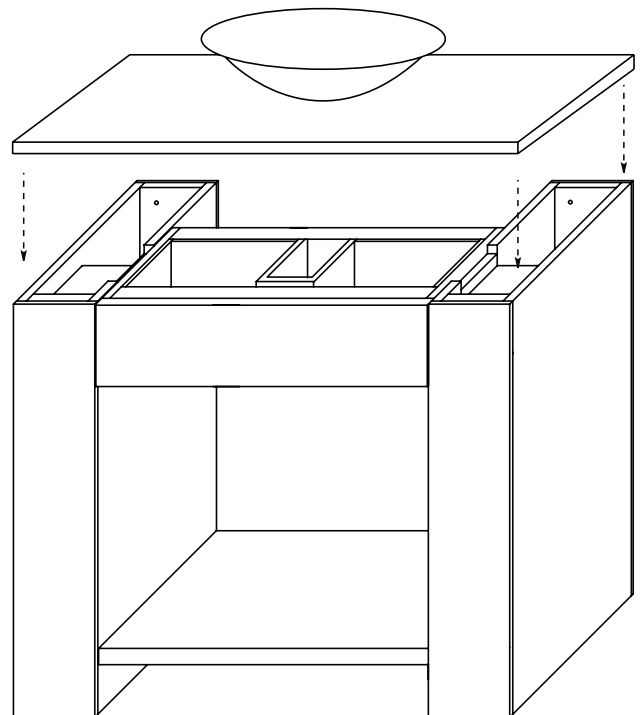

Step 4 : Secure top & back splash to cabinet by
using adhesive caulk

Model: 031430
031436

Contempo Collection

Note : For installing Ceramic Sinktop

Step 1 : Place adhesive around top of cabinet

See Figure 1.

Step 3 : Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

See Figure 2.

Step 4 : From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

See Figure 3.

Step 5 : Attach p-trap to tailpiece

Figure 1.

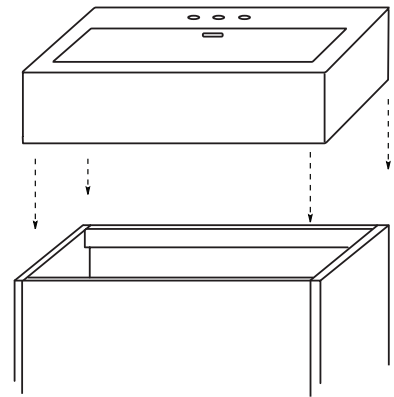


Figure 2.

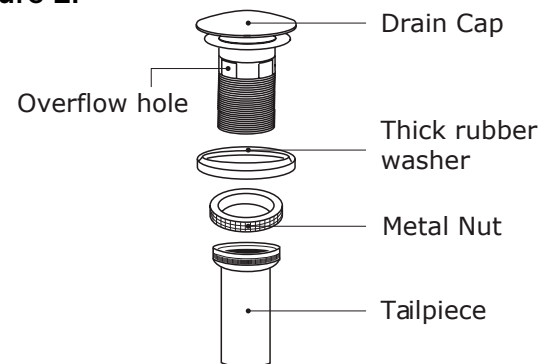


Figure 3.

