
CHANDELIER 2648(Finish Option) TRIM DIAGRAM

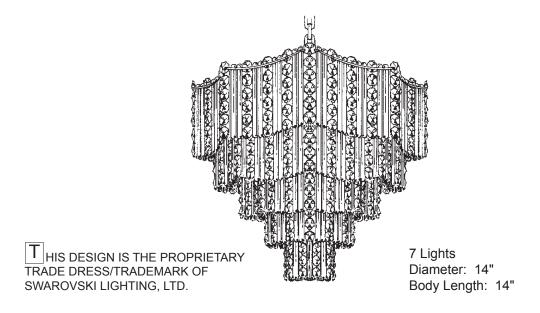

SCHONBEK®

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 9 pounds.

BULBS: (3) - Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.

(4) - Round shaped candelabra base G16-1/2 bulbs, recommend 25 watts for best appearance.

60 - Watt Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.


To clean the crystals, polish with a damp chamois.


You are cleaning delicate crystal... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

| | | IMPORTANT |
|---|---|---|
| Please record the following information for future service. | | |
| DDE | # | Four-digit number on outside of carton. |

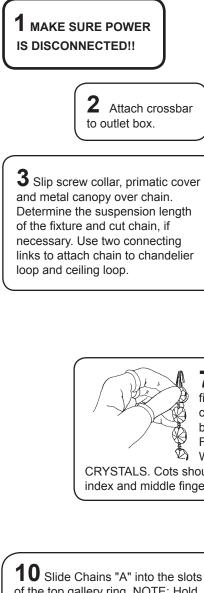


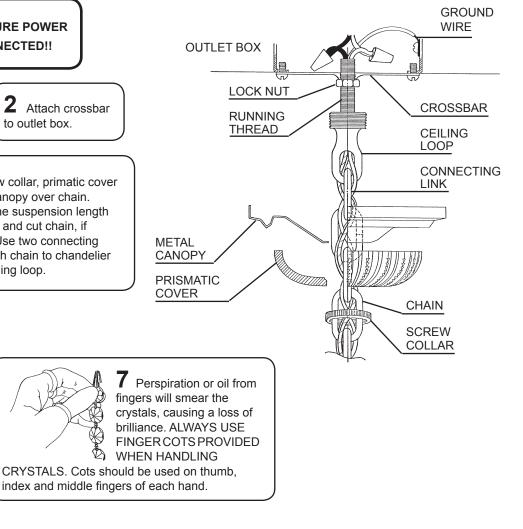

4 Insert stem wire through chain and ceiling loop. Connect wires. Fixture MUST be grounded.

5 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

6 Attach canopy to ceiling with screw collar. Screw bulbs into all socket(s). Test power to insure proper wiring before hanging trim from fixture.

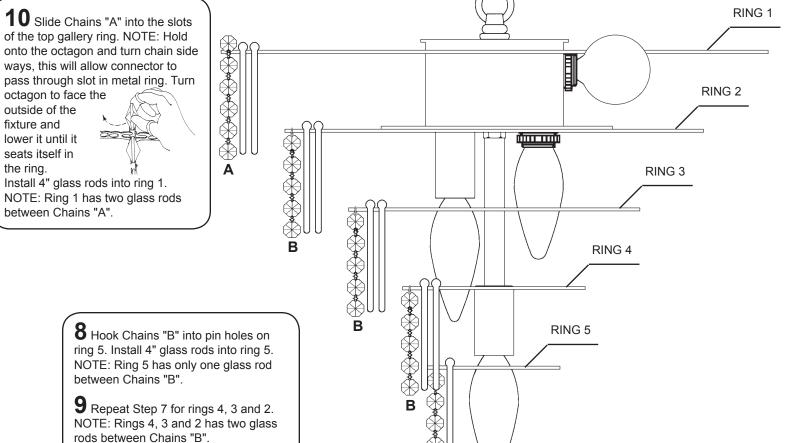

2648-