


Trim Diagram
Matrix Pendant MC0305**

Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.

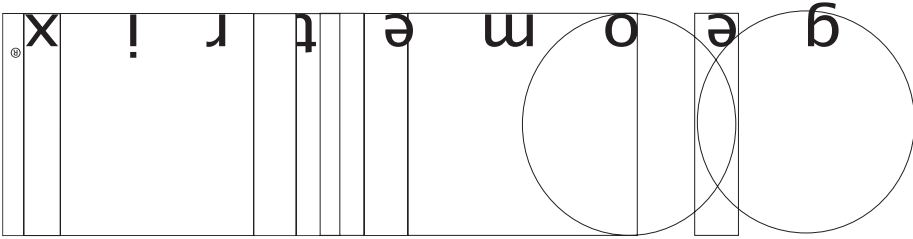


SCHONBEK
BEYOND LIGHTING®


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT 5,144,541 & #D532,169

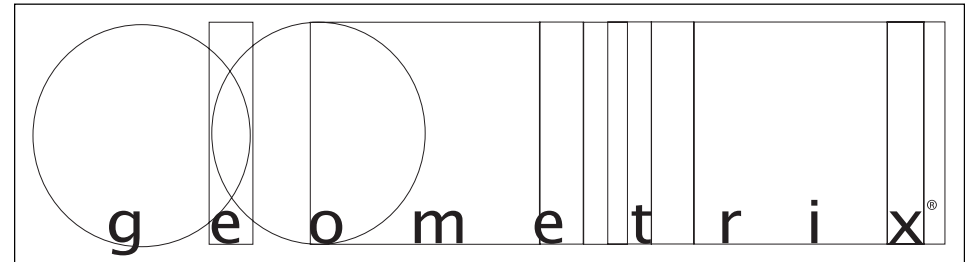

Trim Diagram
Matrix Pendant MC0305**

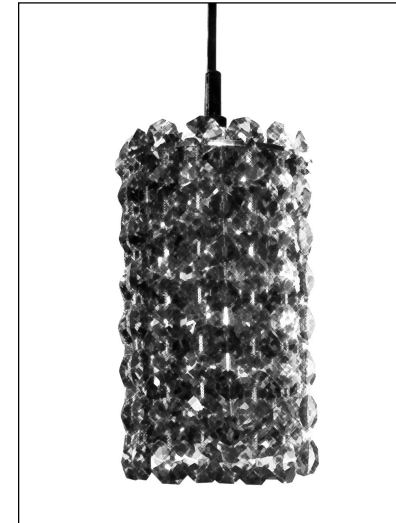

1 Light
3" x 5"

Geometrix™ is designed by Schonbek with Strass® crystal by Swarovski.




This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.


IMPORTANT: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



SCHONBEK
BEYOND LIGHTING®

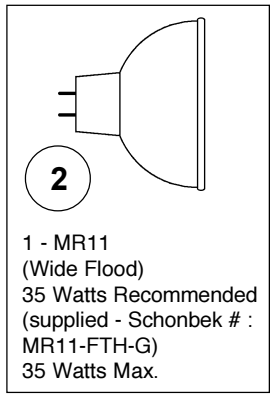


2 - MR11
(Wide Flood)
35 Watts Recommended
(supplied - Schonbek # :
MR11-FTH-G)
35 Watts Max.

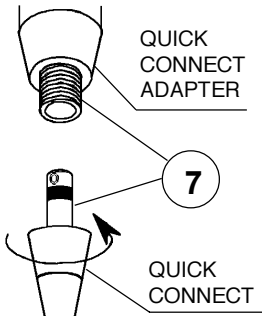

QUICK
CONNECT
ADAPTER

QUICK
CONNECT

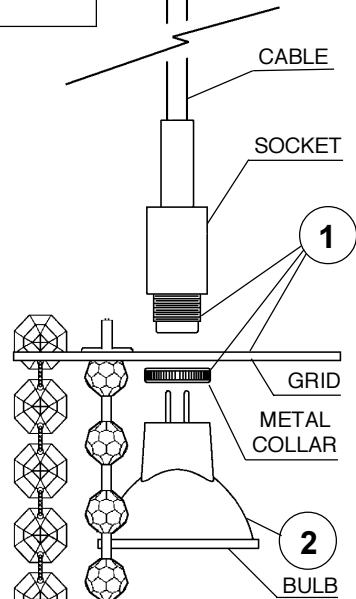

CABLE

SOCKET

GRID

METAL
COLLAR

BULB



Above top crystal bead in chain is a disk with tab. Make sure the tab seats firmly and lays flat in tab-shaped cut-out in grid.

DISK WITH
TAB


TAB-SHAPED
CUT-OUT

Follow this
Crystal Color Map!

C A/B or A

8
SLOT FOR
"A" AND "B"
OR "A"

9
SLIT FOR "C"

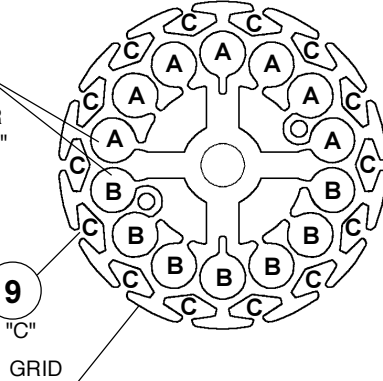


GRID

How to Install MR11 Bulb and Matrix™ Pendant:


Pendants may be mounted to monorail systems, monopoints or line voltage track by coupling to the quick connect transformer adapter. Attached to the socket is a cable that may be cut on site during installation to any length (see instructions below).

- 1 Position the pendant grid against the socket and secure in place by screwing the metal collar onto the socket.
- 2 Plug bulb carefully but completely into socket. Use only an MR11 glass covered lamp bulb.


How to Shorten the Cable:

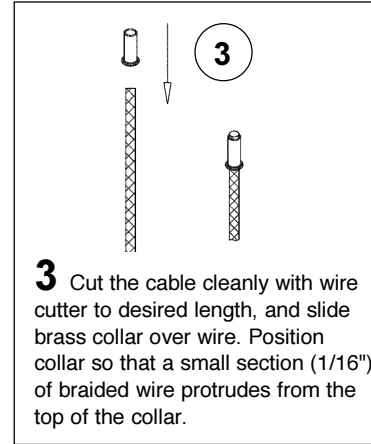


- 3 Cut the cable cleanly with wire cutter to desired length, and slide brass collar over wire. Position collar so that a small section (1/16") of braided wire protrudes from the top of the collar.

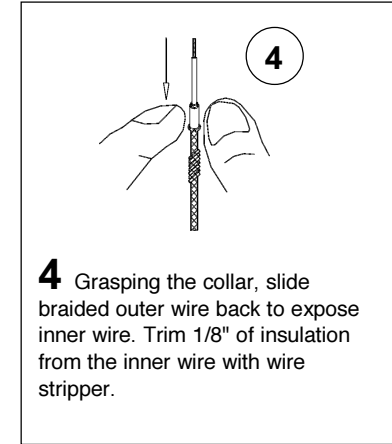

- 4 Grasping the collar, slide braided outer wire back to expose inner wire. Trim 1/8" of insulation from the inner wire with wire stripper.

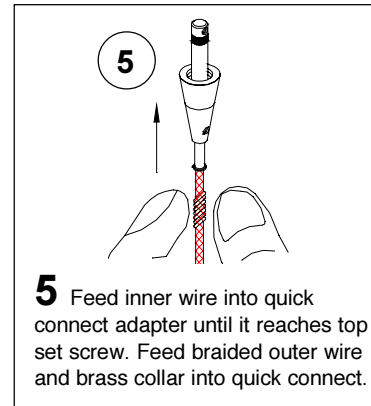

- 5 Feed inner wire into quick connect adapter until it reaches top set screw. Feed braided outer wire and brass collar into quick connect.

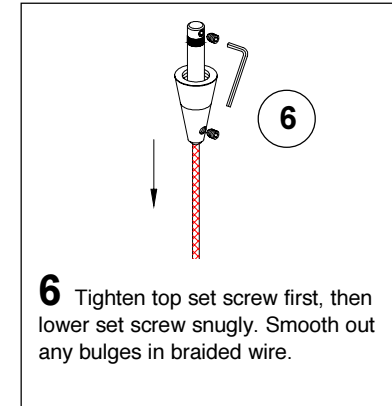

- 6 Tighten top set screw first, then lower set screw snugly. Smooth out any bulges in braided wire.

- 7 Screw quick connect into quick connect adapter until it seats. If you adjust the orientation of the pendant, be careful not to loosen the connection.

- 8 **A** For Standard Color trimsets: Hang A and B bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid. Make sure to follow A - B pattern shown.

B For Premium Color trimsets: Hang A bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid. **IMPORTANT:** Be sure to thread bottoms of crystal bead chains into slots in bottom grid to secure them in place.

- 9 Grasp C chain of crystal by the top crystal. Slip the chain through side opening of the grid slit. It will nest into position between the top and second crystal.