



Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.

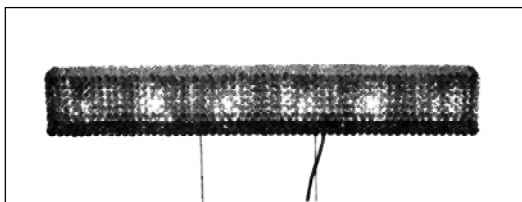


Trim Diagram
Matrix Pendant MT3605A

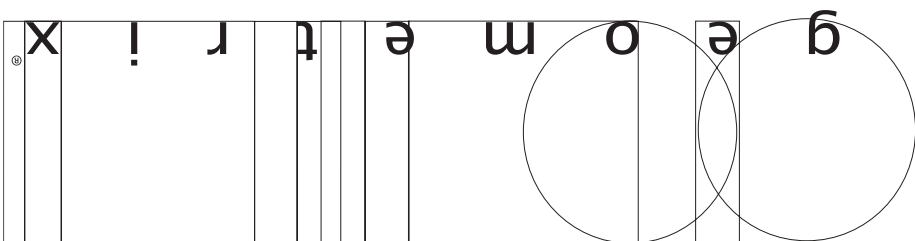


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT 5,144,541 & #D523,579 / CANADIAN DESIGN © #109751

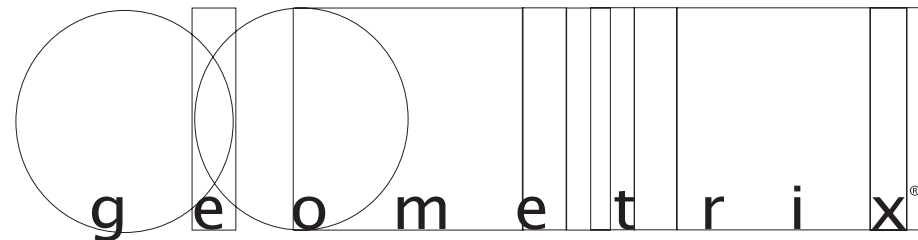

Trim Diagram
Matrix Pendant MT3605A

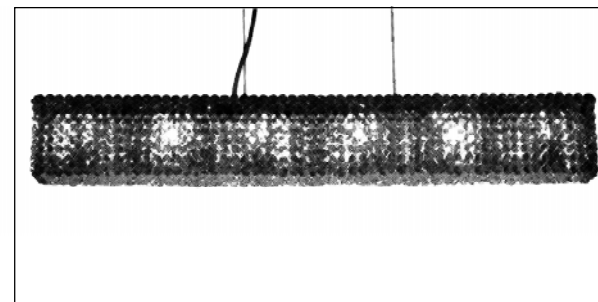

6 Lights
Length: 36.5", Width: 3.5", Height: 5.5"

Geometrix™ is designed by Schonbek with Swarovski Spectra® crystal.




This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc.

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.



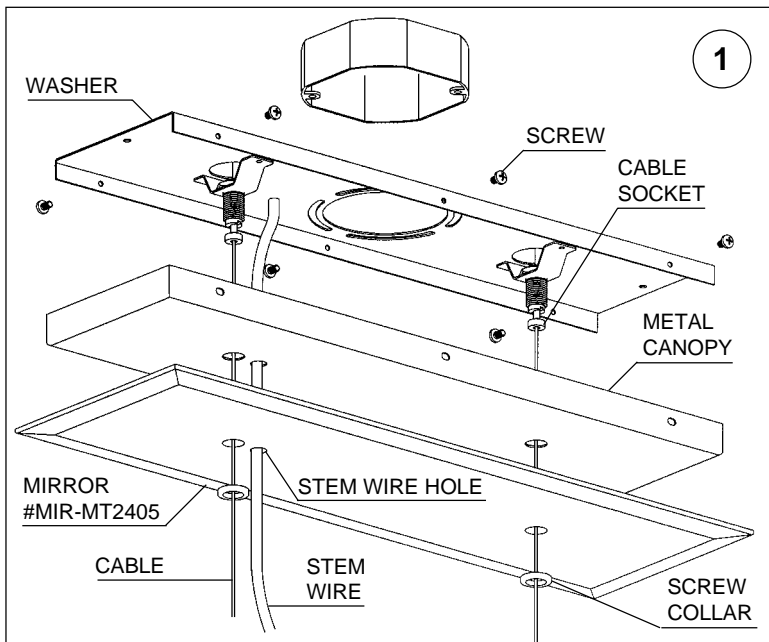

How to Install G9 Bulbs and Matrix™ Chandelier:


1 Remove screw collars, mirror and metal canopy from the canopy assembly. Feed cables through cable sockets. Attach washer to outlet box. Feed cables and stemwires through metal canopy, mirror and stemwire before attaching cables to frame. Loosen the safety nut on the cable glider by turning counter clockwise. Slide cable into glider and allow it to play out of the bottom of the frame temporarily. To adjust height loosen the safety nut and depress it until the cable is released to move the frame up and down the cable. Feed stem wire through stem wire hole in mirror and metal canopy (the smaller hole). When chandelier is at desired height, trim stem wire and connect ground wire (marked with green tracer) and power wires (black or white tracers) in outlet box. Raise metal canopy and mirror to ceiling and secure to running thread with the screw collar. Supplied on stem wire are 4 cable grips. Adjust along stem wire and clip to support cable as desired. Cut suspension cable with cable cutters leaving about 3/8" protruding from the bottom of the frame.

2 Plug bulbs carefully but completely into socket. Use only G9 JCD bulbs. Only use bulbs marked "suitable for open luminaires" OR bearing this symbol:

3 Install bottom crystal grid with eight thumb nuts (already screwed onto grid) to bottom of the chandelier.

4 Hang A bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid.

5 Grasp C chain of crystal by the top crystal. Slip chain through side opening of the top grid slit. It will nest into position between the top and second crystal.

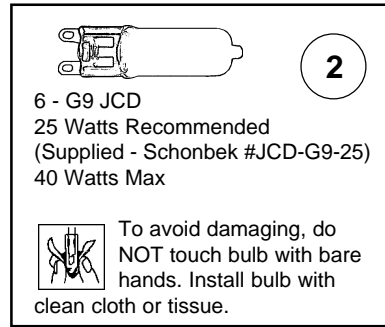

DETAIL: How to Orient Crystal Grid Perfectly

