


Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.


Trim Diagram
Matrix Wall Sconce MTW0606A

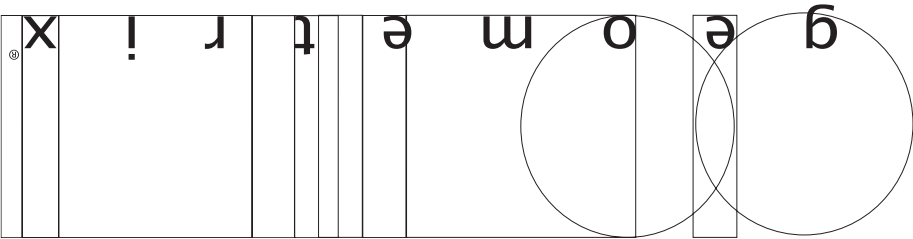


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2004 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT 5,144,541 & #D523,579

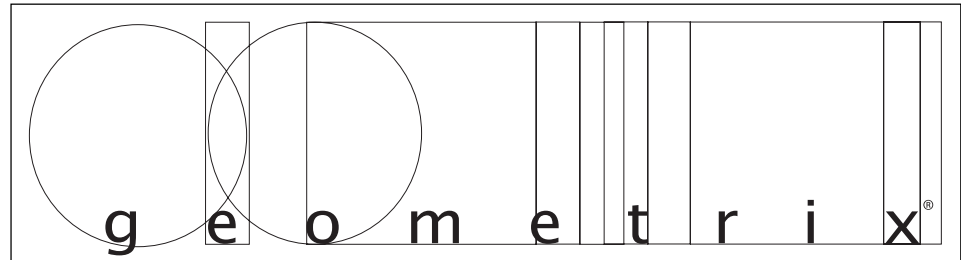

Trim Diagram
Matrix Wall Sconce MTW0606A

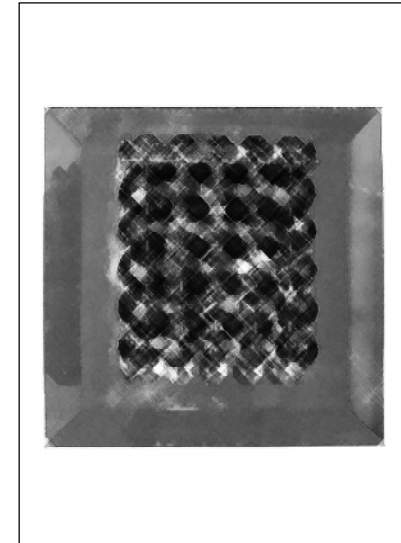

1 Light
Diameter: 6x6", extends 5-1/2"

Geometrix™ is designed by Schonbek with Swarovski Spectra® crystal.



This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc.

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.



How to Install MR16 Bulb and Matrix™ Wall Bracket:

- 1** Loosen the (4) wall sconce screws and separate the back plate from the wall sconce. Feed stem and ground wires through back plate, then attach to power wires and ground wire in outlet box.
- 2** Attach back plate to the outlet box with the (2) back plate screws supplied.
- 3** Attach wall sconce to back plate and tighten the four screws loosened previously.
- 4** Plug bulb carefully but completely into socket. Use MR16 glass covered lamp bulb.
- 5** Hang A bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid.
- 6** Grasp C chain of crystal by the top crystal. Slip the chain through side opening of the grid slit. It will nest into position between the top and second crystal.

