


Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.

Trim Diagram *** Recessed Vertex® VCR031**

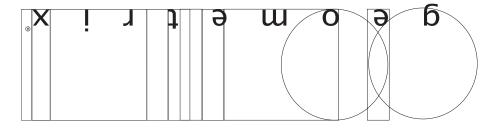




Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908 Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT #D522,169, #D522,687, #D522,685, #7,101,065 & #7,347,594

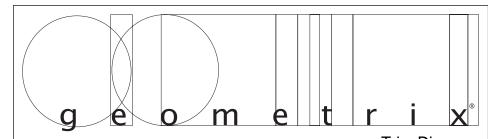

Trim Diagram Recessed Vertex® VCR031**



1 Light 3½" x 1"


Geometrix[™] is designed by Schonbek with Strass[®] crystal by Swarovski.

This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc


Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



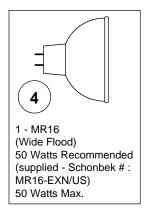



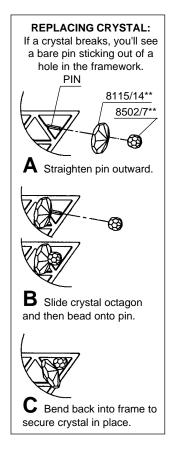

How to Install MR16 Bulb and Recessed Vertex®:

Recessed fixtures are mounted to the ceiling by miniature low voltage construction housing. These fixtures are only compatible with construction housings manufactured for Schonbek by W.A.C.

- Always turn off power to fixture. Follow instructions provided with the housing.
- **2** Squeeze spring steel legs of trim ring inward and push trim assembly up until trim ring is flush with ceiling.
- **3** Remove retaining ring from trim ring.
- 4 Plug bulb carefully but completely into socket. Use only an MR16 lamp (glass covered lamp bulb not required).
- **5** Place glass cover over bulb. Seat bulb against trim ring and reattach retaining ring to trim ring to hold bulb and cover up.
- **6** Mount crystal shade by holding shade up against the trim ring and turning clockwise, seating (3) pins into (3) pin slots.

