


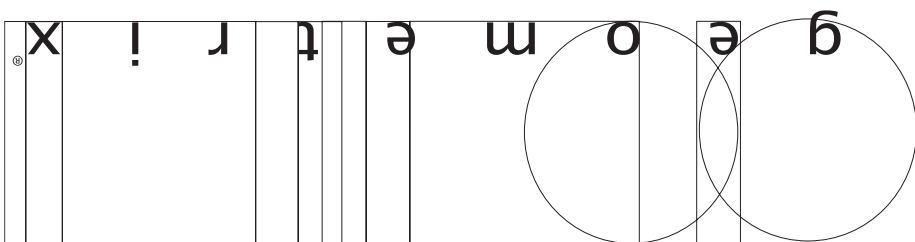

Important: Label on back contains
important information on your crystal color.
Please save in case you ever need to order
matching crystal.
Approved for installation on WAC
housing model numbers HR-8401E and
HR-8402E ONLY


Trim Diagram
ReCESSED Vertex® VCR432**



Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT #D522,169, #D522,687, #D522,685, #7,101,065 & #7,347,594

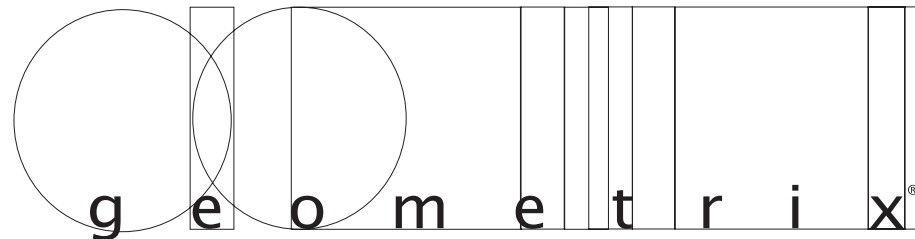

Trim Diagram
ReCESSED Vertex® VCR432**



1 Light
Diameter: 3½", Height: 1½"

Geometrix™ is designed by Schonbek
with Strass® crystal by Swarovski.




This design is the proprietary trade
dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important
information on your crystal color. Please save in case
you ever need to order matching crystal.



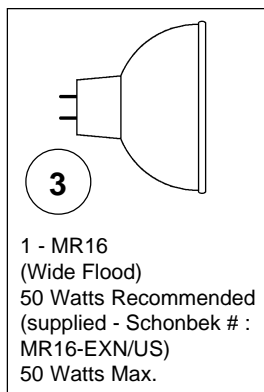

Approved for installation on WAC housing model
numbers HR-8401E and HR-8402E ONLY


How to Install MR16 Bulb and Recessed Vertex®:

Recessed fixtures are mounted to the ceiling by miniature low voltage construction housing. These fixtures are only compatible with non-insulated construction housings manufactured for Schonbek by W.A.C.


- 1** Always turn off power to fixture. Follow instructions provided with the housing.
- 2** Unscrew trim ring and add mounting washer. Screw trim ring with mounting washer inside back onto recessed lamp holder.
- 3** Plug bulb carefully but completely into socket. Use only an MR16 lamp (glass covered lamp bulb not required).
- 4** Place glass cover into the top of the recessed lamp holder. Seat bulb into the recessed lamp holder.
- 5** Squeeze spring steel legs of recessed lamp holder inward and push trim assembly up until the recessed lamp holder is flush with ceiling.
- 6** Mount crystal shade by holding shade up against the shade support ring and turning clockwise, seating (3) pins into (3) pin slots.

REPLACING CRYSTAL:

If a crystal breaks, you'll see a bare pin sticking out of a hole in the framework.

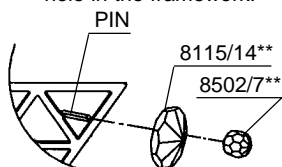

A Straighten pin outward.

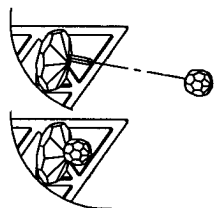

B Slide crystal octagon and then bead onto pin.



C Bend back into frame to secure crystal in place.

