


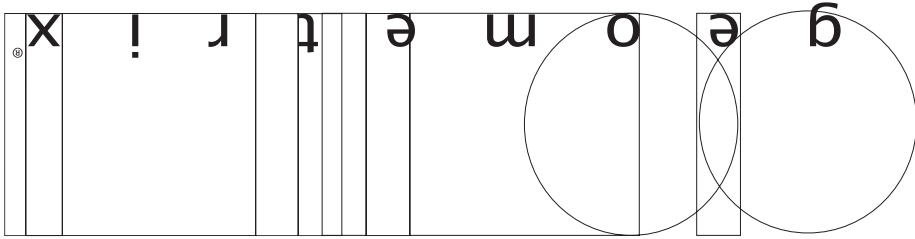

Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.  
 Approved for installation on WAC housing model numbers HR-8401E and HR-8402E ONLY


Trim Diagram  
 Recessed Vertex® VCR433\*\*



Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908  
 Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT #D522,169, #D522,687, #D522,685, #7,101,065 & #7,347,594

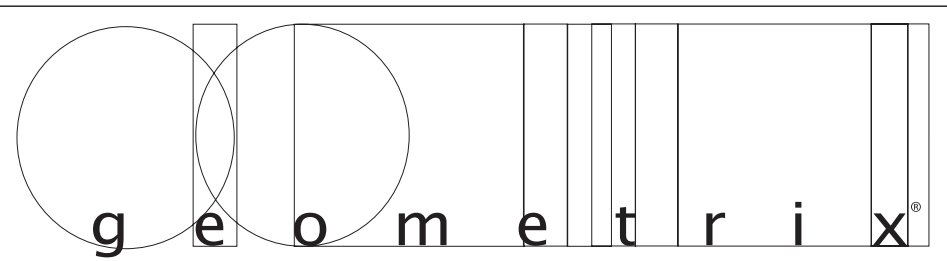

Trim Diagram  
 Recessed Vertex® VCR433\*\*



1 Light  
 Diameter: 3½", Height: 2"

Geometrix™ is designed by Schonbek with Strass® crystal by Swarovski.




This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



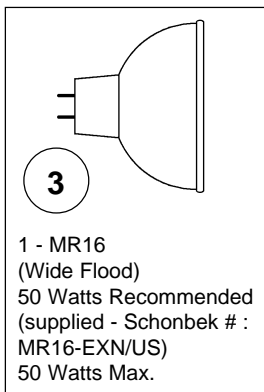

Approved for installation on WAC housing model numbers HR-8401E and HR-8402E ONLY

**How to Install MR16 Bulb and Recessed Vertex®:**

Recessed fixtures are mounted to the ceiling by miniature low voltage construction housing. These fixtures are only compatible with non-insulated construction housings manufactured for Schonbek by W.A.C.

- 1** Always turn off power to fixture. Follow instructions provided with the housing.
- 2** Unscrew trim ring and add mounting washer. Screw trim ring with mounting washer inside back onto recessed lamp holder.
- 3** Plug bulb carefully but completely into socket. Use only an MR16 lamp (glass covered lamp bulb not required).
- 4** Place glass cover into the top of the recessed lamp holder. Seat bulb into the recessed lamp holder.
- 5** Squeeze spring steel legs of recessed lamp holder inward and push trim assembly up until the recessed lamp holder is flush with ceiling.
- 6** Mount crystal shade by holding shade up against the shade support ring and turning clockwise, seating (3) pins into (3) pin slots.

**REPLACING CRYSTAL:**  
If a crystal breaks, you'll see a bare pin sticking out of a hole in the framework.

**A** Straighten pin outward.

**B** Slide crystal octagon and then bead onto pin.

**C** Bend back into frame to secure crystal in place.

**3 & 4**  
BULB

**4**  
GLASS COVER

**5**  
SPRING STEEL LEGS

RECESSED LAMP HOLDER

MOUNTING WASHER #42/101/5S

**2 & 6**  
(3) PINS

(3) PIN SLOTS

TRIM RING **2**

**6**  
SHADE #87/247/1\*\*