


Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.


Trim Diagram
Vertex® Pendant VR0708**

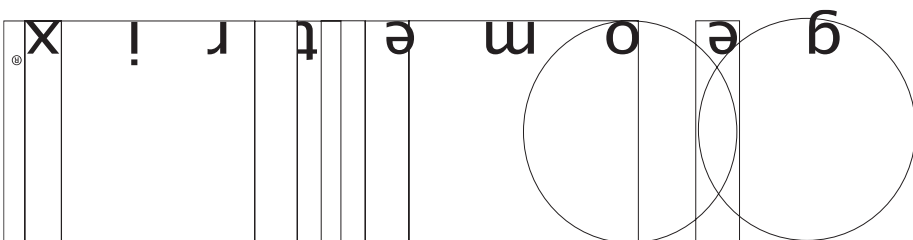


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2005 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT #D522,683m, #D522,687, #7,101,065, #D532,144, #D560,027 & #7,347,594

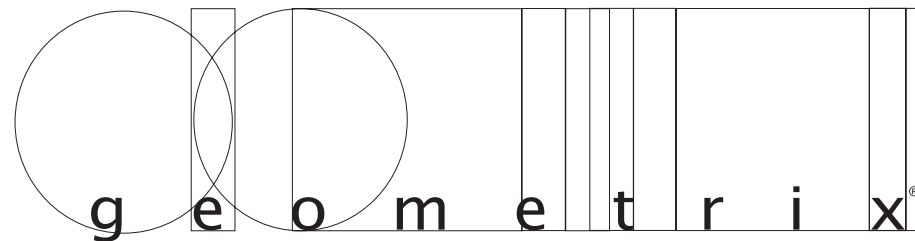

Trim Diagram
Vertex® Pendant VR0708**

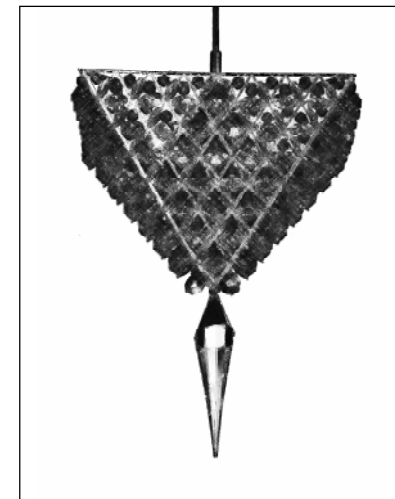

4 Lights
6½ x 6½ x 8"

Geometrix™ is designed by Schonbek with Strass® crystal by Swarovski.




This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.


IMPORTANT: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



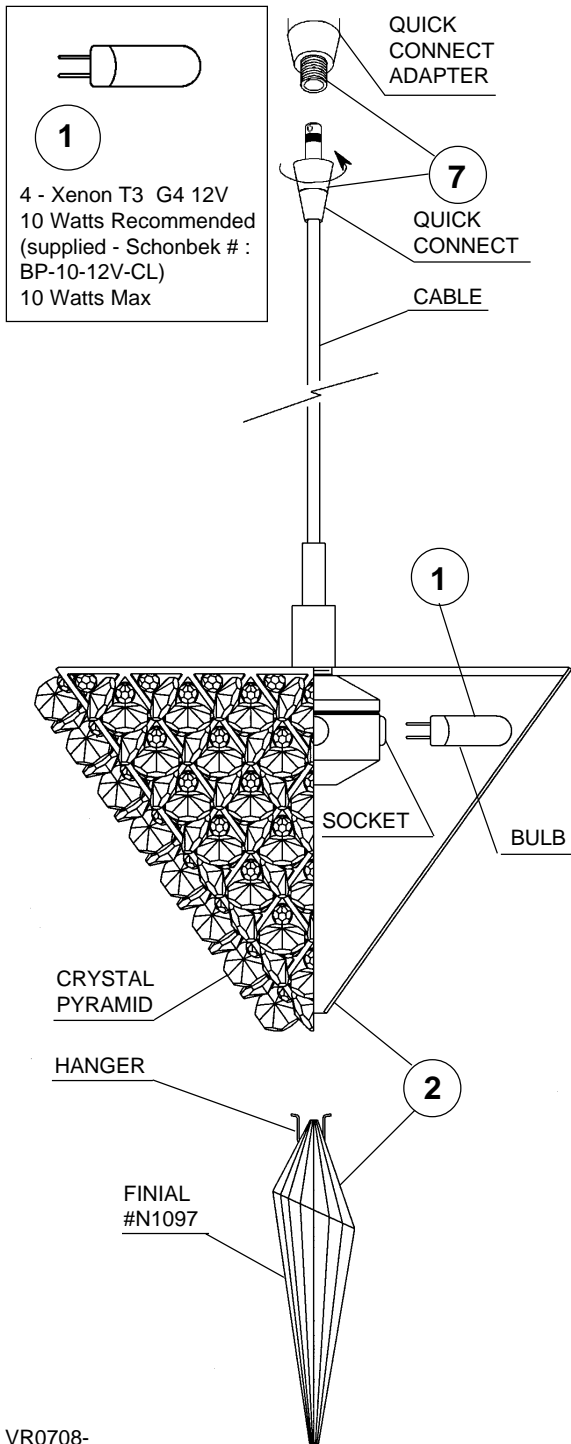


REPLACING CRYSTAL:

If a crystal breaks, you'll see a bare pin sticking out of a hole in the framework.

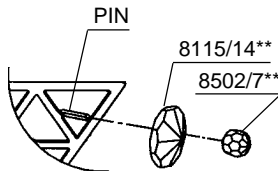

A Straighten pin outward.

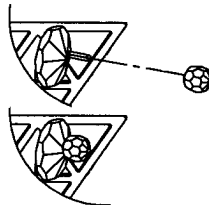

B Slide crystal octagon and then bead onto pin.




C Bend back into frame to secure crystal in place.

How to Install Xenon Bulb and Vertex® Pendant:


Pendants may be mounted to monorail systems, monopoints or line voltage track by coupling to the quick connect transformer adapter. Attached to the socket is a cable that may be cut on site during installation to any length (see instructions below).

- 1** Plug bulbs carefully but completely into sockets. Use four Xenon T3 G4 12V bulbs.
- 2** Attach crystal finial N1097 to bottom point of crystal pyramid by pinching the hanger together and inserting.


How to Shorten the Cable:

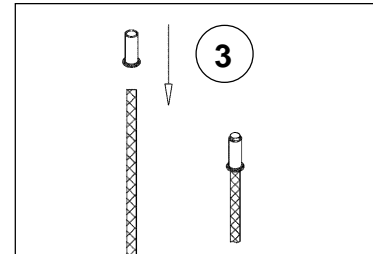


3 Cut the cable cleanly with wire cutter to desired length, and slide brass collar over wire. Position collar so that a small section (1/16") of braided wire protrudes from the top of the collar.

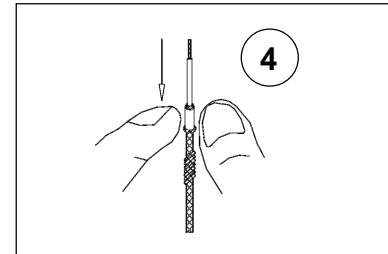

4 Grasping the collar, slide braided outer wire back to expose inner wire. Trim 1/8" of insulation from the inner wire with wire stripper.

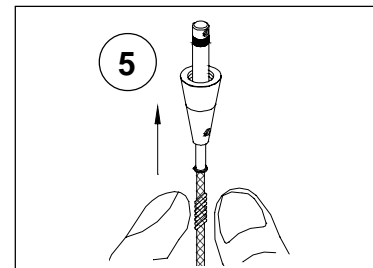

5 Feed inner wire into quick connect adapter until it reaches top set screw. Feed braided outer wire and brass collar into quick connect.

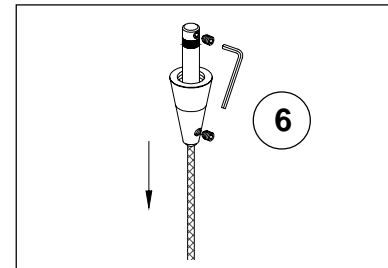

6 Tighten top set screw first, then lower set screw snugly. Smooth out any bulges in braided wire.

- 7** Screw quick connect into quick connect adapter until it seats. If you adjust the orientation of the pendant, be careful not to loosen the connection.

