DEAR VALUED CUSTOMER PLEASE HANDLE ACRYLIC DIFFUSER WITH CARE WHEN INSERTING INTO HOUSING TO PREVENT BREAKAGE.

- on the opposite side.

 3. Reinsert starter into starter block until you hear a click.
- 1. Remove starter from starter block.

 2. Rotate starter 180° so that the posts on the starter are

not come on, please follow these instructions:

NOTE: After assembling fixture, if the bulb blinks but will

HEAR A CLICK.

NOTE: BEFORE MOUNTING FIXTURE, MAKE CERTAIN STARTERS, IF SUPPLIED, ARE LOCKED IN PLACE BY FIRMLY TURNING CLOCKWISE INTO PLACE UNTIL YOU

Snap in diffuser (A).

STEP 3:

install lamp.

STEP 2:

Secure with nuts (C).

After wires are connected, replace ballast compartment cover (B).

:1 GTEP 1:

FINAL ASSEMBLY

POWER SUPPLY WIRES.

NEVER CONNECT GROUND WIRE TO BLACK OR WHITE

a small wire connector (not supplied). MOTE: Underwriters Laboratories (U.L.) does not require all fixtures to have ground wires. These fixtures still meet all U.L. specifications. The listing mark of Underwriters on the product identifies products manufactured under its listing and Follow-Up Service Programs.

GROUNDING INSTRUCTIONS: Connect the ground wire from the fixture (if supplied) and the ground wire from the supply wires using

:Y GETS

connector (not supplied).

Attach white wire from fixture, to the white supply wire using a wire

:9 GETS

instructions.

- instructions. C. If wiring with optional G.C.O. wiring
- the black supply wire.

 B. If wiring with optional switch consult optional switch wiring
- A. If wiring with supplied switch, attach black wire (or red wire which ever is applicable) from ballast (G) to one switch (D) wire, with a wire connector (not supplied). Attach the other switch (D) wire to

STEP 5:

Mount fixture housing in desired location using mounting screws (F).

STEP 4:

INSTALLATION HC-282


INSTALLATION AND SAFETY INSTRUCTIONS

GENERAL

You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. NOTE: Proper wiring is essential for the safe operation of this fixture. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician.

WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF. EITHER THE FUSE REMOVED OR THE CIRCUIT BREAKER OFF.

NOTE: FOR FIXTURES PROVIDED WITH 75°C OR 90°C SUPPLY WIRE ONLY—(THESE WARNINGS ARE PROVIDED ON THE U.L. LABEL AND ON THE FIXTURE CARTON): RISK OF FIRE. MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60°C. CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.

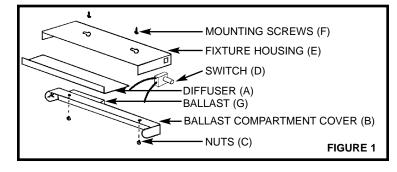

INSTALLATION

Carefully remove the fixture from the carton and check that all parts are included, as shown in Figure 1. Be careful not to misplace any of the screws or parts which are needed to install this fixture.

IF SUPPLY WIRES ARE LOCATED WITHIN 3" OF BALLAST, USE WIRE RATED FOR AT LEAST 90°C.

- 1. Remove diffuser (A). Remove ballast compartment cover (B) by taking off the (2) nuts (C) at each end of the fixture.
- **2.** Attach switch (D) by removing knock out required. Install switch and secure in place with round nut (if applicable).
- 3. Knock out hole for power supply in fixture housing (E). In the knocked-out hole insert a "Romex Type" connector (not supplied) or a "BX type" connector (not supplied) which-ever is applicable. Feed supply wires through it and secure the wires in place.

WARNING: FOR FIXTURES PROVIDED WITH 75° C OR 90° C SUPPLY WIRE WARNING ONLY (THESE WARNINGS ARE PROVIDED ON THE U.L. LABEL AND ON THE FIXTURE CARTON).

WARNING: RISK OF FIRE. MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60° C. CON-SULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.

ITEM#

Fill in item number located on carton and file this sheet for future reference.

HC-282