

404040

AD150-62

Solid Brass


Pocket Door-Privacy Latch

NOTE: Always lubricate screw threads with soap or wax for easier application.




WARNING:
Protect Your Eyes,
Wear Safety Goggles

INSTALLATION INSTRUCTIONS:

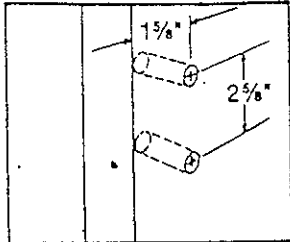

1. Drill $\frac{1}{4}$ " diameter holes through door $1\frac{5}{8}$ " back from edge and $2\frac{5}{8}$ " apart as shown.

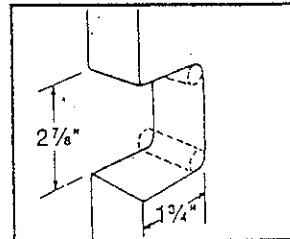


2. Cut notch in door $1\frac{3}{4}$ " deep and $2\frac{7}{8}$ " high as shown. Use holes drilled in step 1 to form corners.

3. Place unit in position. Tighten screws "A" equally until unit is centered in notch.

4. Drill $\frac{3}{32}$ " pilot holes "B" approximately the length of shorter screw threads and fasten.


5. With latch in locked position, mark position of strike plate on jamb to correspond to lock position on latch. Mortise the area.

6. Drill hole in center of mortise $\frac{15}{16}$ " in diameter, $\frac{1}{2}$ " deep. Mark screw hole locations. Drill $\frac{3}{32}$ " pilot holes approximately the length of longer screw threads and fasten.

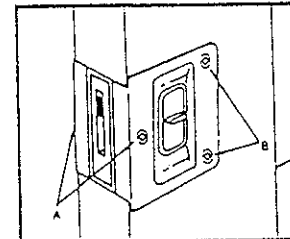

TO INSURE BRILLIANCE OF BRASS FINISH, ONLY CLEAN WITH SOFT CLOTH AND MILD SOAP AND WATER. DO NOT USE BRASS CLEANER OR ABRASIVE MATERIALS.


Reversing Plates for Right and Left Hand Door Applications

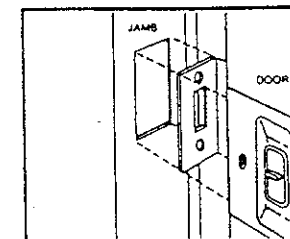

1. Disassemble by completely removing machine screws on latch.

2. Reverse plates making sure plate pins engage each other in fork arm.

3. Re-assemble.

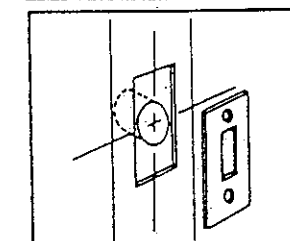

STANLEY HARDWARE
Division of The Stanley Works
P.O. Box 1480
New Britain, CT 06050 USA
Made in Taiwan to Stanley
Hardware Specifications (B)