


## STONE FOREST VESSEL INSTALLATION

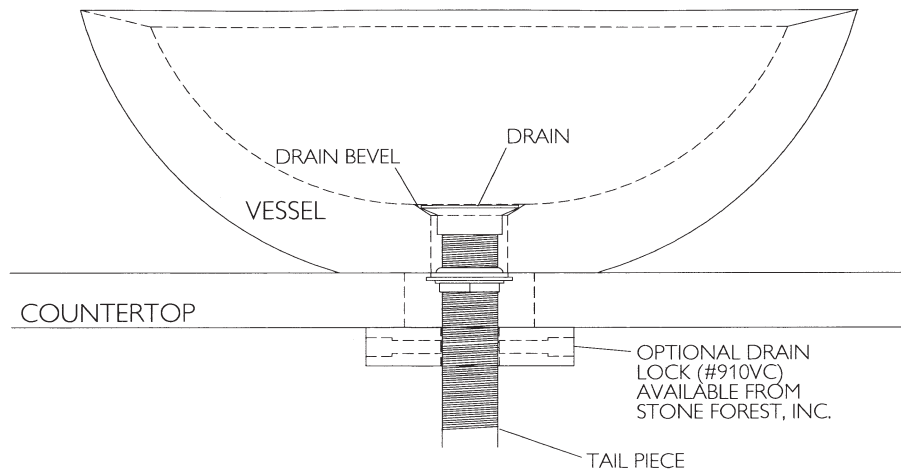

Required drain use 9054D Grid Drain or 9058D Lift and Turn Drain. Drains are 1.25" NPT. This can be supplied by Stone Forest at your request in select finishes.

Do not use pop-up drains

Fasten drain to vessel per drain instructions. DAP Qwik Seal or Henkels PolySeam Seal can be used between the drain bevel and drain. Do not use plumbers putty.

A 3" hole in counter material is needed.

Secure the vessel to the countertop using a bead of silicon or construction adhesive.

A drain lock is available from Stone Forest if needed. This collar can be fastened to the drain pipe and used to anchor the vessel to the counter material using the drain.