

WARRANTY
Limited Lifetime – Residential
Limited 5-year – Commercial

FEATURES

- Will not mold or mildew, no grout to clean
- Coordinates with Swanstone shower and bath systems
- Slip-resistant surface
- Made of Veritek with no surface coating to chip or crack
- FBF-3060 Can be recessed for flush mounting or can be used with a ramp.



Model	Nominal Size	Rough-In Dimensions			
		60"	30"	8"	15"
FBF-3060L Barrier Free (left side drain)	30" x 60"	60-3/8"	30-3/16"	8-3/16"	15-3/16"
FBF-3060R Barrier Free (right side drain)	30" x 60"	60-3/8"	30-3/16"	8-3/16"	15-3/16"

IMPORTANT: Rough-in dimensions are provided for reference only. You must measure the actual shower floor and check local building code requirements before construction of the stud wall.

SPECIFICATIONS

Barrier Free Shower Floors With Fit-Flo Drain

Model	Part	Nominal Size Dimensions	Ship Wt. Lb.	Ship UPS	Carton Dims. In.	Cu. Ft.
FBF-3060L	FB03060LM	30" D x 60" W – Left Drain (762 mm x 1524 mm)	64	–	66 x 36 x 10	14
FBF-3060R	FB03060RM	30" D x 60" W – Right Drain (762 mm x 1524 mm)	64	–	66 x 36 x 10	14
FBF-1260	FB01260	12" D x 60" W – Ramp (306 mm x 1524 mm)	25	–	66 x 14 x 2	1.07

Kit Includes: One code approved compression molded Veritek® shower floor with molded-in Fit-Flo drain and complete installation instructions.

Packaging: Each floor packed in a rectangular carton.

ACCESSORIES



See page 107 for complete listing of all Universal Design accessories.

STANDARDS AND RATINGS

- Class B fire rating
- American National Standard Institute—ANSI Z124.1.2–2005
- International Association of Plumbing and Mechanical Officials (IAPMO)—listed cUPC listed—Certified to CSA Standard B45 by IAPMO
- American Society for Testing and Materials
- National Electrical Manufacturers Association

SUPPORT DOCUMENTS

Installation instructions available on line at www.swanstone.com

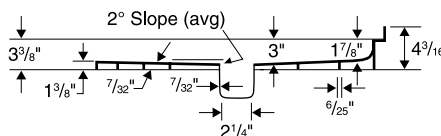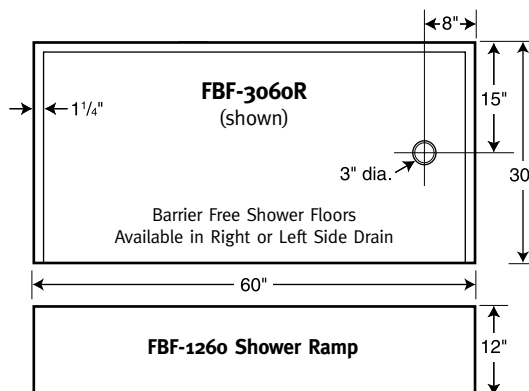

COLORS (See pg. 139 for color sample.)

- White (010)
- Bone (037)
- Bisque (018)

MAINTENANCE AND CLEANING INFORMATION

Everyday cleaning should consist of liquid cleaners such as Dow or Lysol foaming bubbles, Top Job, Mr. Clean or liquid Lysol along with a sponge. Remove hard water stains, mineral or soap build-up with scale removers such as Lime-Away. If necessary, you may use an abrasive cleaner such as Ajax or Comet with a nylon brush or pad to remove build up on the pebble surface. Do not use steel wool or a wire brush. An abrasive cleaner, brush or pad will not remove the finish because the color is molded throughout. However, it is best to avoid the higher sheen surface of the floor. Prolonged scrubbing of this area could cause it to look dull and promote soap build up.