

# Ulti MATE

FULLY MODULAR / EXPANDABLE DESIGN

# PRO GARAGE


## ASSEMBLY INSTRUCTIONS

**Three Drawer Base Cabinet**

**Model Number # GA-04P**

**In the unlikely event of missing or damaged parts**

**PLEASE CALL: 800-344-7005**

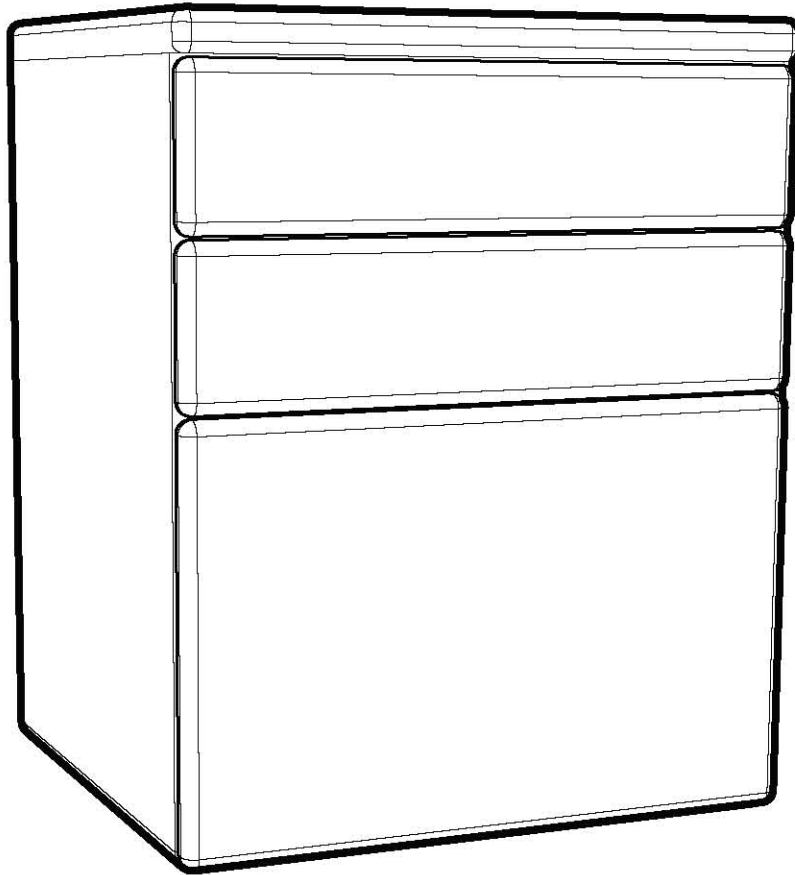

PARTS LIST

Ulti MATE


FULLY MODULAR / EXPANDABLE DESIGN


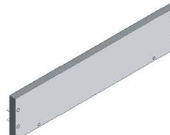



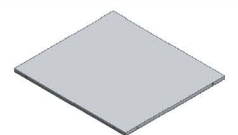






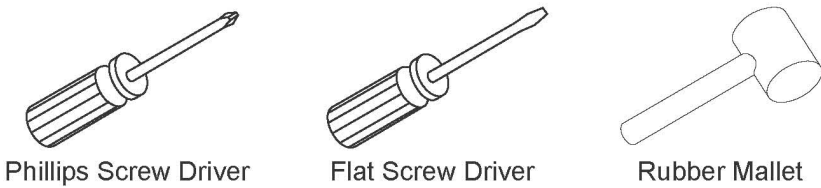




PRO GARAGE

BASE CABINET MODEL #GA-04P

In the unlikely event of missing or damaged parts  
PLEASE CALL: 800-344-7005

TOOLS NEEDED FOR  
ASSEMBLY

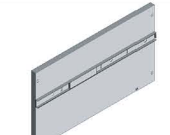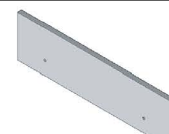

#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
a	Side Panel (RIGHT)	1		b	Small Drawer (RIGHT)	2	
c	Side Panel (LEFT)	1		d	Small Drawer (LEFT)	2	
e	Bottom Panel	1		f	All Drawers (BOTTOM)	3	
g	Top Work Surface	1		h	Large Drawer (BACK)	1	
i	Back Panel	1		j	Large Drawer (RIGHT)	1	
k	Large Drawer Face	1		l	Large Drawer (LEFT)	1	
m	Drawer Face	2		n	Spanner (TOP)	1	
o	Small Drawer (BACK)	2		p	Spanner (BOTTOM)	1	
				q	Wall Cleat	1	

PARTS LIST

Ulti MATE

FULLY MODULAR / EXPANDABLE DESIGN

PRO GARAGE


BASE CABINET MODEL #GA-04P

In the unlikely event of missing or damaged parts  
PLEASE CALL: 800-344-7005

#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
aa	Screw (7 x 50mm)	4		bb	Wooden Dowel	8	
cc	Cam	24		dd	Metal Dowel	24	
ee	Screw (4.5 x 55mm)	2		ff	Wall Anchor	2	
gg	Screw (4 x 15mm)	4		hh	Screw (4.5 x 42mm)	12	
ii	Wall Cleat Grommet	2		jj	Touch Up Paint	1	
kk	Logo Plate	1					


**USE THESE ACCESSORIES WITH ULTIMATE PRO GARAGE**

Visit [www.ebladez.com](http://www.ebladez.com) or call 800-344-7005

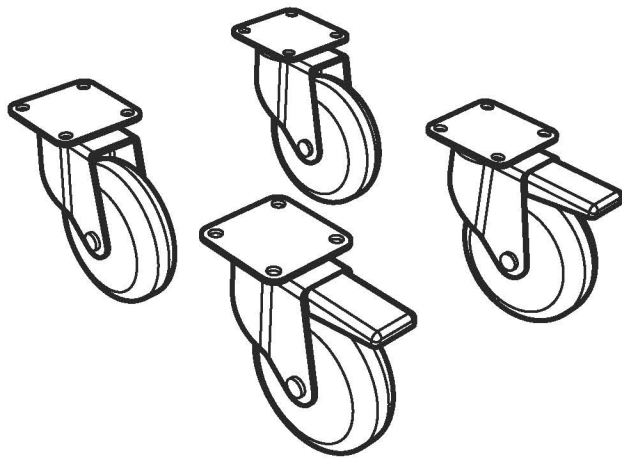


**Caster Set**

GR-RCS4 - 4" Caster Set 4(pc)

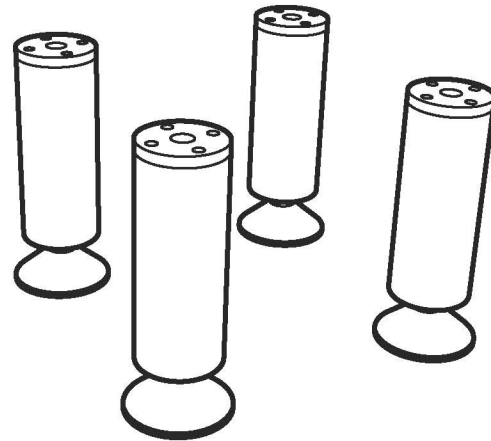


**Adjustable Foot Set**

GA-F6C - 6" Satin Chrome 4(pc)  
GA-F6B - 6" Black Coated 4(pc)  
GA-F4B - 4" Black ABS 4(pc)

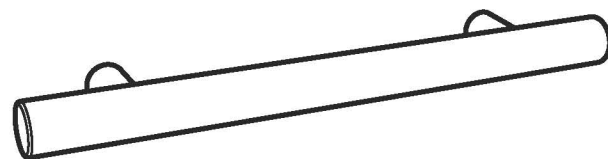


**250mm L x 20mm Dia. Pull**

GA-HA250C - Satin Chrome 2(pc)  
GA-HA250B - Black Coated 2(pc)

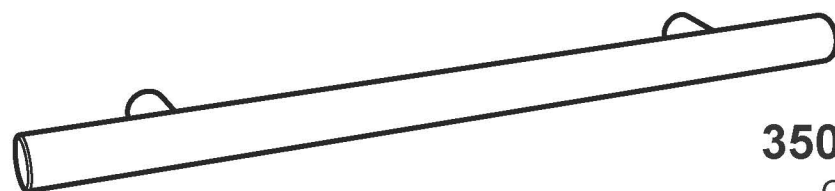

**350mm L x 20mm Dia. Pull**

GA-HA350C - Satin Chrome 2(pc)  
GA-HA350B - Black Coated 2(pc)

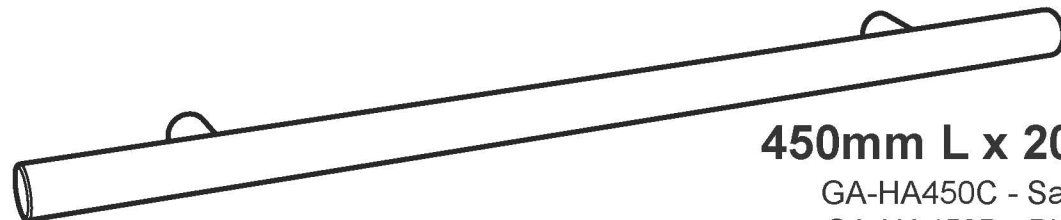


**450mm L x 20mm Dia. Pull**

GA-HA450C - Satin Chrome 2(pc)  
GA-HA450B - Black Coated 2(pc)

**BEFORE YOU BEGIN**

CAM STYLE FASTENERS ARE USED THROUGHOUT THE ASSEMBLY OF THIS CABINET. ASSEMBLE ALL CAMS AS SHOWN BELOW.

1.

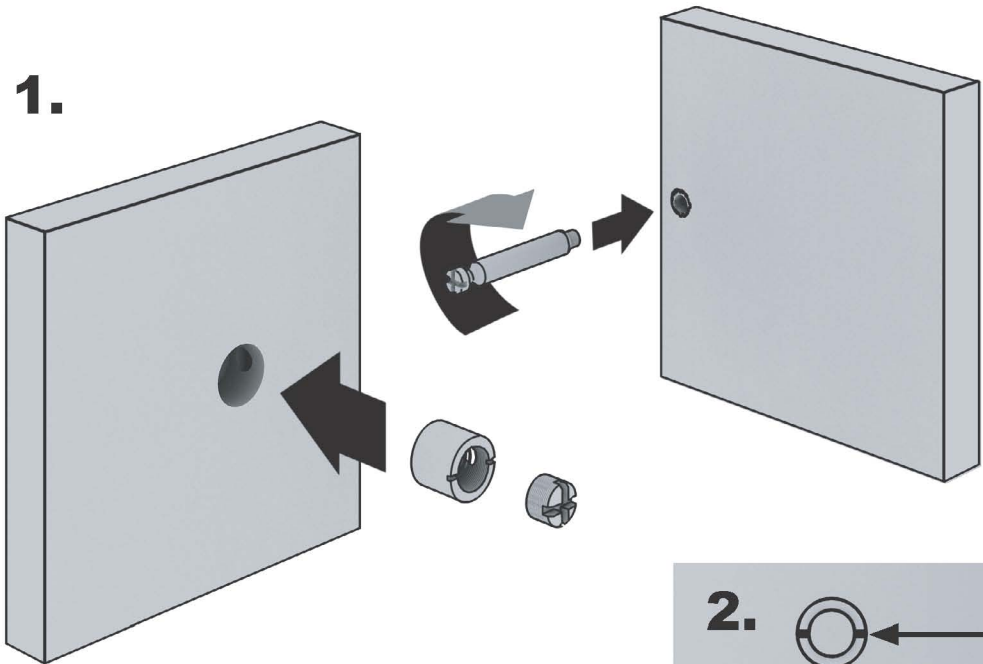


2.




ALIGN CAM SLOT  
WITH SCREW / HOLE

3.

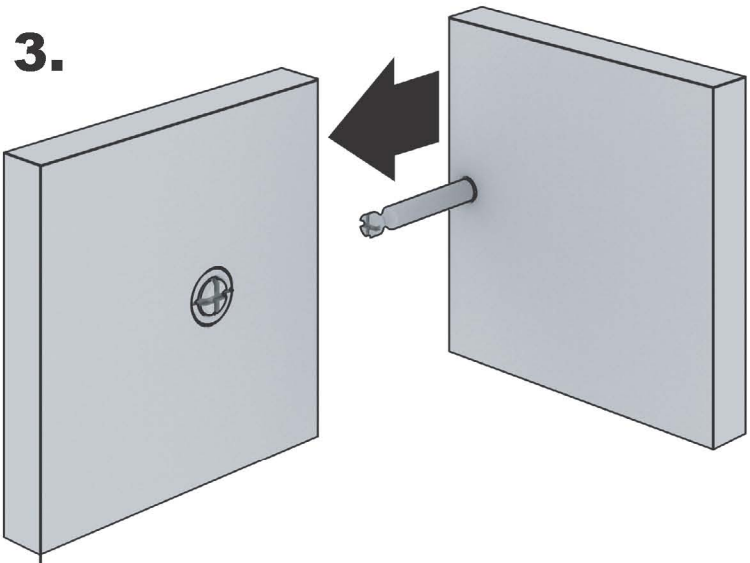


4.

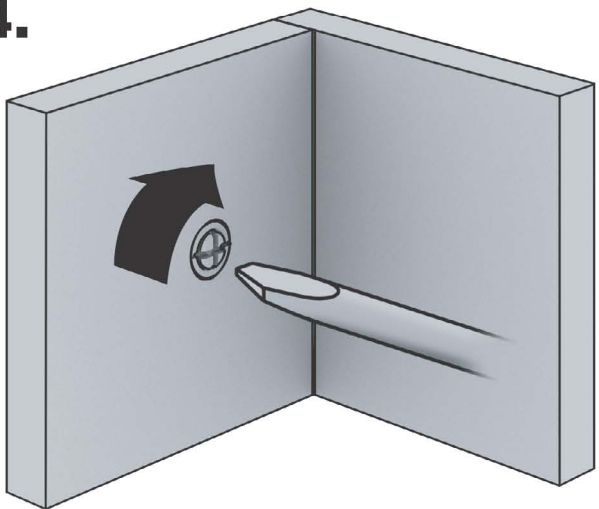


**DO NOT OVERTIGHTEN**




STEP 1

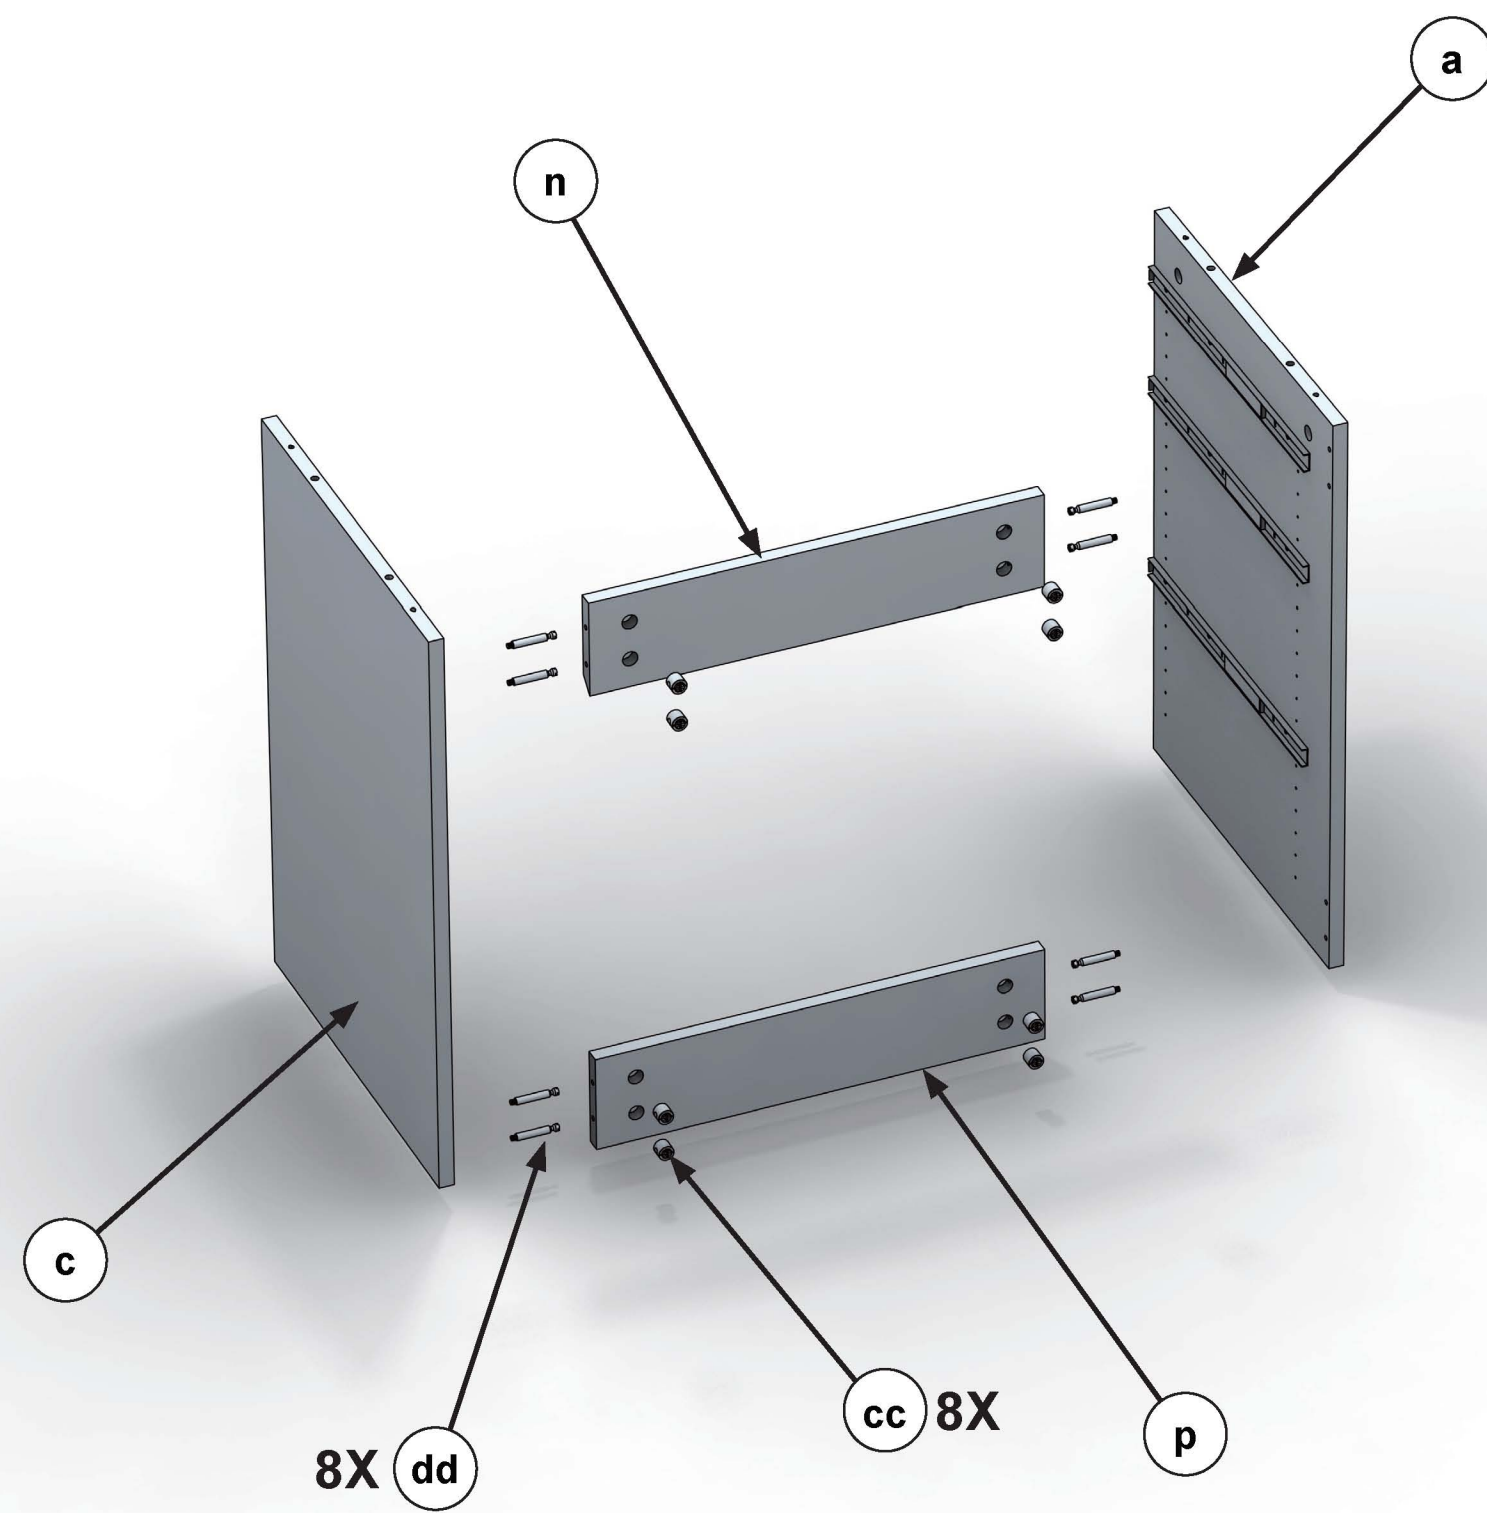

STEP 2

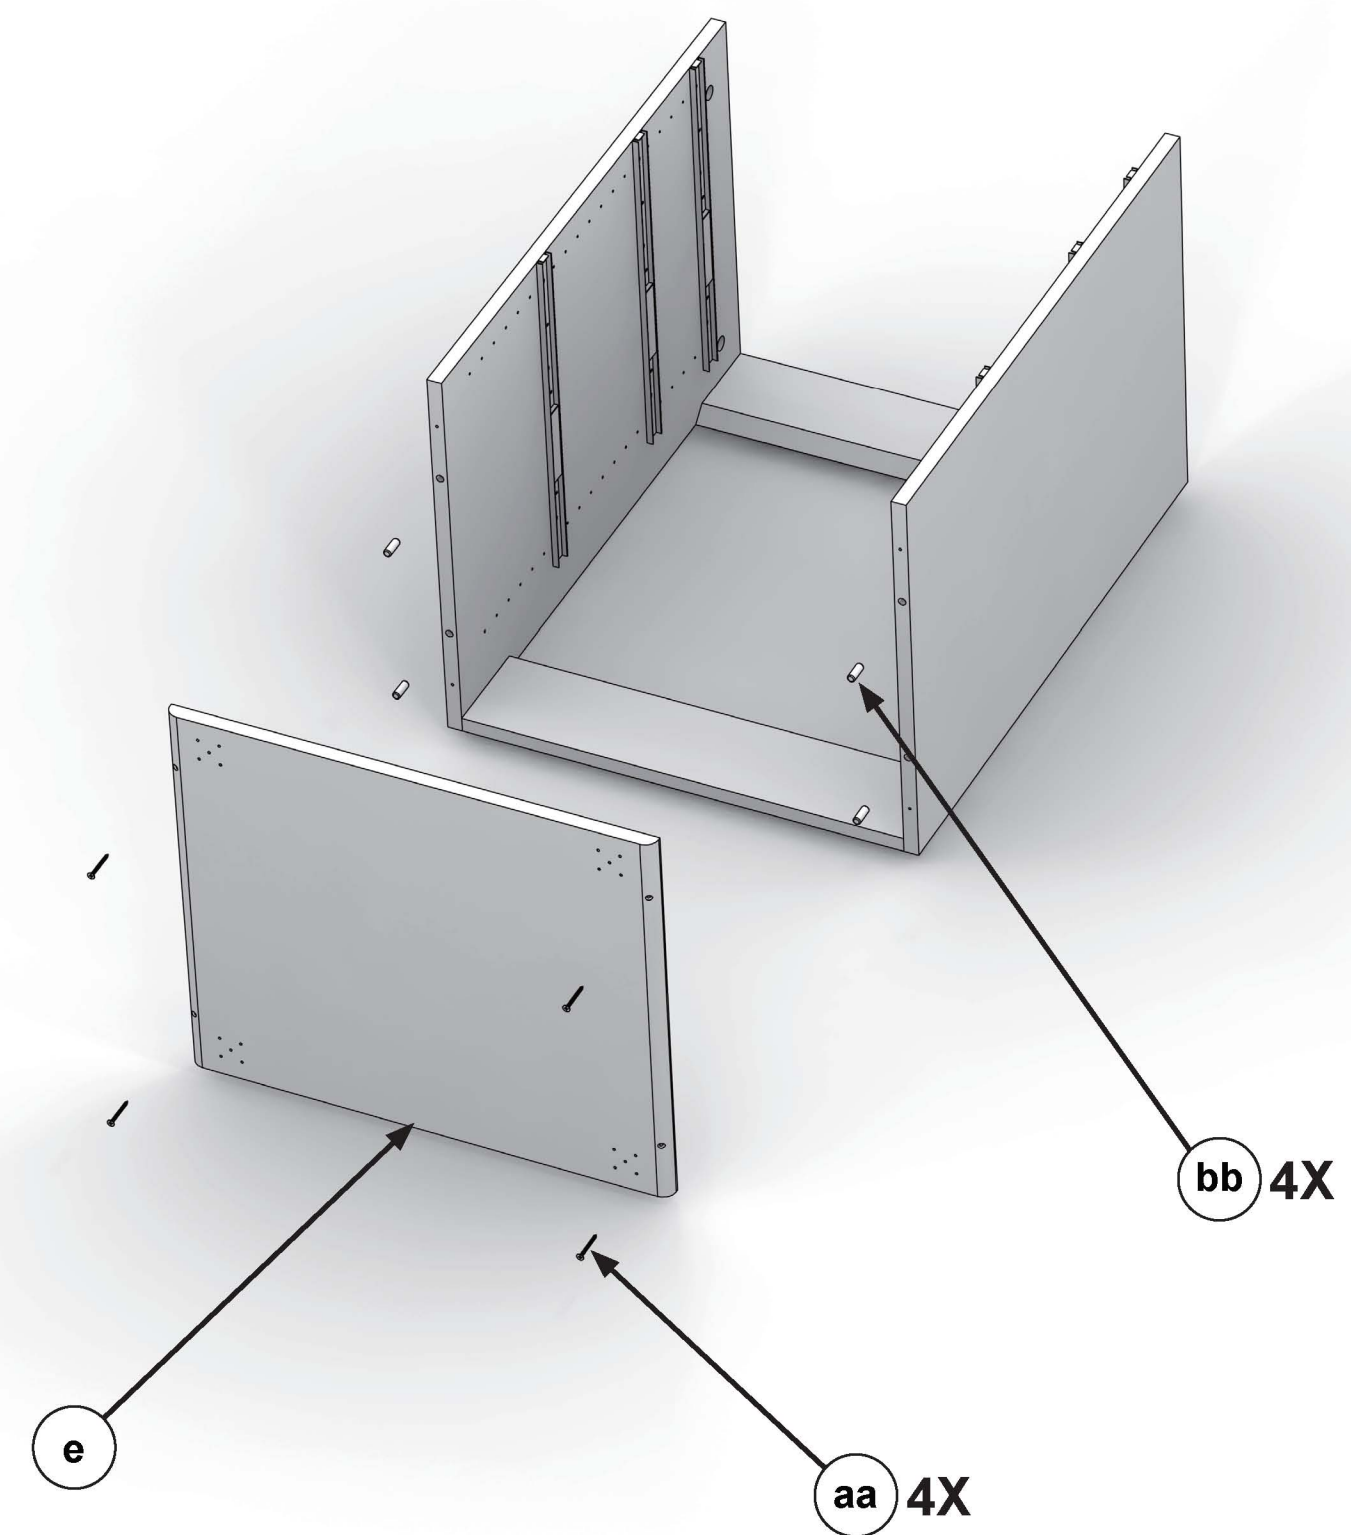

## STEP 3

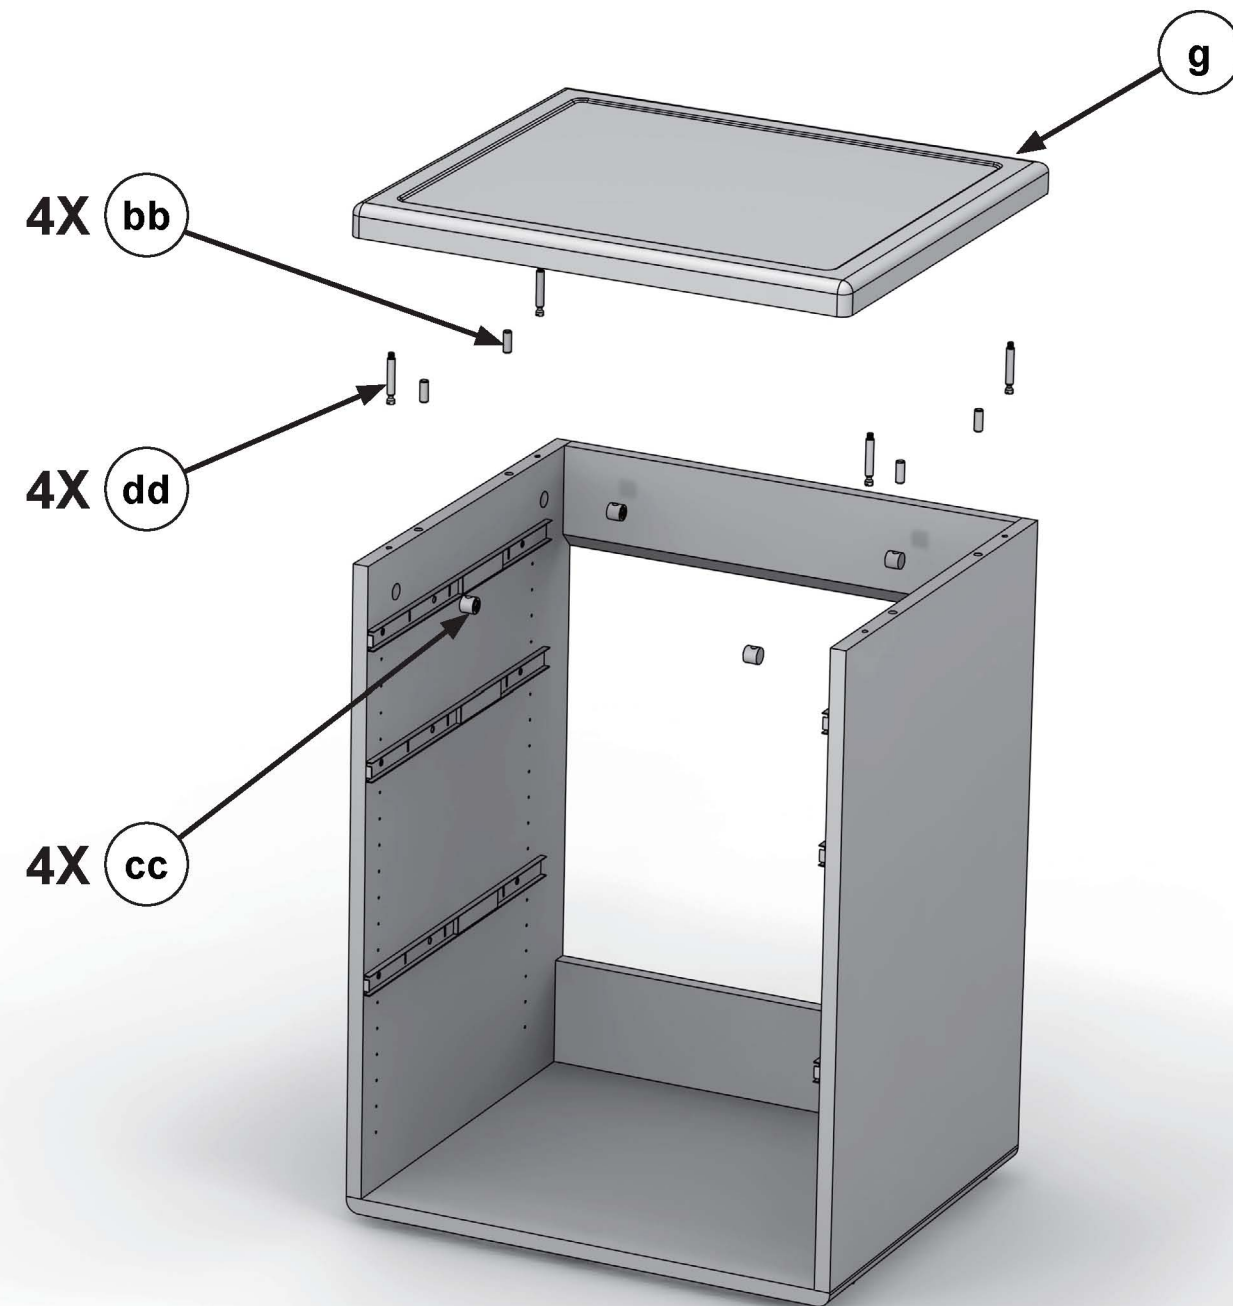

## CHOOSE AN INSTALLATION OPTION



### Option 1 - 4 Optional Feet

4 Feet are installed and the wall cleat may be used for added stability. (Feet Sold Separately)



### Option 2 - 2 Optional Feet

2 Feet are installed on the front of the cabinet and the wall cleat **MUST** be used. (Feet Sold Separately)





### Option 3 - Wall Hanging


The Cabinet is hung on the wall using the included wall cleat.

## STEP 4

### Option 1 and Option 2

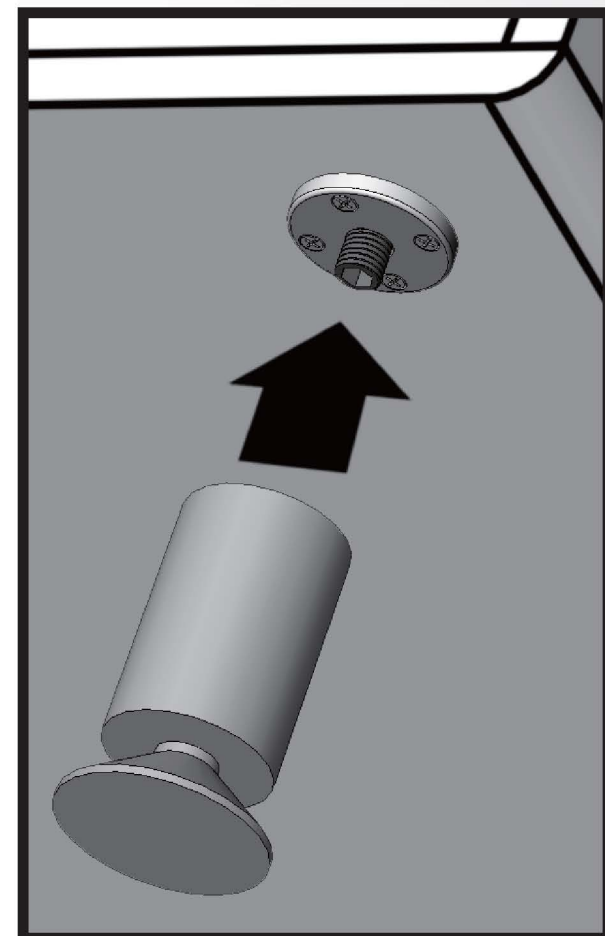
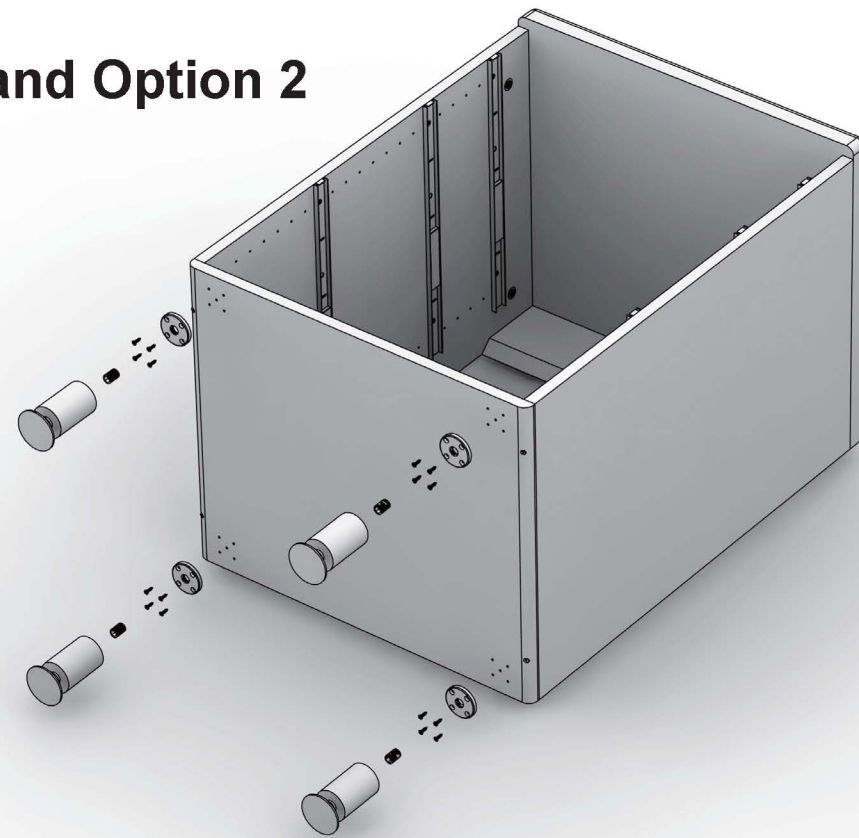


**NOTE:** Two Front Feet Only or Four Feet can be used with your cabinet. If installing optional feet, do so at this time.

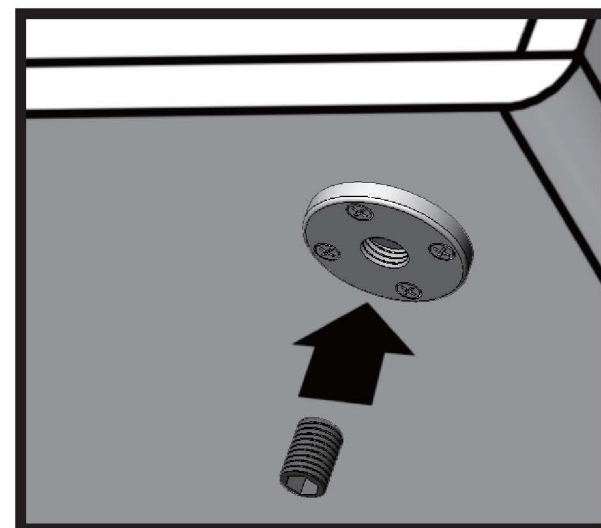


## STEP 4

### Option 2 and Option 3

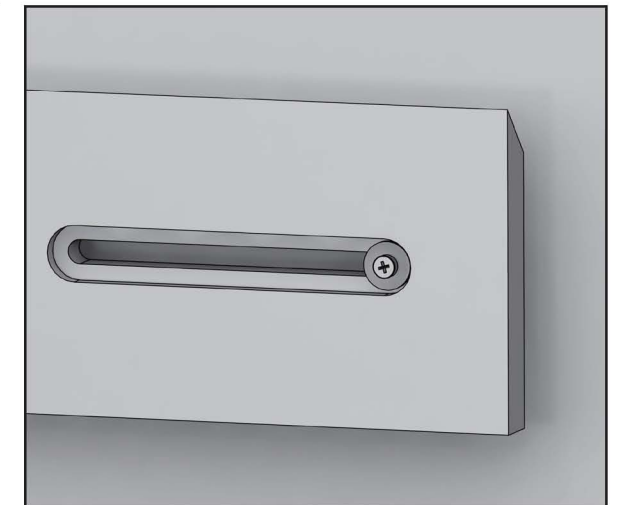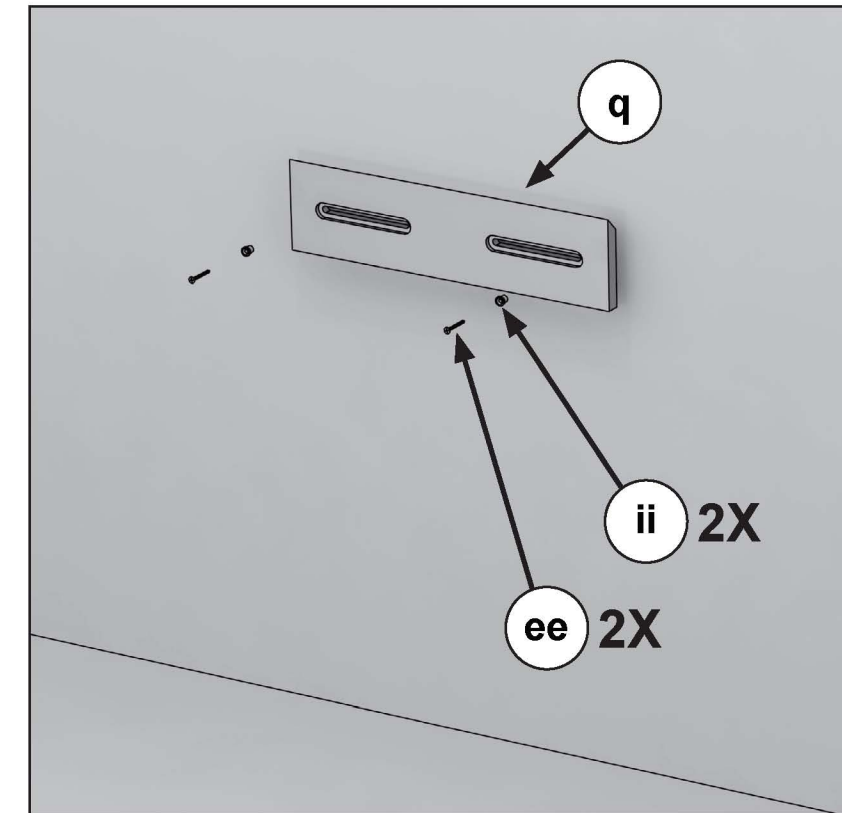

**NOTE:** When anchoring to dry wall, screw directly into studs or use included **WALL ANCHOR (ff)**. You may want to test the cabinet strength before loading.

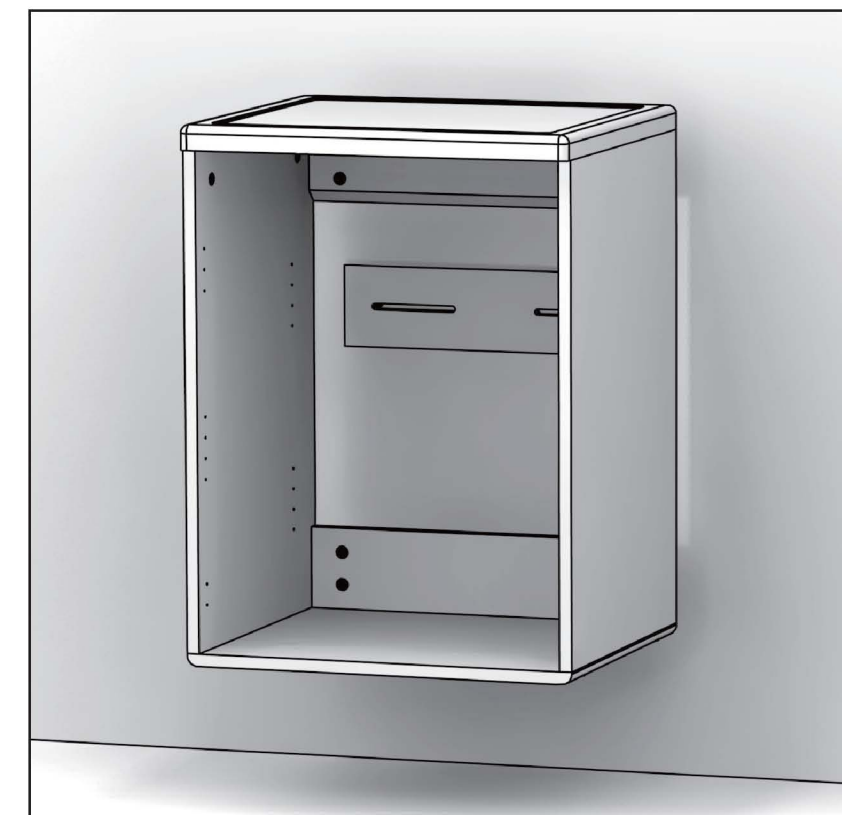


**NOTE:** For added stability, screw two additional screws into studs through the the top spanner (n) of the cabinet.




## STEP 5

### If Using Installation Option 1

**You may want to secure the finished unit onto the wall through the top spanners using wood / drywall screws for added stability. When anchoring to dry wall (with no studs), it is strongly recommended that you limit the weight in the cabinet to under 50 lbs. You may want to test the cabinet strength before loading.**

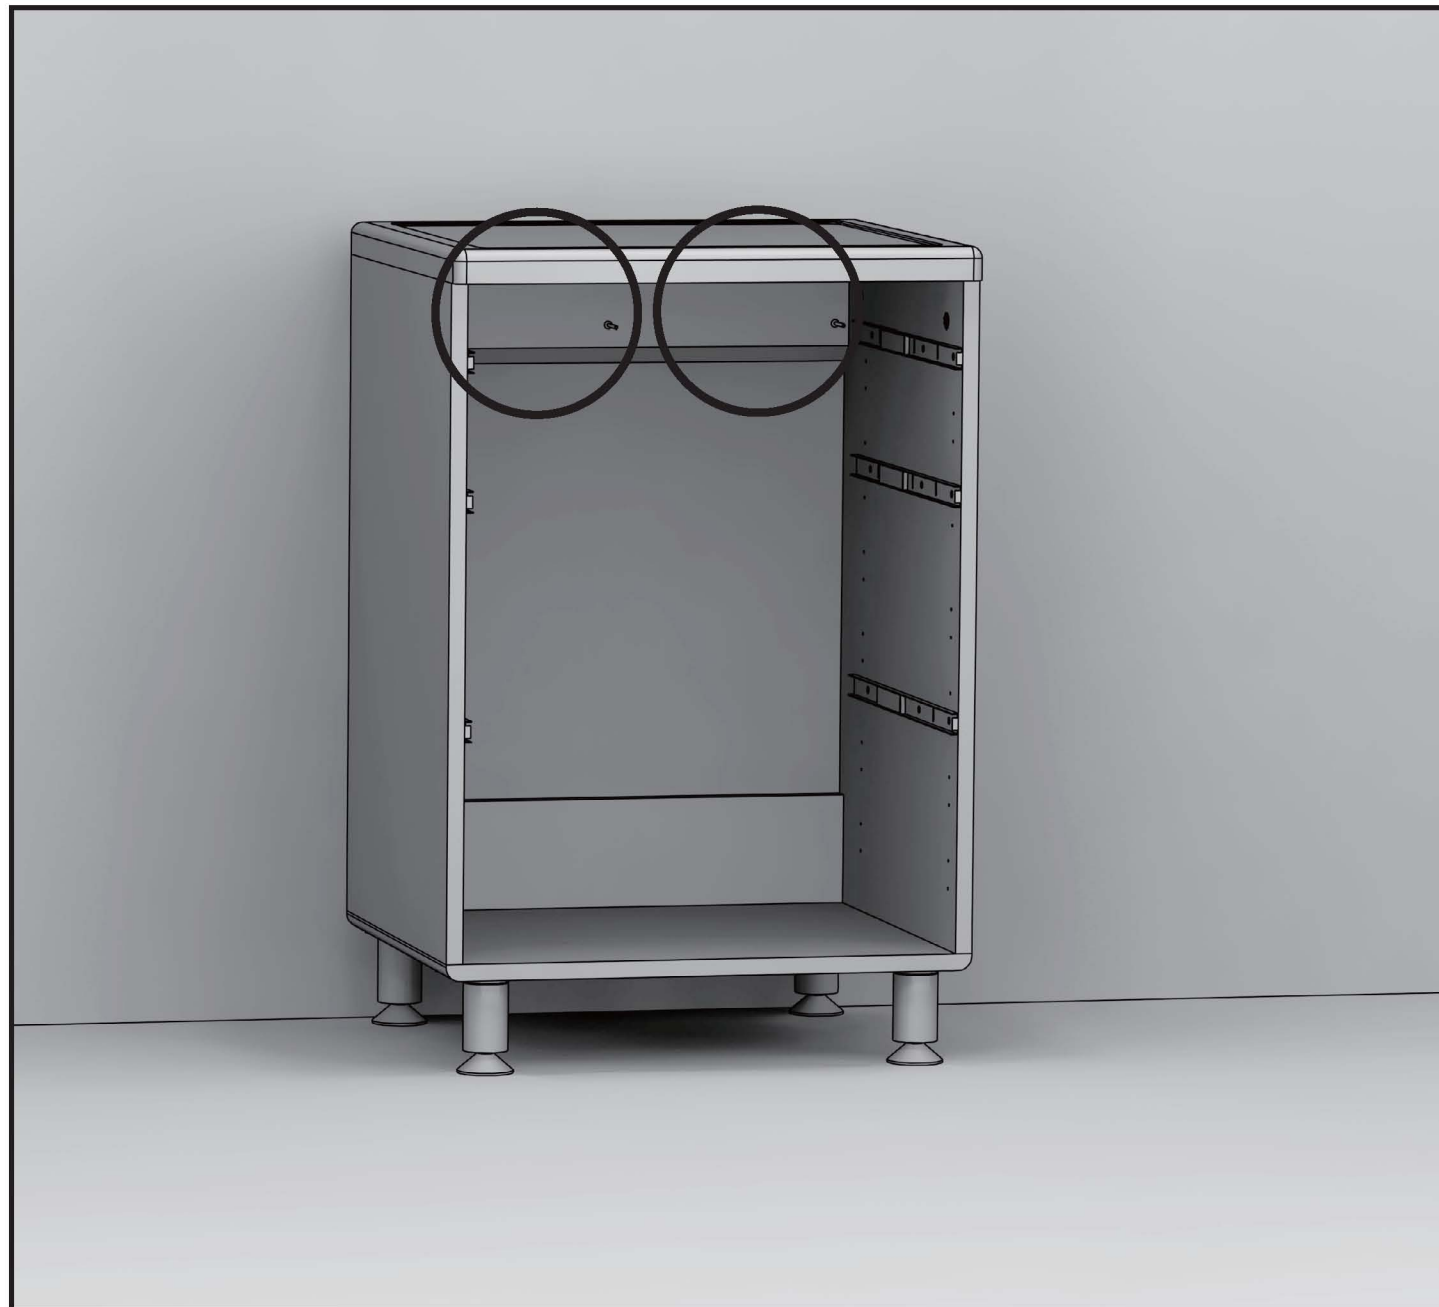



## STEP 6

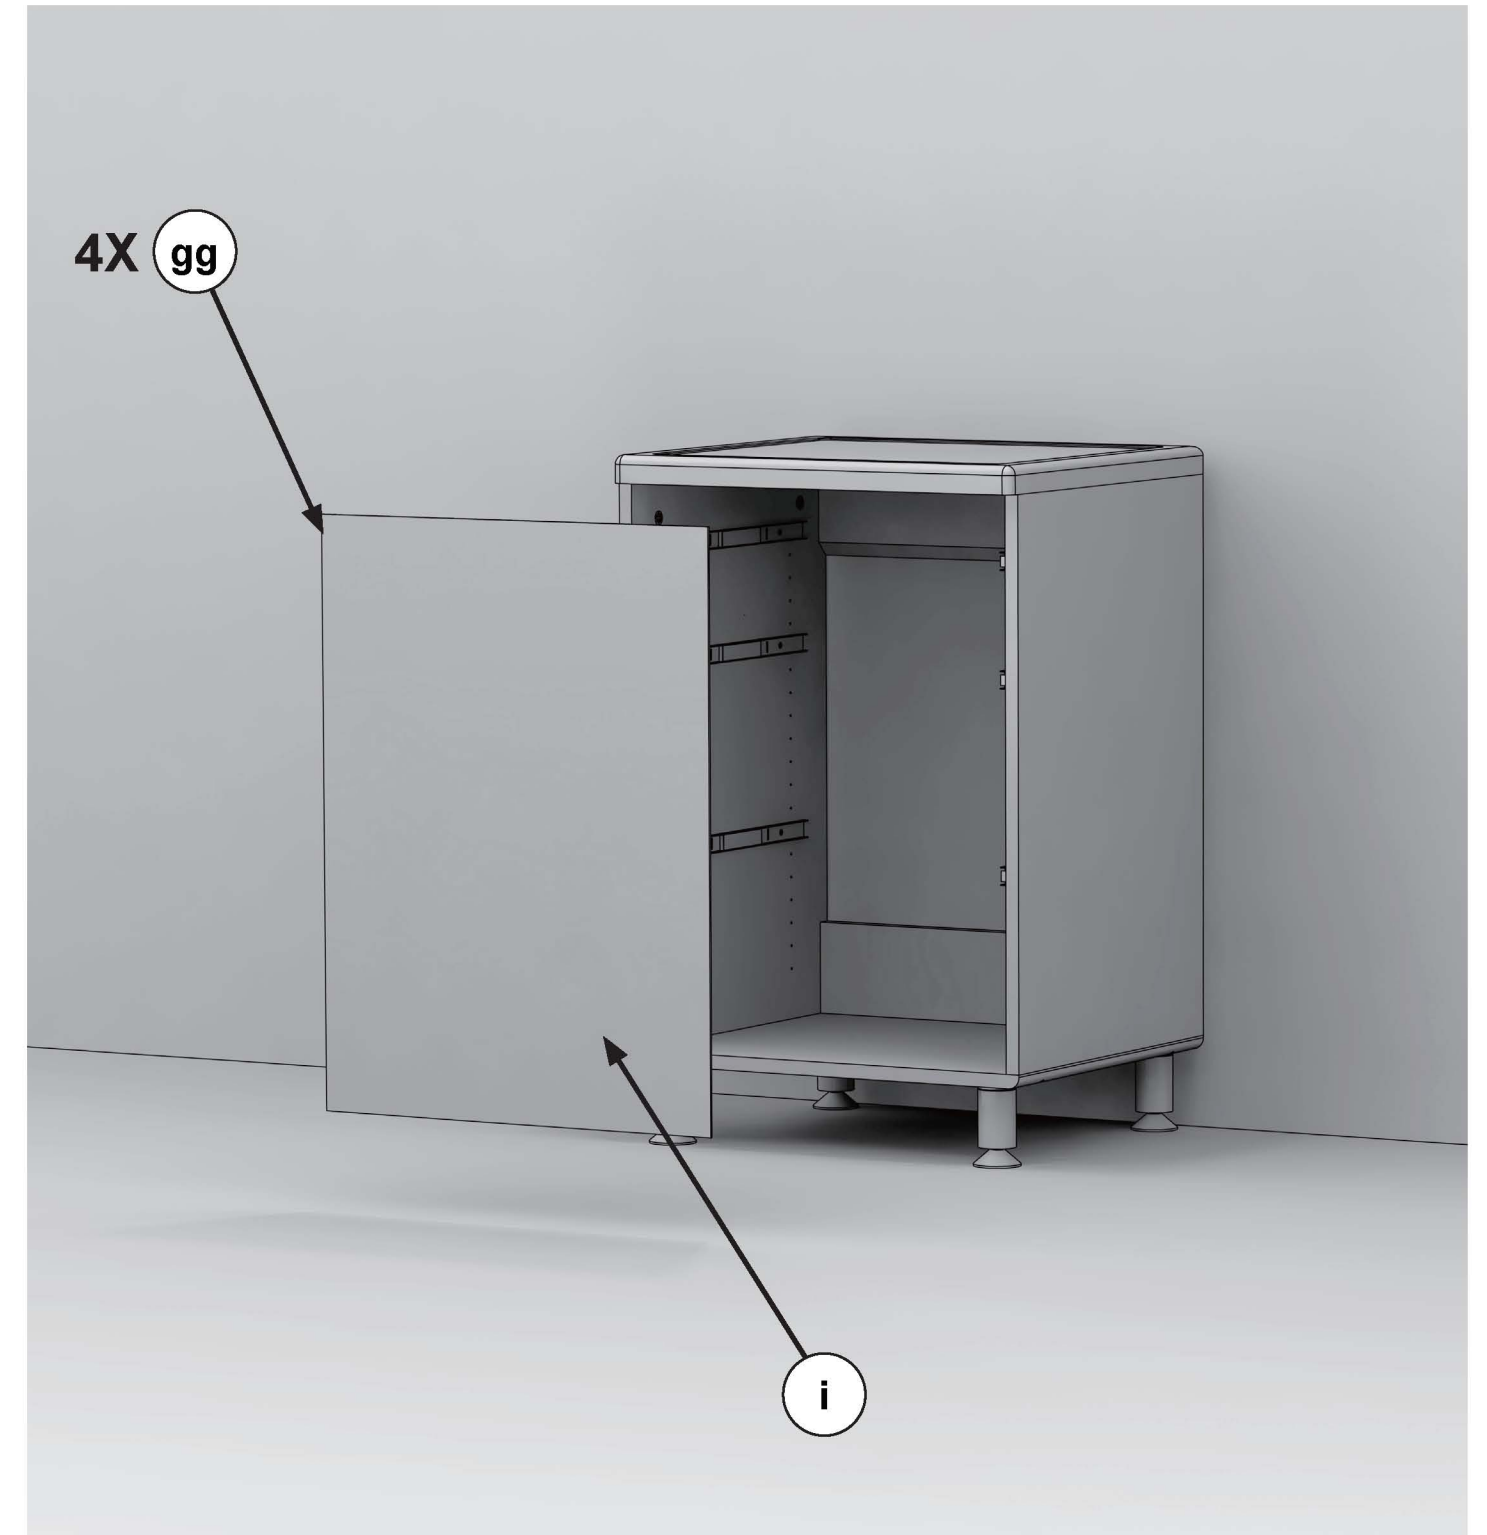


### NOTE:

**Use screws (gg) to fasten back panel to spanners AFTER the cabinet is correctly secured or hung on the wall. Back panel must be inserted one side first and then bent slightly to clear pre-installed drawer glides**

## STEP 7

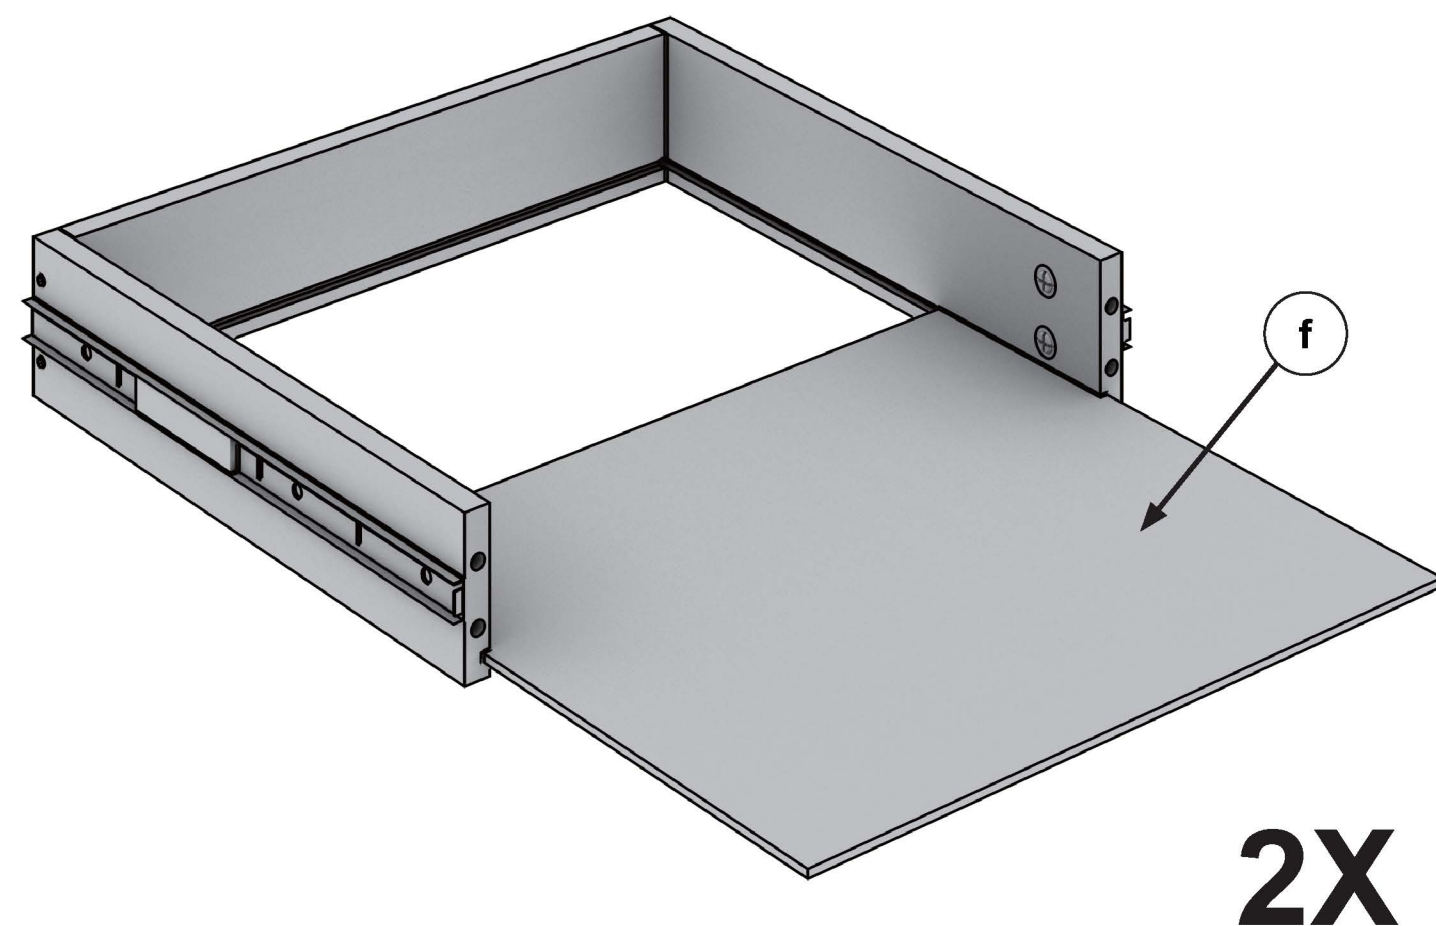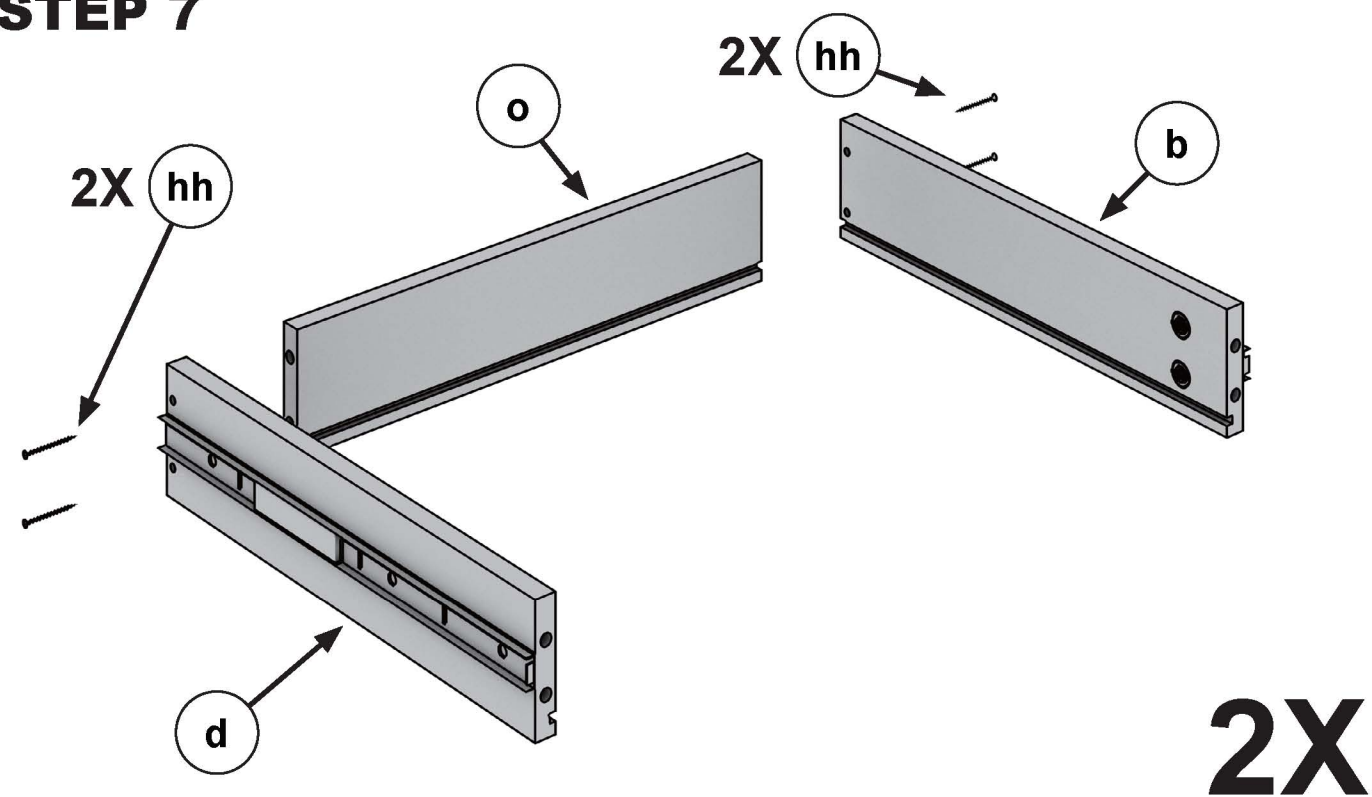

## STEP 8


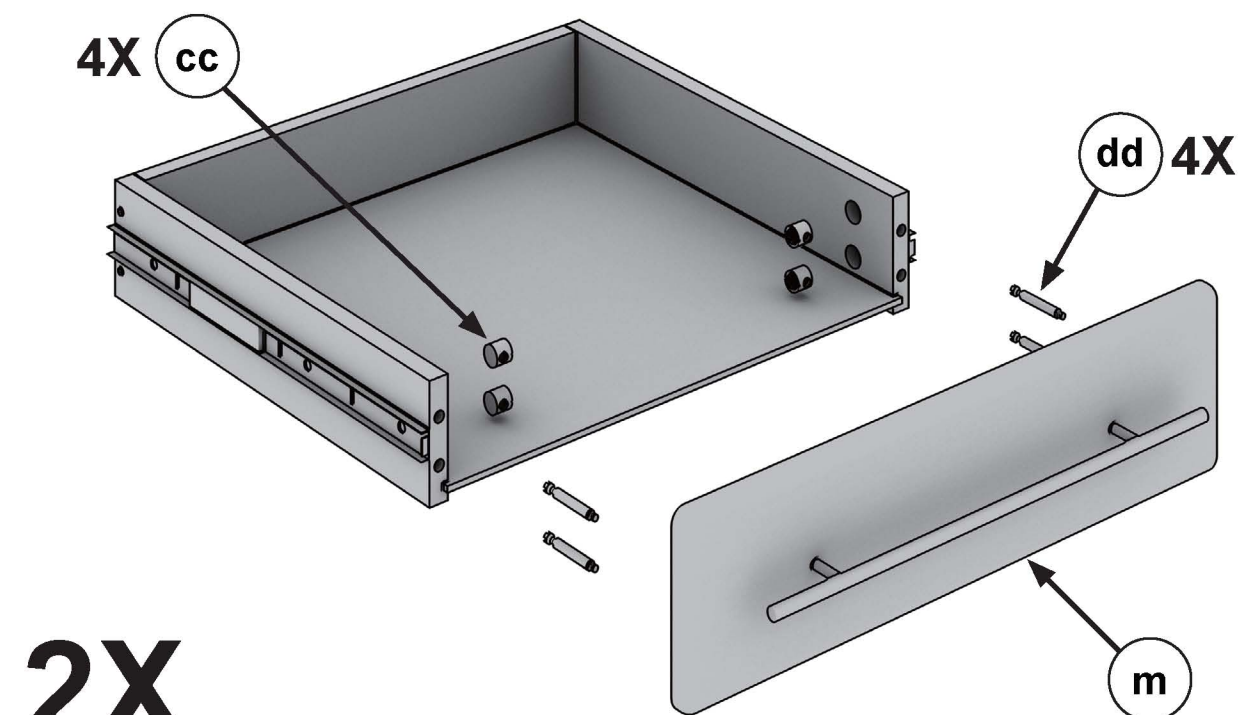


**NOTE: Optional Handles should be installed in this step. UltiMATE GARAGE recommends 450mm pulls for GA-04P mounted horizontally.**


GA-HA450C - Satin Chrome 2(pc) **or** GA-HA450B - Black Coated 2(pc)



## STEP 9

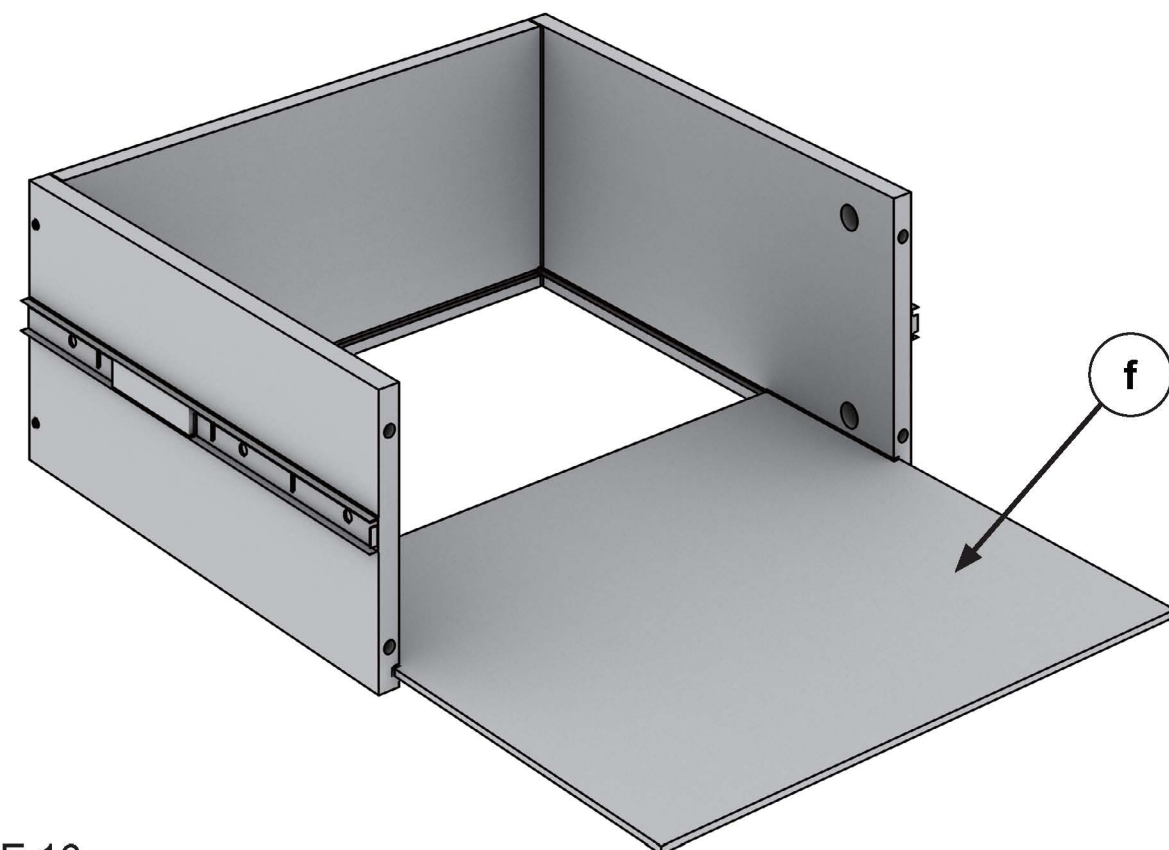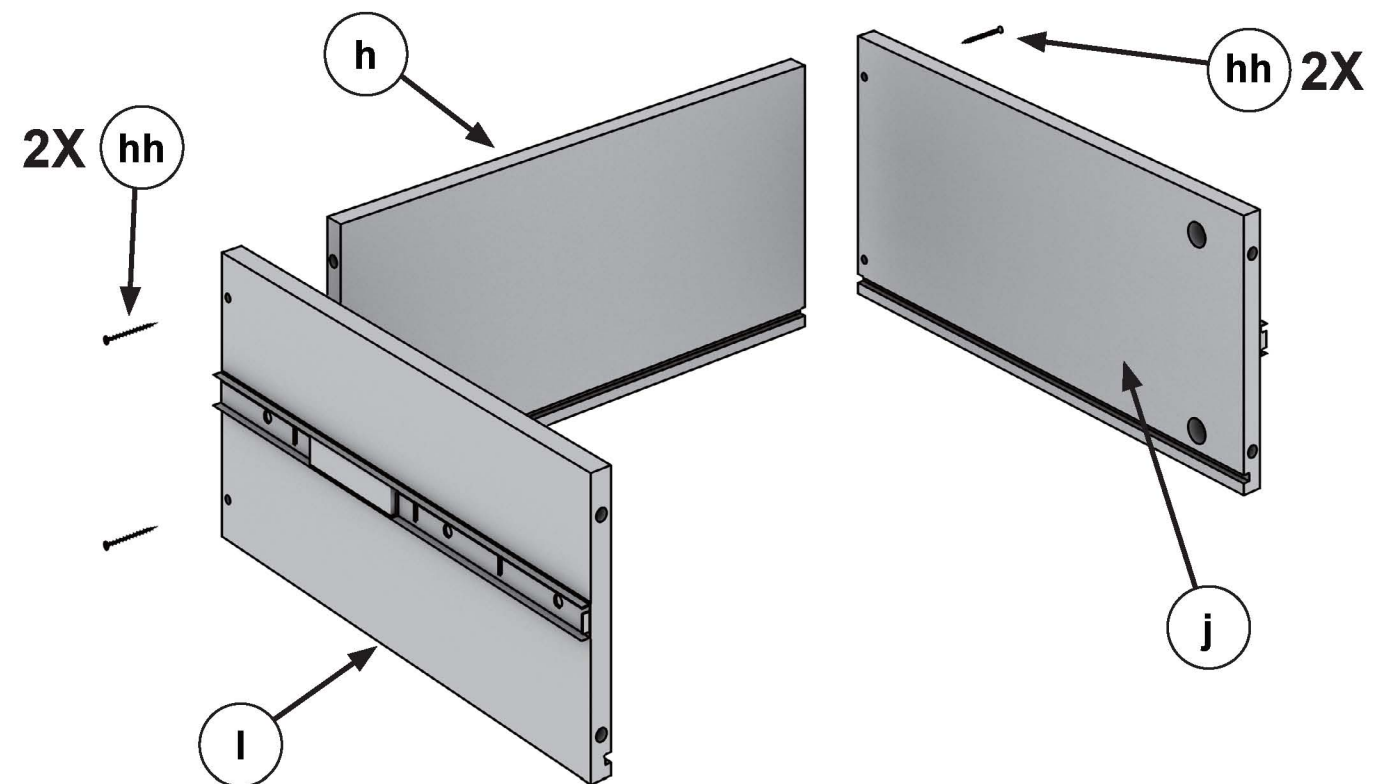

## STEP 10

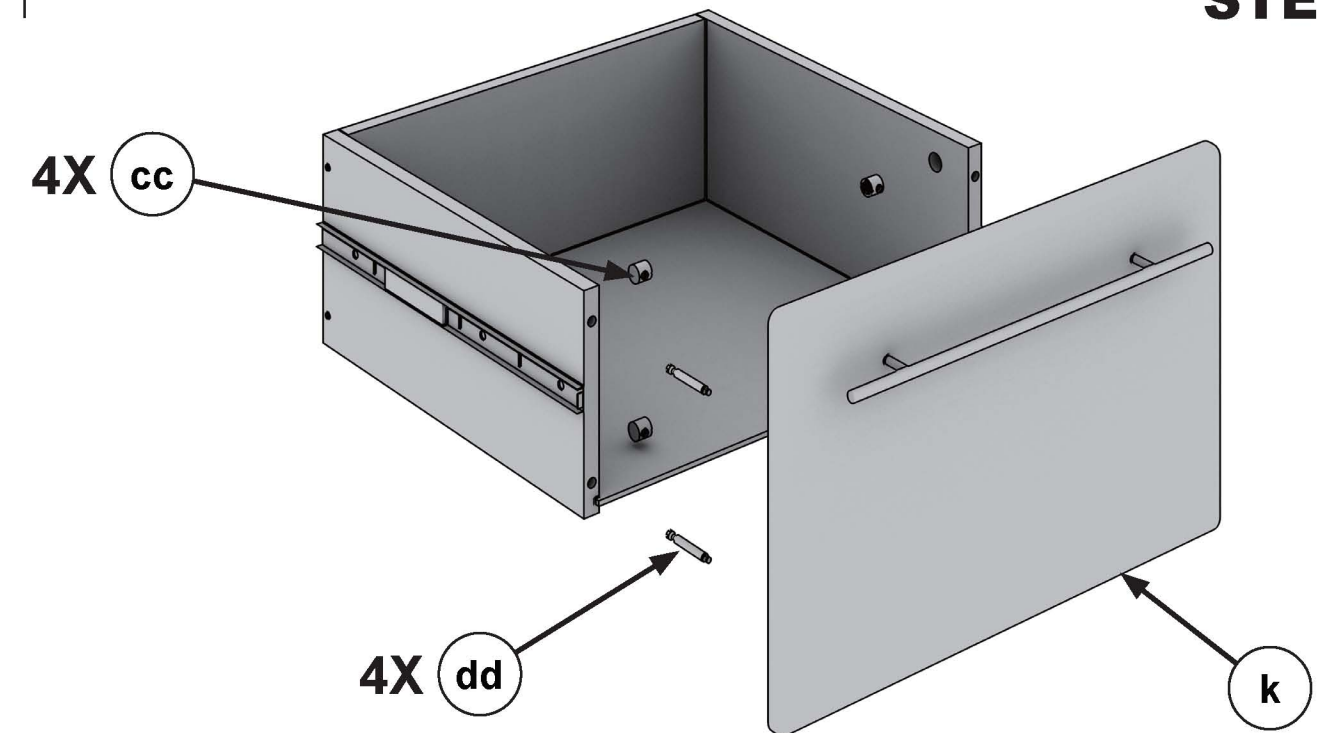

**NOTE: Optional Handles should be installed in this step. UltiMATE GARAGE recommends 450mm pulls for GA-04P mounted horizontally.**

GA-HA450C - Satin Chrome 2(pc) **or** GA-HA450B - Black Coated 2(pc)



**NOTE: Hold drawer at 45° angle and rotate gently into drawer glide.**