

INSTALLATION INSTRUCTION  
**4" Low Voltage - Step Baffle**  
HR-8411

WAC LIGHTING  
Responsible Lighting®

**SAFETY INSTRUCTION**

IMPORTANT: NEVER attempt any work without shutting off the electricity.



- Read all instructions before installing.
- For installation by a qualified electrician.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- To reduce the risk of fire, electrical shock and injuries to persons, turn off power at main switch before installing or modifying the system.
- Warning: (Risk of fire) do not install insulation within 3 inches of fixture sides, or junction box, or in a manner to entrap heat.
- Retain instructions for future maintenance reference.

**OVERVIEW**

Trims fit housings from the HR-8000 series. Housing type and trim selection will determine maximum wattage; consult catalog or spec sheet for compatibility.

**INSTALLING LAMP AND TRIM:**

1. From the rear of the trim, install the clear glass lens (supplied) followed by an MR16 lamp. The lamp is secured by pressing it into the "V" shaped spring while pushing downward.
2. Push socket on to lamp pins.
3. Pressing the springs into the hole, until the trim ring is flush against the ceiling.
4. When relamping or changing transformer, turn the fixture clockwise and pull out.

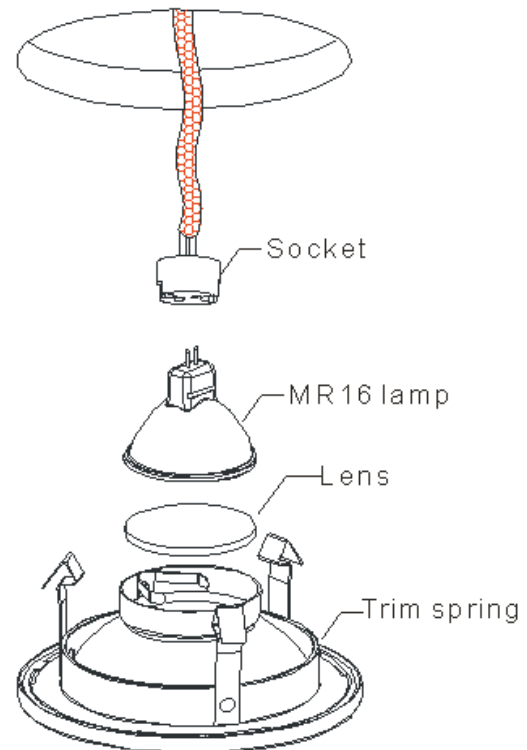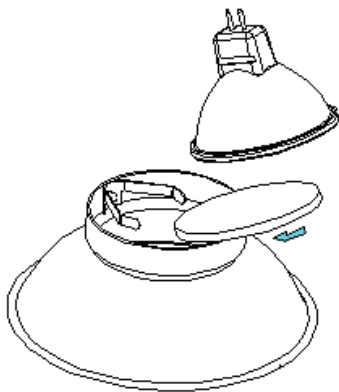

WAC Lighting  
www.waclighting.com  
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center  
44 Harbor Park Drive • Port Washington, NY 11050  
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center  
1750 Archibald Ave • Ontario, CA 91761  
Phone (800) 526.2588 • Fax (800) 526.2585