







# WYNDHAM COLLECTION

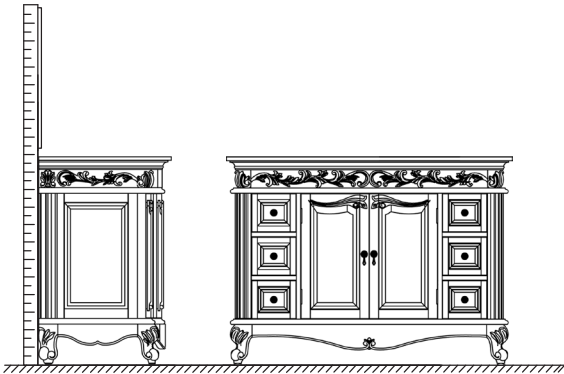


- Prior to installation, please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

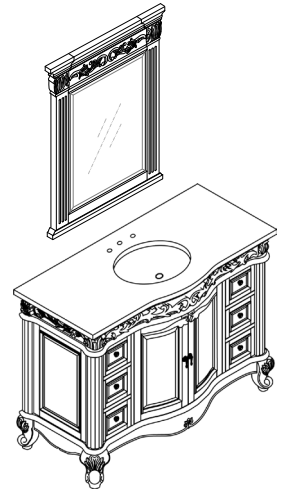

## PACKING LIST

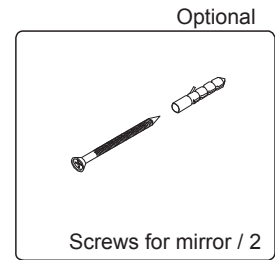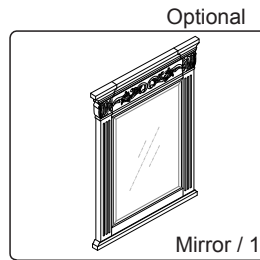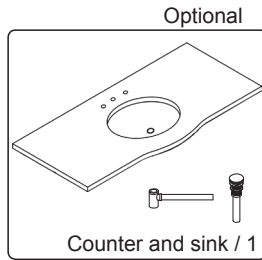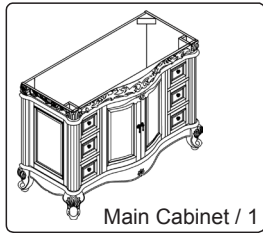


## REQUIRED TOOLS NOT IN BOX




Tape measure



Pencil




Electric Drill



Phillips Screwdriver



Adjustable Wrench



Spirit Level




Silicone sealant


WC-J233-48-SGL  
INSTALLATION

# WYNDHAM COLLECTION


## INSTALLATION INSTRUCTIONS

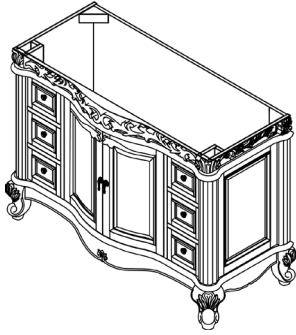


- 1 The cabinet is precut in the back for easy plumbing installation. For non-standard installations, installer must cut appropriately sized hole in back to accommodate.

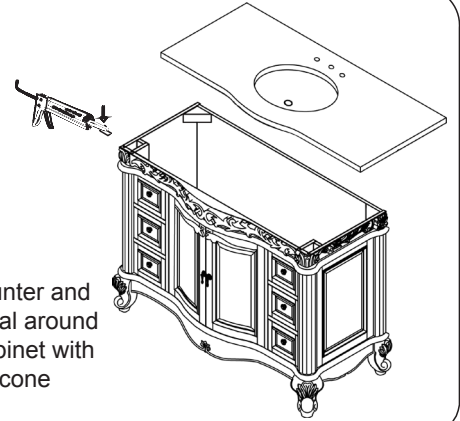

- 2 Install the counter and pop-up drain. Seal around the top of the cabinet with clear or white silicone sealant.

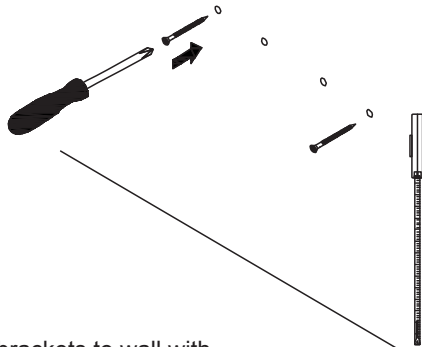

- 3 Attach mirror brackets to wall with supplied screws. Hang mirrors.

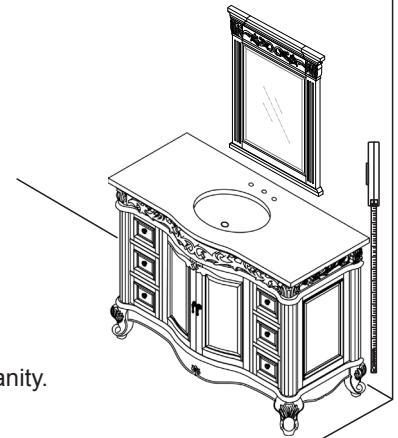

- 4 Enjoy your new vanity.

WC-J233-48-SGL  
INSTALLATION