INSTALLATION INSTRUCTIONS POP UP ASSEMBLY




Model No: 325, 324 & 326

Recommended Installation by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.


I. Remove drain PLUG (17) from FLANGE (18). Place FLANGE (18) and white WASHER (19) through sink drain opening. (Clear silicone may be used in place of white washer.) From bottom side of sink, place cone shaped rubber WASHER (20) onto FLANGE (18) and slide up against sink bottom. Note: Cone portion of WASHER (20) to face upward. Next slide on clear flat WASHER (21) and secure with flange NUT (22). Place clear WASHER (23) into drain BODY (24) and thread onto FLANGE (18).

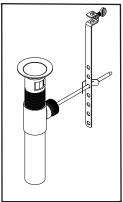


**Adjust drain BODY (24) alignment, as required, by loosening flange NUT (22), rotate assembly for alignment of ball ROD (29) to pop-up ROD (26) and re-tighten flange NUT (22).


Apply thread sealant to TAILPIECE (25) and attach to drain BODY (24). Attach TAILPIECE (25) to p-trap drain (not included). See Figure 1.

2. Place drain PLUG (17), oriented as shown, with hook away from faucet, into FLANGE (18). Insert pop-up ROD (26) through spout and secure to STRAP (27), approximately I" from end of ROD (26), with SCREW (28). Insert ball ROD (29) into the drain's rod opening, secure with ball rod NUT (30). Adjust the rise of the PLUG (17) through elevation holes in STRAP (27). Use CLIP (31) to secure ball ROD (29) to STRAP (27). Adjust ball ROD (29) and pop-up ROD (26) so drain will open and close properly. See Figure 2.

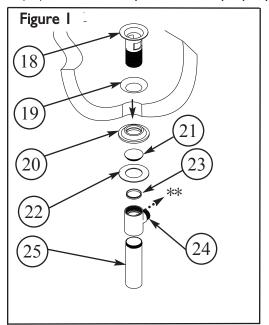

Note: Extension Kit (# 3251) for ball ROD (29) and/or pop-up ROD (26) available (sold separately). See Figure 3 for nominal dimensions. (Extension Kit connection must not interfere with CLIP (31), cutting item (29) and/or (26) may be required.)

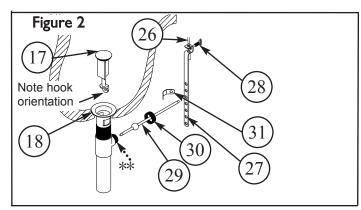

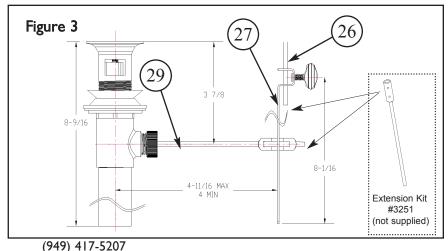

Santa Ana, Ca. 92705 6/17/2011 www.brasstech.com

BRS-325