


Submitted Model No.: \_

Specific Features:

**RP14979-LHP** 

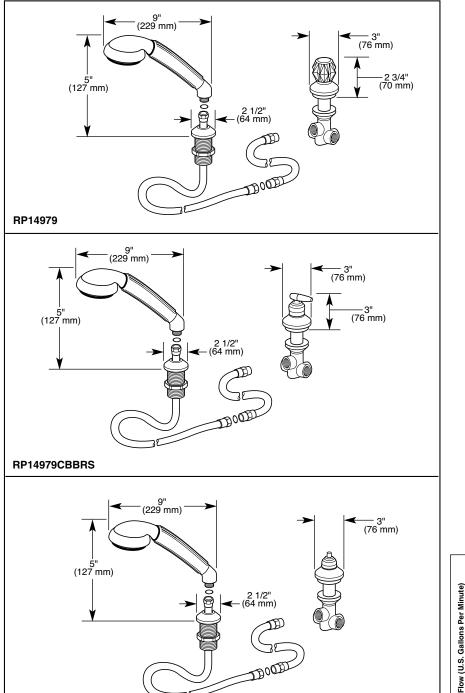

# **ROMAN TUB** HAND HELD **SHOWER**


- Roman Tub Ledge Mount Hand Held Shower
- Ledge or Wall Mount Transfer Valve

### COMPLIES WITH:

Indicates ADA compliance to CABO/ANSI A117.1-1992 GSA A-A-237

#### **STANDARD SPECIFICATIONS:**

- Roman tub ledge mount hand held shower.
- Ledge or wall mount transfer valve for maximum 1 3/4" (44 mm) deck thickness.
- Solid fabricated brass body.
- 69" (1753 mm) flexible hose.
- Clear knob handle with arrow button, brass lever handle or LHP-Less Handle Program. See available handle options on back.
- Control mechanism shall be of the rotating cylinder type with stainless steel plate and 180° rotation, with replaceable non-metallic seats operating in stainless steel lined sockets.
- All operating parts shall be replaceable from the top.
- 1/2"-14 NPSM threaded female inlets and outlets.

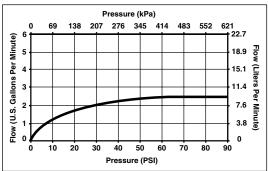

Delta reserves the right (1) to make changes in specifications and materials, and (2) to change or discontinue models, both without notice or obligation. Dimensions are for reference only.


Standard Features	RP14979	RP14979-ABLHP	RP14979CBBRS	RP14979-CBLHP	RP14979-LHP	RP14979PB	RP14979-PBLHP	RP14979-WHLHP
Washerless	•	•	•	•	•	•	•	•
Ledge or Wall Mount Transfer Valve for Maximum 1 3/4" (44 mm) Deck Thickness	•	•	•	•	•	٠	•	٠
Clear Knob Handles with Arrow Buttons (H51/H51PB)	•					٠		
Brass Lever Handle (H52/A72PB)			G					
Less Handle Program See Handle Kit Options*		•		•	•		•	٠
Chrome Finish	٠							
Antique Brass Finish		•						
Chrome and <i>Brilliance</i> <sup>™</sup> Polished Brass Finish			•	٠				
Brilliance <sup>™</sup> Polished Brass Finish						٠	٠	
White Finish								•

DO NOT HOOK UP DIRECTLY TO SUPPLY LINES. MUST BE INSTALLED WITH ANOTHER VALVE IN ORDER TO CONTROL TEMPERATURE.

Plumbing codes in your area may require installation of a backflow prevention device that meets the requirements of ASSE 1001\*, 1011 or 1014\*. For ASSE 1011 devices, refer to step 2B in the illustrated instructions that accompanies each handshower for backflow protection.


\* Note: An ASSE 1001 device must be installed at least 6 inches above the level of the highest usage of the handshower and an ASSE 1014 device cannot be subjected to more than a 2-foot head of pressure.

• Bath waste assemblies and bath accessories are available separately.

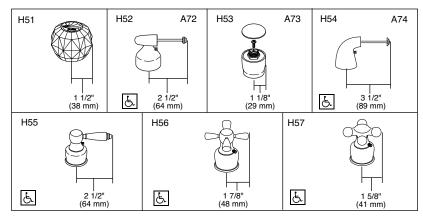

#### \*Available LHP Handle Options

## \*Available LHP Handle Accent Options

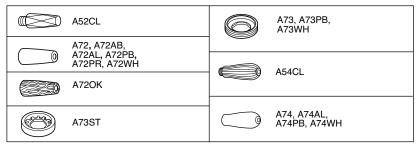



Indianapolis, Indiana 46280 A Division of Masco Corporation of Indiana © 2001 Masco Corporation of Indiana