


OXFORD INSTALLATION GUIDE





OXFORD INSTALLATION GUIDE

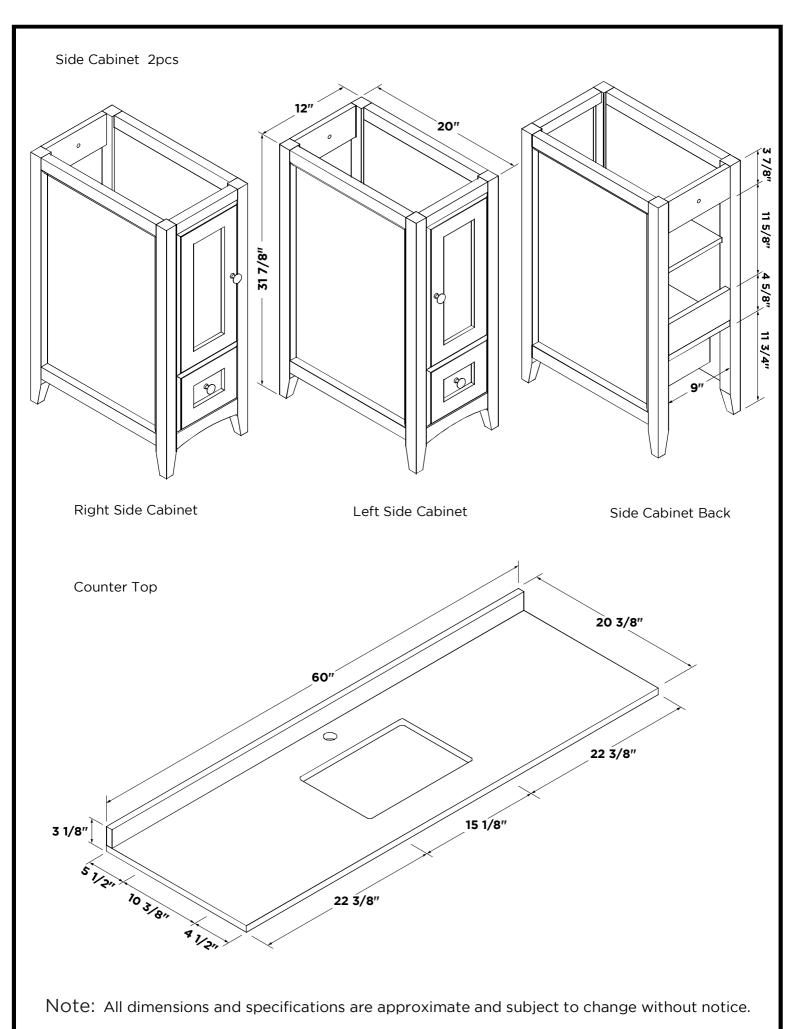


MIRROR INSTALLATION


- Level the mirror bracket and then mark the installation position
- 2 Drill the installation holes
- 3 Insert the plastic plug

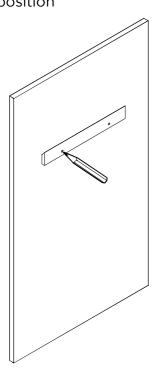


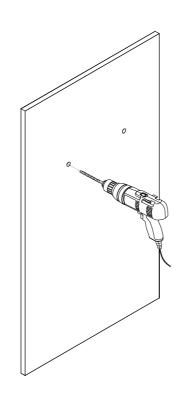


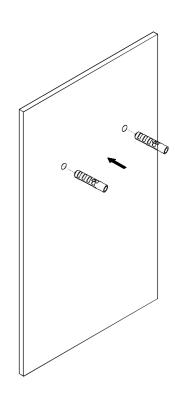


- 4 Fix the mirror bracket
- **5** Hang up the mirror

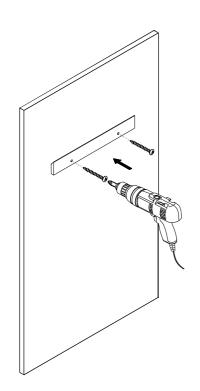


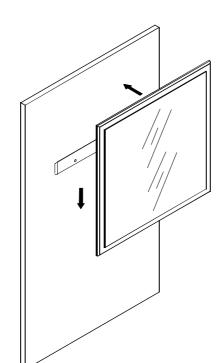


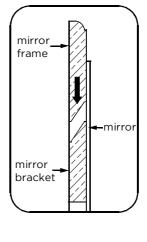


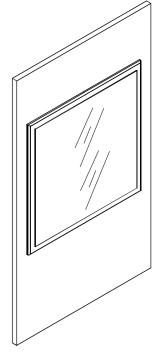

OXFORD INSTALLATION GUIDE

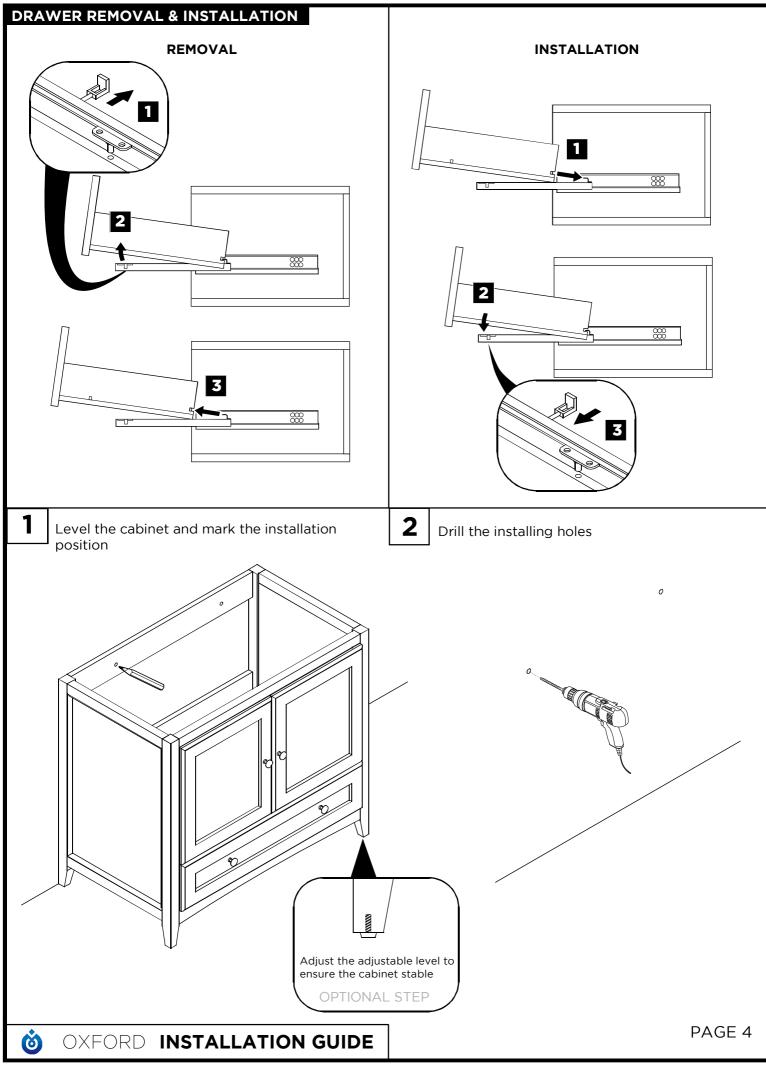

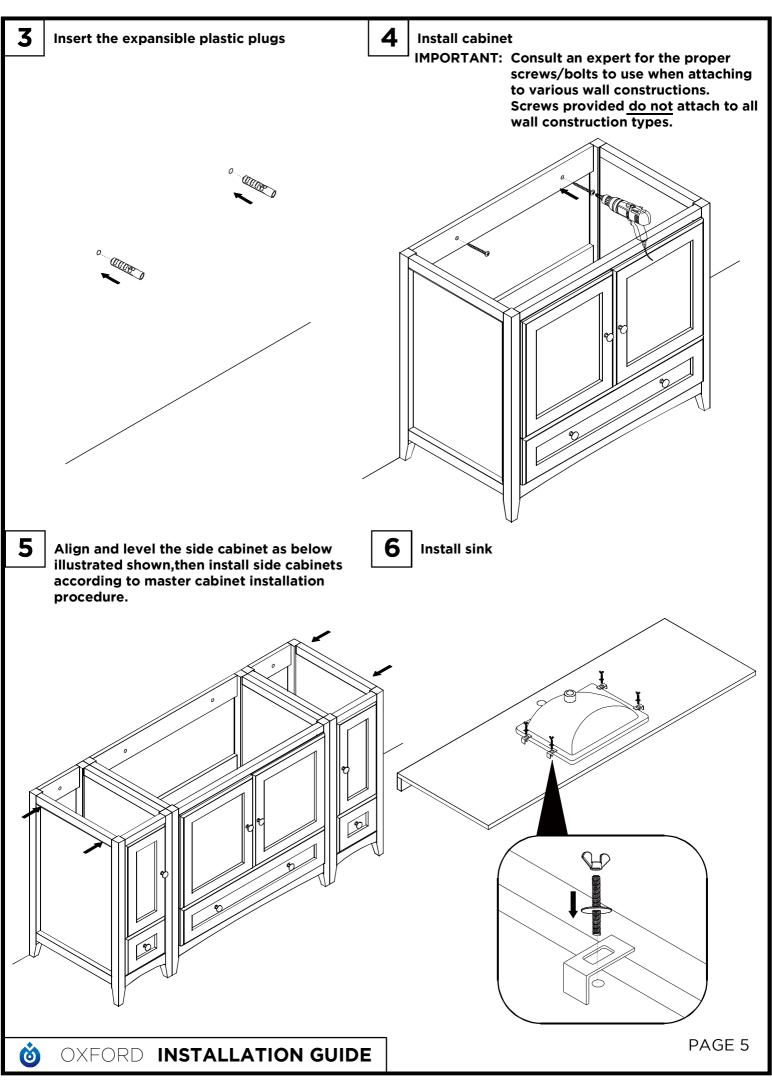


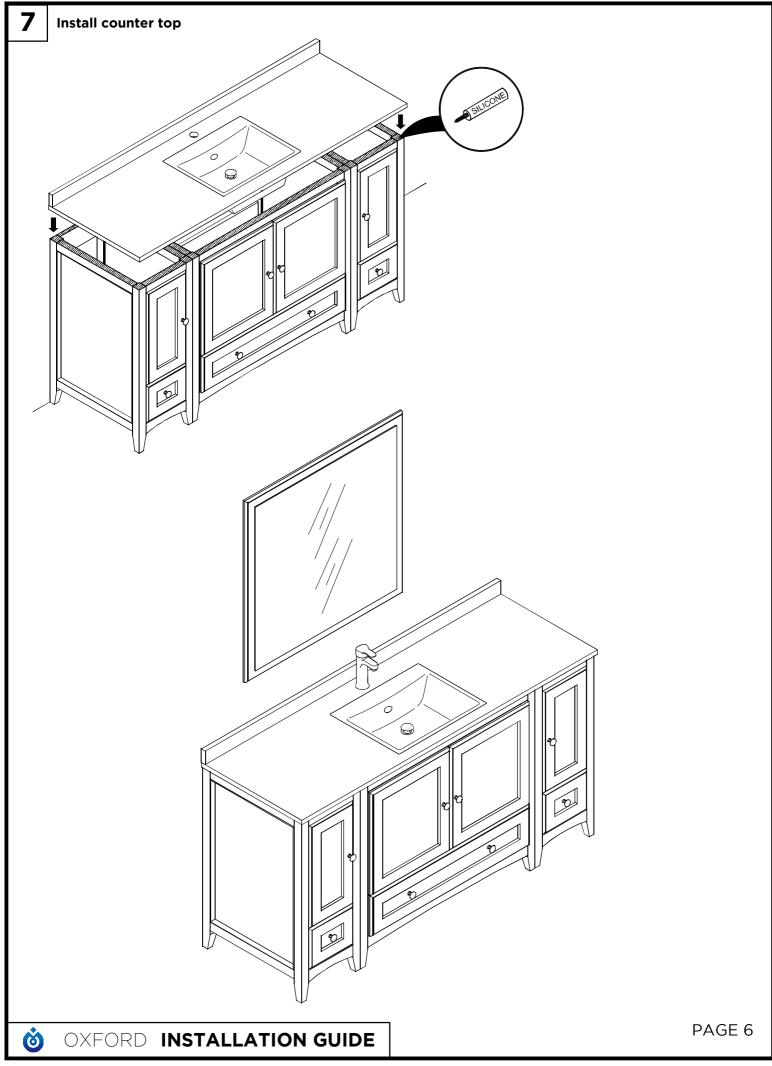

P-TRAP AND POP-UP


INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

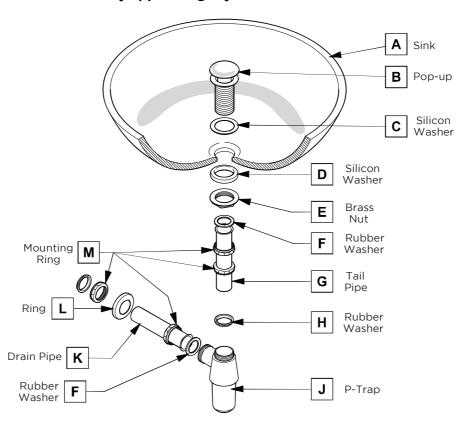


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

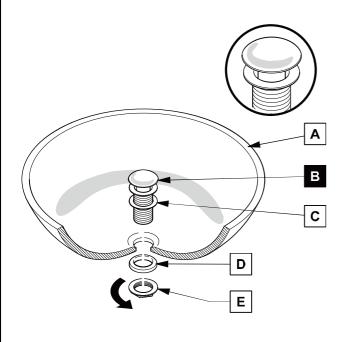


FOR SINKS WITH OVERFLOW

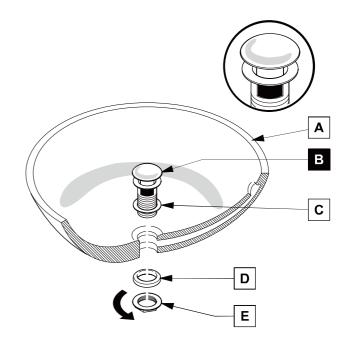


PAGE 7



OR

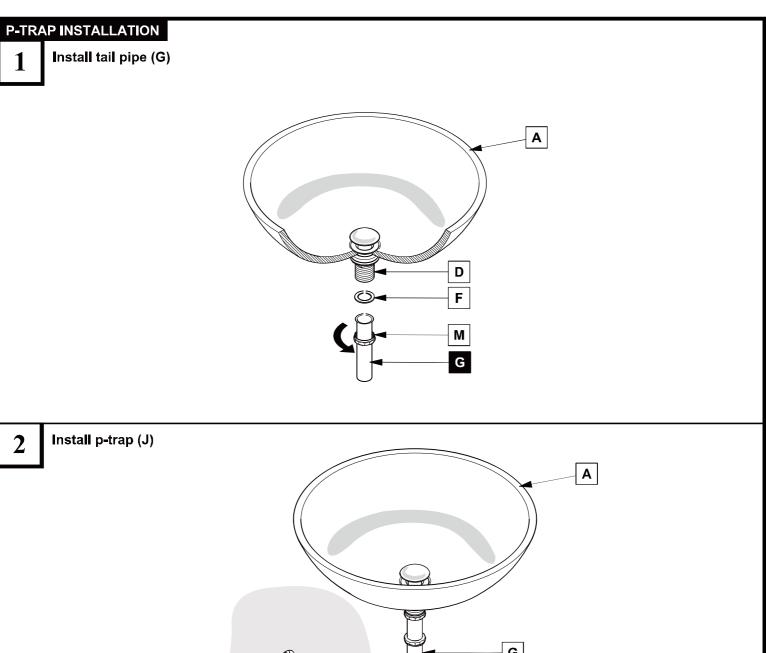

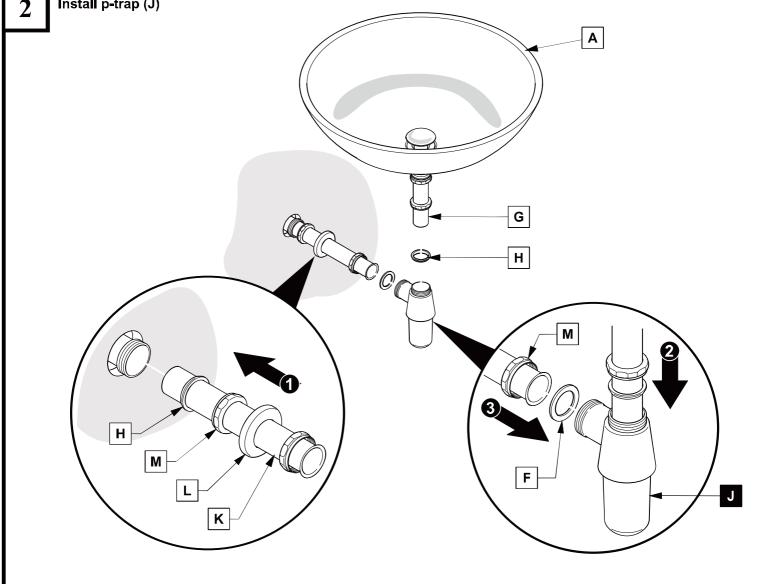

OXFORD INSTALLATION GUIDE

Ó