# **Home Care Technical Specification**

# SecureMount Anchor

## SMA1002CH

### **Stock Numbers:**

 SMA1002CH –SecureMount Anchors
Chrome Finish
2 Anchors

### Materials:

SecureMount Anchor mounting plate is made of aluminum.

#### SecureMount Anchor guide and anchor are made of POM.

### **Compliance:**


- CSI SecureMount Anchors meet or exceed the applicable requirements of the following standards: ADA ANSI A117.1 ASTM F446 CSA B45 CSA B651
- For use only when securely installed in approved substrates\* for persons **no more than 300lbs**.

\*Requires a 3½" space behind the wall and works in the following substrates

- 1/2" or 5/8 " Dry Wall
- 1/2" or 5/8 " Dry Wall with Tile
- 1/2" or 5/8 " Dry Wall with Marble
- 1/8" or 1/4 " Fiberglass Tub Surround



### **Dimensions:**

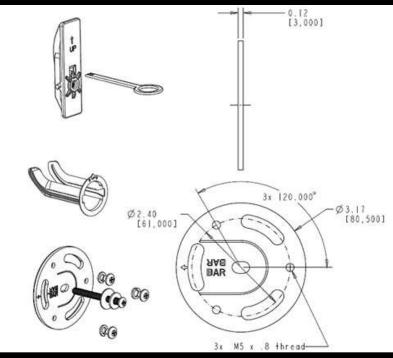

#### **Installation Instructions:**

Direction for wall mounting installation:

- 1. Position grab bar on wall in desired location and mark around the outside of the flanges. 2. One at a time, center the mounting plate within the marked flanges, and mark the center
  - One at a time, center the mounting plate within the marked flar hole for drilling.
- 3. Drill one 11/4" hole at each mounting location.
- 4. Insert guide sleeves into each hole in the w all. (Note: UP indicator must alw ays point up regardless of grab bar orientation)
- 5. Connect pull tab to the secure mount anchor.
- 6. With pull tab up, insert the anchor all the way into the hole in the wall.
- 7. Pull back on the pull tab, and disconnect it from the anchor.
- 8. Place mounting plate over the hole and secure with the anchor screw, and flat and rubber w ashers. (Note: Bar indicators should be facing in, align arrows)
- 9. Align the grab bar flanges to the secure mount anchor and secure w ith flange screws and split lock w asher.

Directions for stud mounting installation:

- 1. Position grab bar on w all in desired location and mark around the outside of the flanges.
- 2. Determine stud center and drill one 1/8" pilot hole at each location.
- 3. Install wood screw supplied with grab bar.
- 4. Install the 3 additional wood screws through the grab bar flange into the elongated mounting plate slots.

Stock Number:\_\_\_\_\_ By Creative Specialties SecureMount Anchor

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

 $Copyright\,Creative\,SpecialtiesInternational$ 

Literature #BA1387